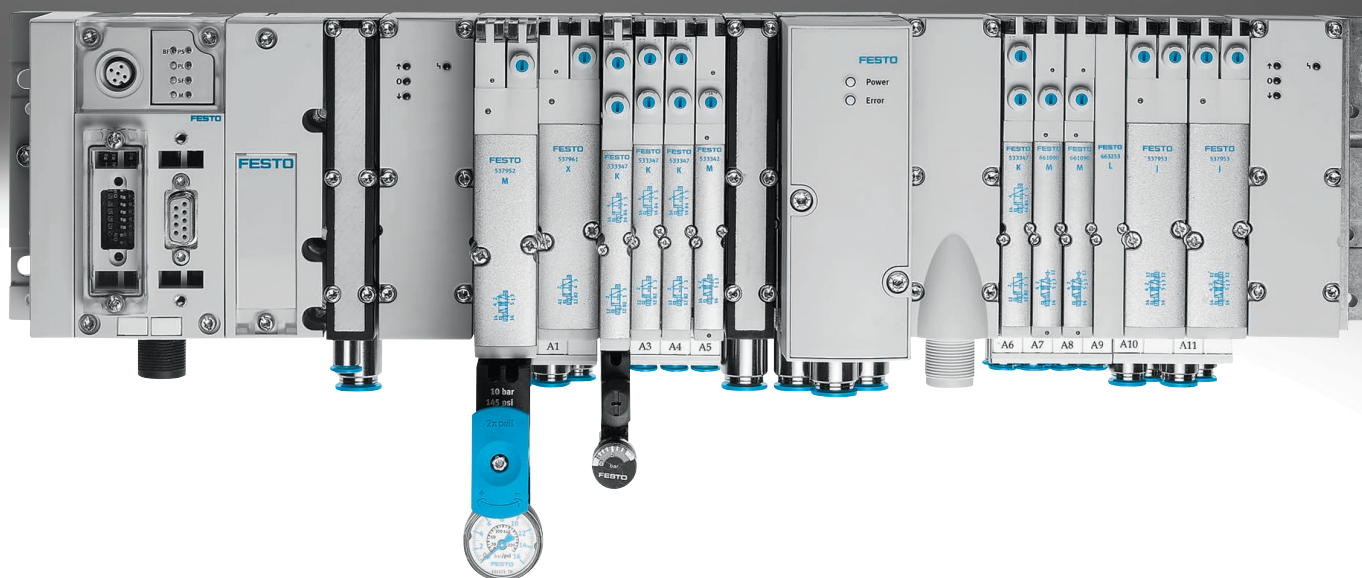
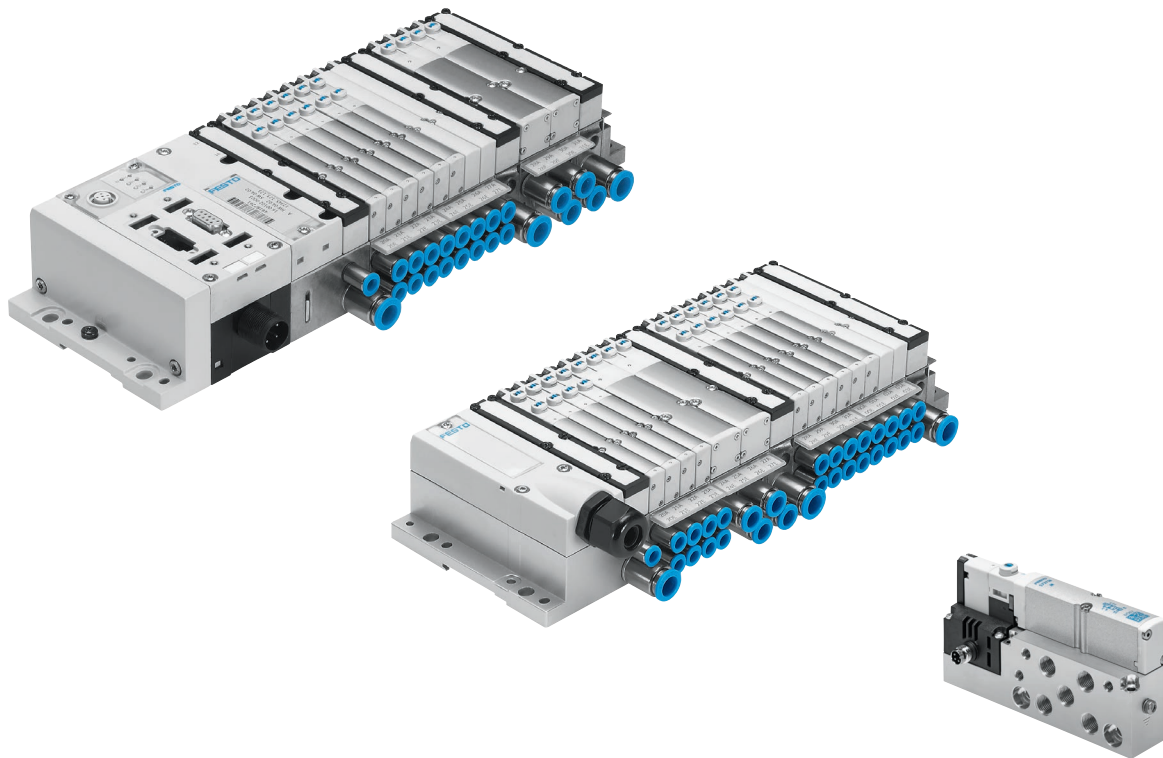


Valve terminal MPA-S

FESTO



Key features



Innovative

- Flat, high-performance valves in sturdy metal housing
- MPA1: flow rates up to 360 l/min
- MPA14: flow rates up to 670 l/min
- MPA2: flow rates up to 850 l/min
- Standardised from the individual valve to the valve terminal with multi-pin plug, AS-Interface, CPI and fieldbus connection and control block
- Dream team: fieldbus valve terminal suitable for electrical peripherals CPX. This means:
 - Forward-looking internal communication system for actuating the valves and CPX modules
 - Diagnostics down to the individual valve
 - Valves can be actuated with or without (standard) separate electrical circuits
 - Also available as interface for CPX-AP-A

Versatile

- Modular system offering a range of configuration options
- Expandable with up to 128 solenoid coils
- Conversions and extensions possible at a later date
- Further sub-bases can be expanded using just three screws, sturdy separating seals on metal separator plates
- Possible to integrate innovative function modules
- Manual regulators, rotatable pressure gauges
- Proportional pressure regulator
- Air supply can be extended via additional pressure zones with supply plates
- Wide range of pressures –0.09 ... 1 MPa
- Wide range of valve functions
- Safety function with switchable pilot air

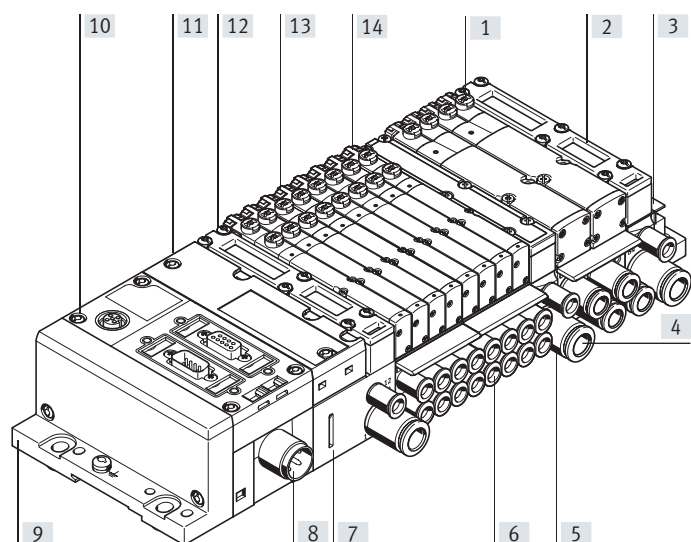
Reliable

- Sturdy and durable metal components
 - Valves
 - Sub-bases
 - Seals
- Fast troubleshooting with LEDs on the valves and diagnostics via fieldbus
- Extensive operating voltage range $\pm 25\%$
- Easy to service thanks to replaceable valves and electronic modules
- Manual override either non-detenting, detenting or protected against unauthorised activation (concealed)
- Durable thanks to tried-and-tested piston spool valves
- Large and durable labelling system, suitable for barcodes

Easy to install

- Ready-to-install and tested unit
- Reduced selection, ordering, installation and commissioning costs
- Solid wall mounting or DIN rail mounting

Key features



- [1] Safe operation:
Manual override, non-detenting/
detenting or concealed
- [2] Space-saving:
Flat valves and flat plate silencer
- [3] Flexible:
64 valve positions/128 solenoid
coils (fieldbus control)
24 valve positions/24 solenoid
coils (multi-pin control)
- [4] Practical:
Sturdy metal thread or pre-assem-
bled push-in fittings
- [5] Modular:
Supply plates for creating pres-
sure zones as well as numerous
additional exhaust and supply
ports
- [6] Wide range of valve functions
- [7] Convenient: large inscription
labels
- [8] Reliable:
Operating voltage range $\pm 25\%$,
outputs and valves can each be
switched off separately
- [9] Quick to mount:
Directly using screws or on a DIN
rail, automatic earthing
- [10] CPX diagnostic interface for hand-
held devices (channel-oriented
diagnostics down to the individual
valve)
- [11] Straightforward electrical connec-
tion
Multi-pin connection, fieldbus
interface
Control block, AS-Interface, CPI
- [12] Pneumatic interface to CPX or CPX-
AP-A
- [13] Width 10 mm, 14 mm and 20 mm
- [14] Reduced downtimes: two-colour
on-site LED diagnostics

Key features

Equipment options

Valve functions

- | | | | |
|---|--|--|---|
| <ul style="list-style-type: none"> • 5/2-way valve, monostable • 5/2-way valve, double solenoid • 2x 3/2-way valve, normally open • 2x 3/2-way valve, normally closed • 2x 3/2-way valve, 1x normally open, 1x normally closed | <ul style="list-style-type: none"> • 5/3-way valve mid-position pressurised • 5/3-way valve mid-position closed • 5/3-way valve mid-position exhausted • 2x2/2-way valve 1x normally closed 1x normally closed, reversible | <ul style="list-style-type: none"> • 2x 2/2-way valve normally closed • 1x 3/2-way valve normally closed external compressed air supply • 1x 3/2-way valve, normally open, external compressed air supply | <ul style="list-style-type: none"> • Proportional pressure regulators (for CPI connection, fieldbus) <p>All valves have the same compact dimensions with an overall length of 107 mm and a width of 10 mm, 14 mm or 20 mm.</p> <p>A height of 55 mm makes them a perfect match for the electrical peripherals CPX.</p> |
|---|--|--|---|

Special features

Multi-pin terminal

- Max. 24 valve positions/max. 24 solenoid coils
- Parallel, modular valve links via circuit boards
- Electronics module with integrated holding current reduction
- Any compressed air supply
- Creating pressure zones

Fieldbus terminal/control block

- Max. 64 valve positions/ max. 128 solenoid coils
- Internal CPX bus system for valve actuation
- Module for electrical valve actuation with or without separate electrical circuits
- Any compressed air supply
- Creating pressure zones

Individual valve

- Electrical M8 connection, 4-pin with screw connection
- Detachable electronics module with integrated holding current reduction

AS-Interface

- 2 to 8 valves, freely configurable (max. 8 solenoid coils) with input feedback.

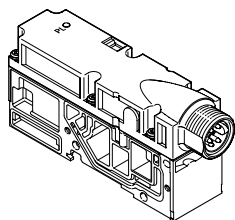
CPI interface

- Max. 32 valve positions/ max. 32 solenoid coils

Combinable

- MPA1: flow rates up to 360 l/min
- MPA14: flow rates up to 670 l/min
- MPA2: flow rates up to 850 l/min
- MPA1, MPA14 and MPA2 can be combined on one valve terminal

Electrical supply plate




- Increases the maximum number of valve positions possible to 64, with max. 128 solenoid coils
- Creation of separate, individually disconnectable circuits (voltage zones)
- Greater economic efficiency thanks to more valves/solenoid coils per valve terminal
- Increased safety as valve groups can be individually disconnected, e.g. for emergency-off functions



Note

The electrical supply plate is available with a choice of an M12, M18 or 7/8" connection.

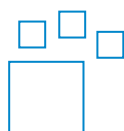Ordering data – Product options




Configurable product
This product and all its product options can be ordered using the configurator.

The configurator can be found at
→ www.festo.com/catalogue/...
Enter the part number or the type.

Part no.	Type
197330	CPX
8079933	CPX-AP-A
546279	MPA-ASI-VI
546280	MPA-CPI-VI
530411	MPA-FB-VI
550808	MPA-FB-AP-VI
539105	MPA-MPM-VI

Key features

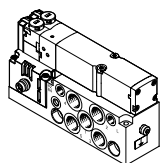Individual connection




Valves on individual sub-bases can also be used for actuators further away from the valve terminal.

The electrical connection is established using a standard 4-pin M8 plug (EN 60947-5-2).

More information
→ VMPA1

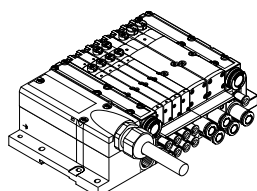Multi-pin plug connection




The signals are transmitted from the controller to the valve terminal via a pre-assembled or self-assembled multi-core cable to the multi-pin plug connection. This substantially reduces installation time.

The valve terminal can be equipped with max. 24 solenoid coils. This corresponds to 4 to 24 MPA1 or 4 to 24 MPA14 or 2 to 24 MPA2 valves, or a combination of all of these.

Variants

- Sub-D connection
- Pre-assembled multi-pin cable
- Multi-pin cable for self-assembly

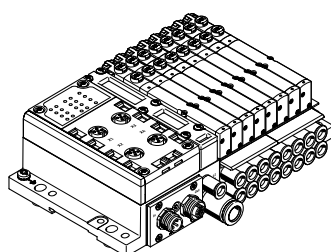AS-Interface connection




A special feature of the AS-Interface is the simultaneous transmission of data and supply power via a two-core cable. The encoded cable profile prevents connection with incorrect polarity. The valve terminal with AS-Interface is available in the following versions:

- With two to eight modular valve positions (max. 8 solenoid coils). This corresponds to 2 to 8 MPA1, 2 to 8 MPA14 or 2 to 8 MPA2 valves, or a combination of all of these.
- With all available valve functions.

The connection technology used for the inputs can be selected as with CPX: M8, M12, Sub-D, Cage Clamp (terminals to IP20).

More information
→ Internet: as-interface

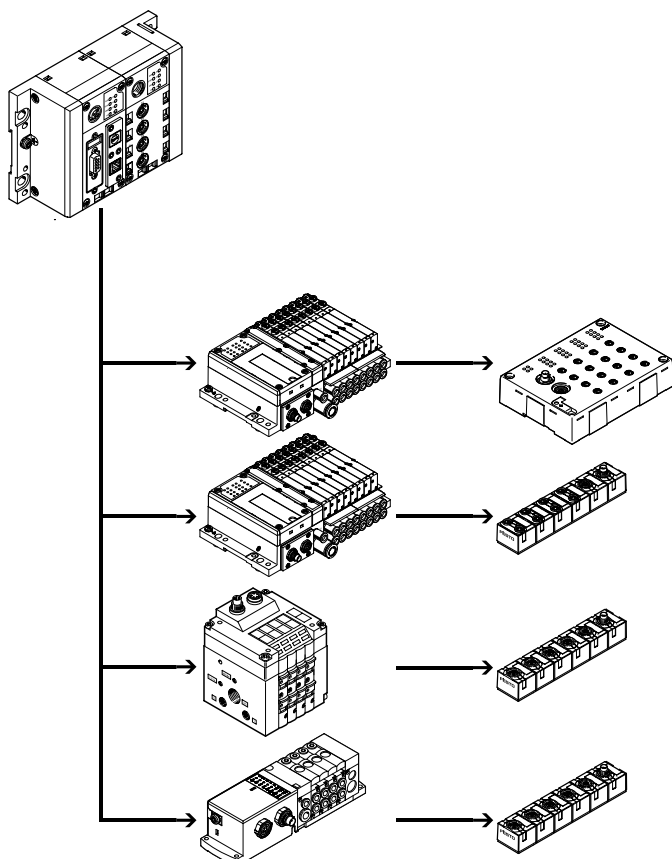Installation system CPI



Valve terminal for installation system CPI:

The valve terminal with CP connection is provided for connection to a higher-order bus node or to control blocks. A bus node or control block additionally enables the connection of decentralised input/output units. The following bus protocols are supported:

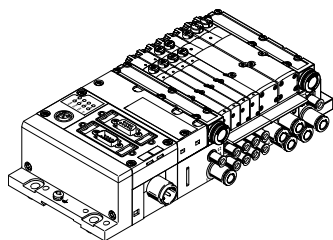
- PROFIBUS DP
- DeviceNet®
- CANopen
- CC-Link®
- EtherNet/IP
- PROFINET
- POWERLINK
- EtherCAT®
- Sercos III

Four strings with up to 32 inputs and outputs can be connected to a bus node or control block. The connecting cables transmit the power supply for the input modules and the load voltage for the valves as well as control signals.

More information
→ Internet: cpi

Key features

Fieldbus connection via the CPX system




An integrated bus node manages communication with a higher-order PLC. This enables space-saving pneumatic and electronic solutions to be implemented.

Valve terminals with fieldbus interfaces can be configured with up to 16 sub-bases. In combination with the MPA1 or MPA14 and 8 solenoid coils per sub-base, up to 128 solenoid coils can thus be controlled. An MPA2 with 4 solenoid coils per sub-base can actuate 64 solenoid coils.

Variants

- PROFIBUS DP
 - DeviceNet®
 - CANopen
 - CC-Link®
 - EtherNet/IP
 - PROFINET
 - POWERLINK
 - EtherCAT®
 - Sercos III
 - Front end controller, remote
 - Front end controller
 - Remote I/O
 - Modbus/TCP
 - CPX terminal
- Internet: cpx

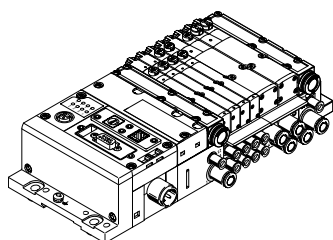Control block connection via the CPX system



With controllers that are integrated in the Festo valve terminals, stand-alone control units to IP65 without control cabinets can be set up.

In the slave operating mode, these valve terminals can be used for intelligent preprocessing and are therefore ideal modules for designing decentralised intelligence.

In the master operating mode, terminal groups can be designed with many options and functions that can autonomously control a medium-sized machine/system.

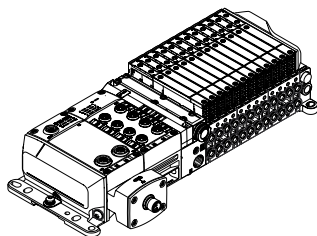
→ Internet: cpx



Note

Note possible restrictions for the IP protection class
a ATEX declaration of conformity

Fieldbus interface from the CPX-AP-A system



VMPA-AP-EPL connects the valve terminal MPA-S to the modular remote IO system CPX-AP-A.

It also fulfils the following basic functions:

- Standard functions of AP slave
- Mechanical adaptation between CPX-AP-A (left side) and MPA-S (right side)

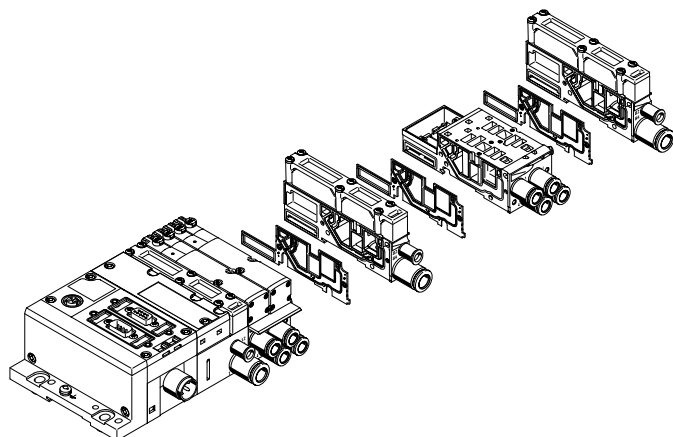
- Integration of the MPA-S electronic modules (CBUS participants) into the AP system.
- Transmission AP <-> CBUS, depiction of CBUS participants as virtual AP participants
- Pneumatic supply and exhaust

Variants

- EtherNet/IP
 - PROFINET
 - EtherCAT®
- Internet: cpx-ap-a

Peripherals overview

Modular pneumatic components



The modular design of the MPA enables outstanding flexibility right from the planning stage and offers maximum ease of service in operation. The system consists of sub-bases and valves.

The sub-bases are screwed together, thus forming the support system for the valves. They contain the ducts for supplying compressed air to and exhausting from the valve terminal as well as the working ports for the pneumatic drives for each valve. Each sub-

base is connected to the next using three screws.

Individual valve terminal sections can be isolated and further blocks can be inserted by loosening these screws. This ensures that the valve terminal can be rapidly and reliably extended.

Modular electrical peripherals

The valves are actuated differently depending on whether a multi-pin terminal or fieldbus terminal is used. The MPA with a CPX interface is based on the internal bus system of the respective CPX terminal and uses this communication system for all solenoid coils and a range of electrical input and output functions.

The valve terminal MPA-S is available with CPX interface as well as with CPX-AP-A interface.

Serial links enable the following:

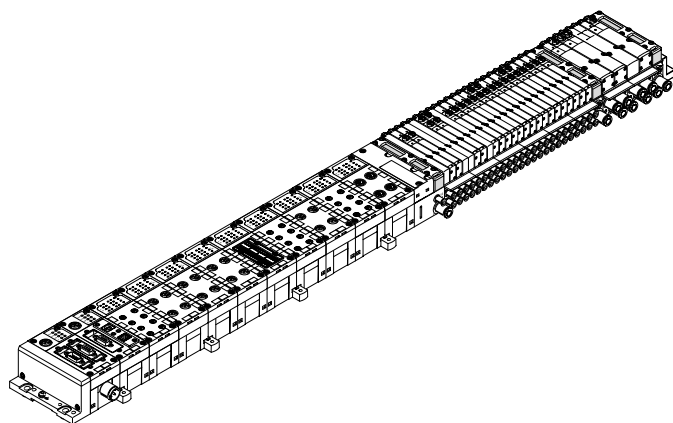
- Transmission of switching information
- High valve density
- Compact design
- Diagnostics related to valve position

- Separate power supply for valves
- Flexible conversion without address shifting
- Transmission of status, parameter and diagnostic data


→ Internet: cpx, cpx-ap-a

- Option of CP interface
- CPX-CEC as stand-alone controller with access via Ethernet and web server

MPA with electrical peripherals CPX



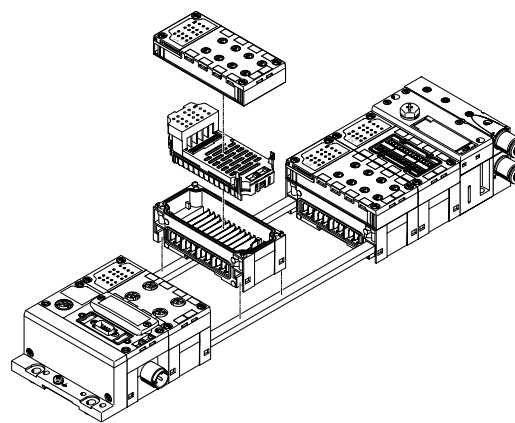Modularity with electrical peripherals CPX



Peripherals overview

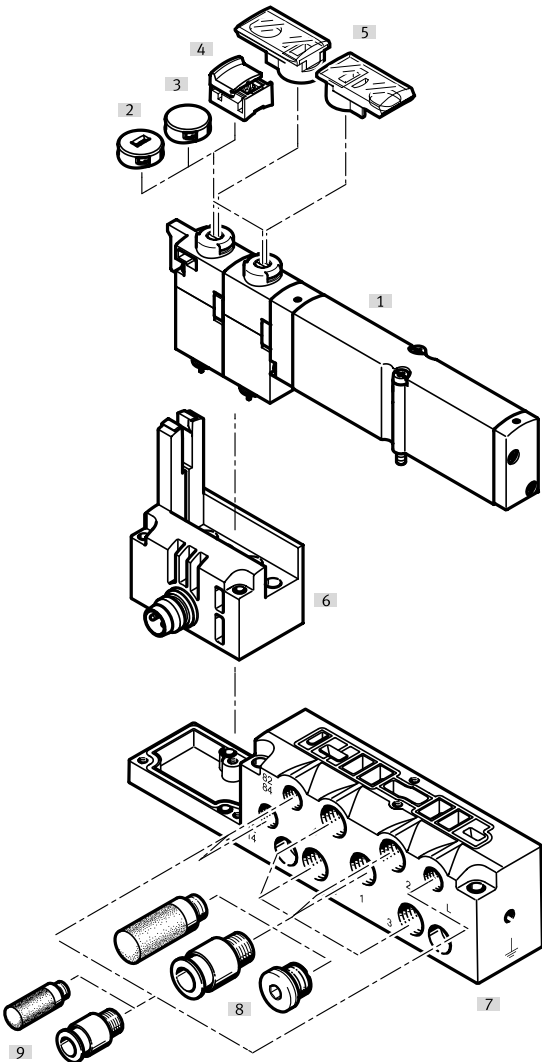
Individual sub-base

Ordering:

- Using individual part numbers

Individual sub-bases can be equipped with any valve (VMPA... of the corresponding width).

The electrical connection is established using a standard 4-pin M8 plug (EN 60947-5-2).



Designation	Description	→ Page/Internet
[1] Solenoid valve	Width 10 mm, 14 mm, 20 mm	VMPA1
[2] Cover cap, coded	After fitting the cover cap, the manual override is non-detenting only	VMPA1
[3] Cover cap, concealed	After fitting the cover cap, the manual override is blocked	VMPA1
[4] Cover cap, manual override detenting	After fitting the cover cap, the manual override is detenting and can be operated without tools	VMPA1
[5] Inscription label holder	Can be pushed onto the manual override	VMPA1
[6] Electrical connection M8	4-pin	VMPA1
[7] Sub-base	For individual valve VMPA...	VMPA1
[8] Fittings, silencers or blanking plugs	For working ports (2, 4) and working air/exhaust ports (1, 3, 5)	VMPA1
[9] Fittings and/or silencers	For pilot air supply/pilot exhaust air (12/14, 82/84) and pressure compensation	VMPA1

Peripherals overview

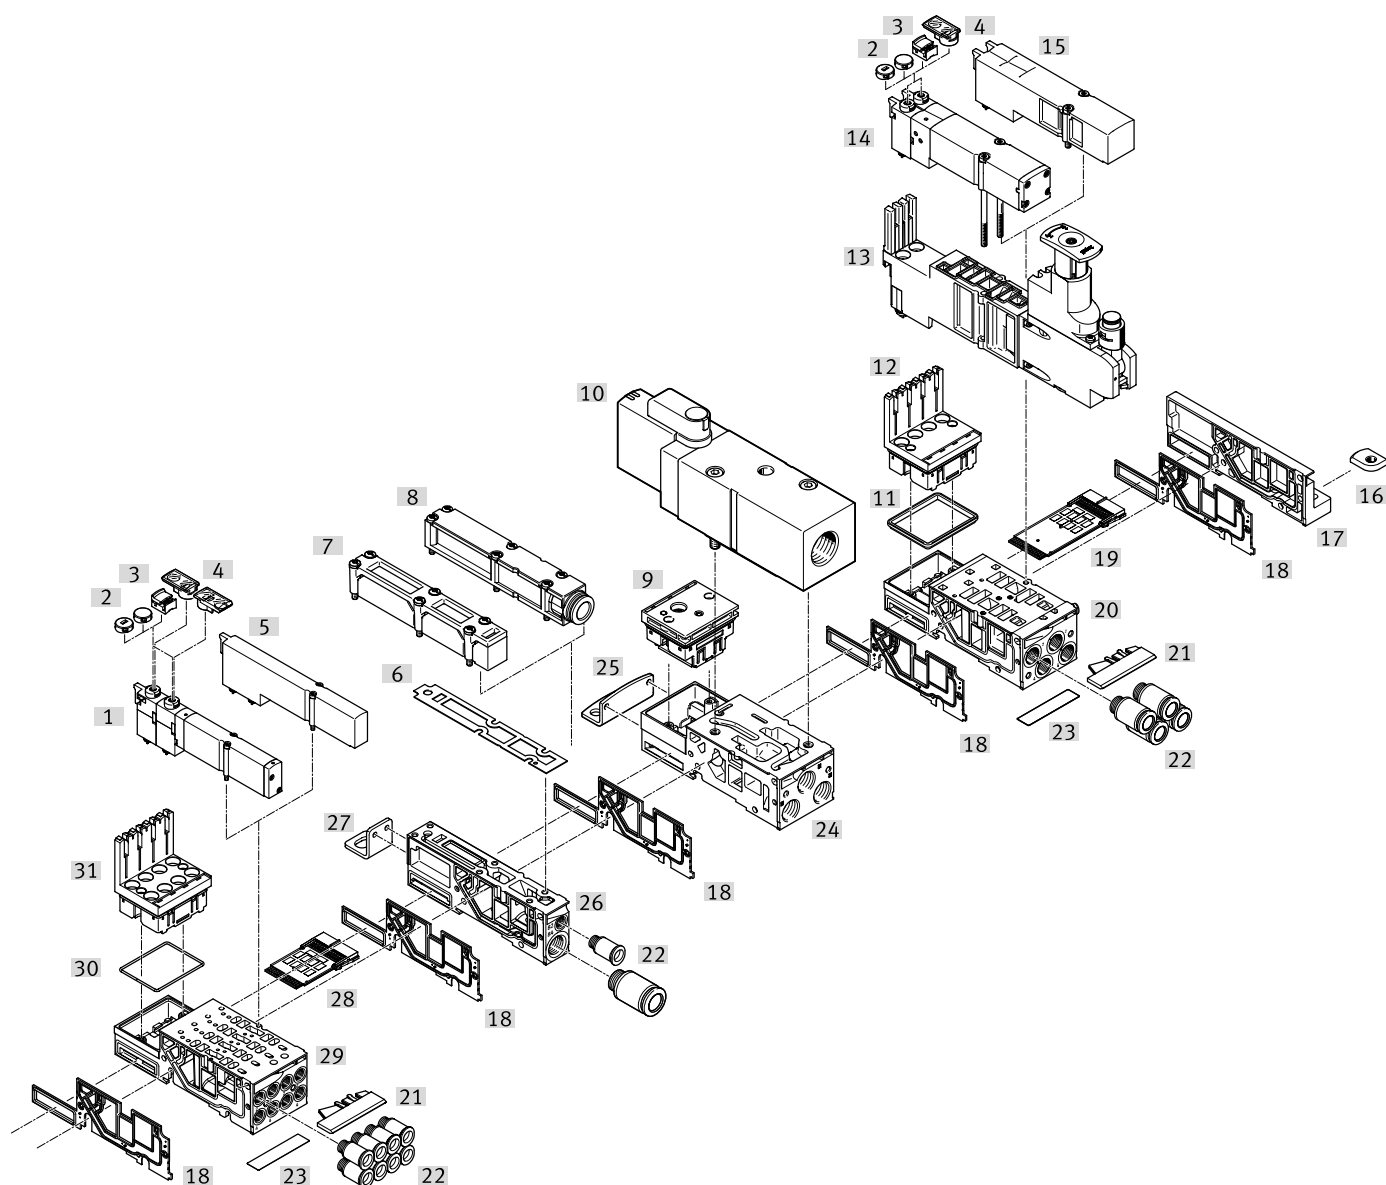
Pneumatic components of the valve terminal – Multi-pin plug, AS-Interface

The sub-bases are prepared for either

- 2 or 4 single solenoid valves
 - 2 or 4 double solenoid valves
- depending on the size.

- Double solenoid valve positions can be equipped with any valve or a blanking plate.

- Single solenoid valve positions can only be equipped with single solenoid valves.



Peripherals overview

Pneumatic components of the valve terminal – Multi-pin plug, AS-Interface		
Designation	Description	→ Page/Internet
[1] Solenoid valve	Width 10 mm, 14 mm	94, 99
[2] Cover cap, coded	After fitting the cover cap, the manual override is non-detenting only	111
[3] Cover cap, concealed	After fitting the cover cap, the manual override is blocked	111
[4] Cover cap, manual override detenting	After fitting the cover cap, manual override is detenting and can be operated without tools	111
[5] Cover plate	For unused valve position (vacant position), width 10 mm, 14 mm	94, 99
[6] Mounting	Optional for valve terminal mounting (on supply plate)	114
[7] Flat plate silencer	–	–
[8] Exhaust air plate	For ducted exhaust air	112
[9] Electronics module	Electronic module for soft-start/quick exhaust valve	109
[10] Soft-start/exhaust valve	–	88
[11] Seal	–	–
[12] Electronics module	For connecting valves	98, 103, 108
[13] Regulator plate	Vertical stacking (pressure regulator, vertical pressure shut-off plate, vertical pressure supply plate)	95
[14] Solenoid valve	Width 20 mm	104
[15] Cover plate	For unused valve position (vacant position), width 20 mm	104
[16] DIN rail mounting	–	114
[17] Right end plate	–	110
[18] Separating seal	For sub-base	111
[19] Electrical interlinking module	For multi-pin plug connection, for AS-Interface, for a sub-base with pneumatic supply plate (on the left next to the sub-base), width 10 mm, 14 mm, 20 mm	98, 103, 108
[20] Sub-base	For two valve positions width 20 mm	107
[21] Inscription labels	Inscription label holder for paper foil label	107
[22] Fittings	For working connections, for pneumatic supply plate	113
[23] Paper foil label	For inscription label holder	–
[24] Sub-base	For soft-start/quick exhaust valve	109
[25] Mounting	Optional for valve terminal mounting (on supply plate)	114
[26] Supply plate	–	112
[27] Mounting	Optional for valve terminal mounting (on supply plate)	114
[28] Electrical interlinking module	For width 10 mm, 14 mm, 20 mm	98, 103, 108
[29] Sub-base	For four valve positions width 10 mm, 14 mm	97, 102
[30] Seal	–	–
[31] Electronics module	For connecting valves	98, 103, 108

Peripherals overview

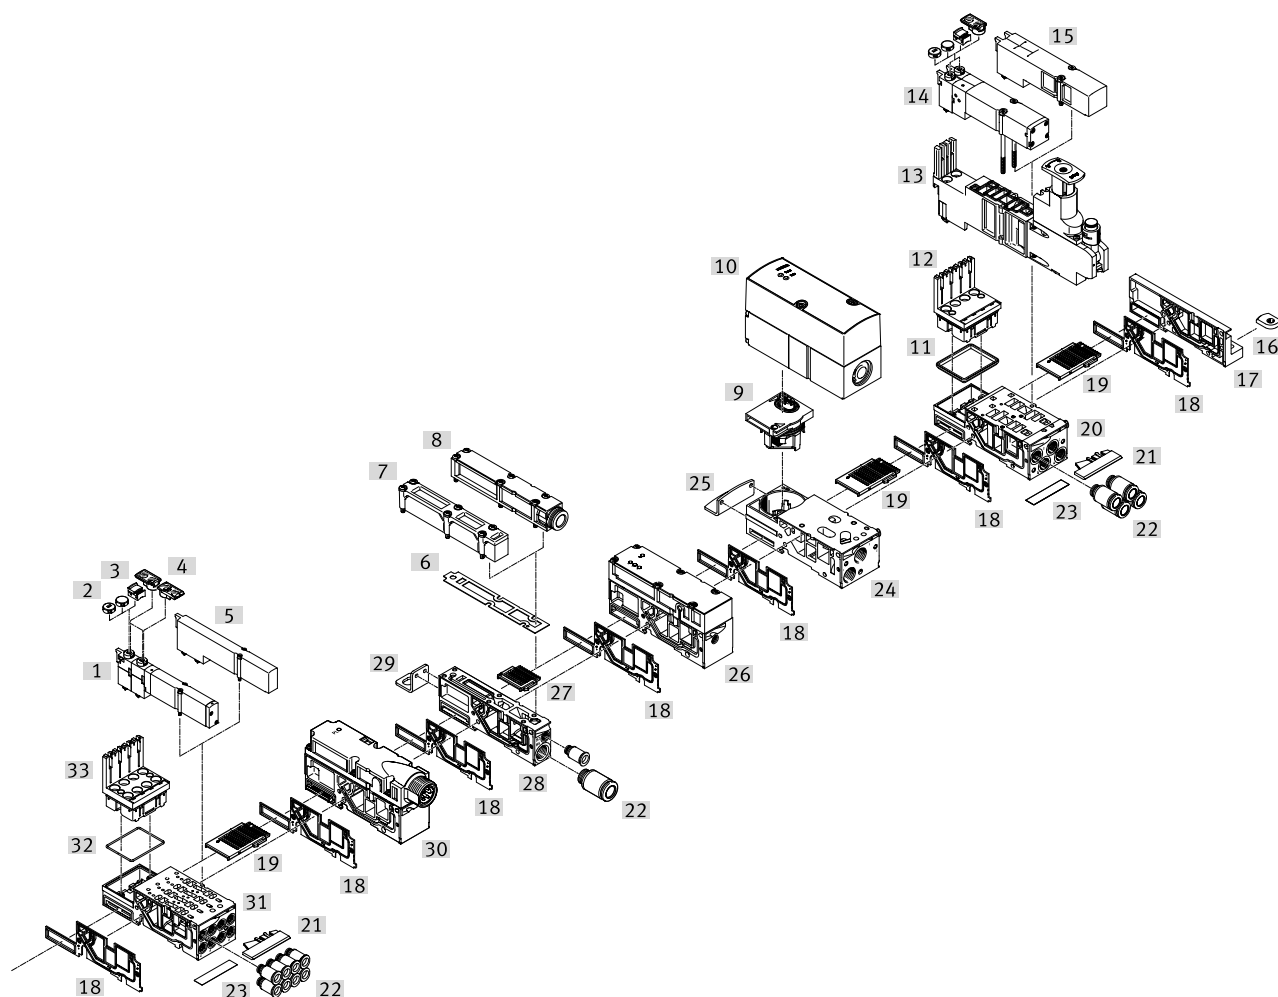
Pneumatic components of the valve terminal – CPI connection, fieldbus

The sub-bases are prepared for either

- 2 or 4 single solenoid valves
 - 2 or 4 double solenoid valves
- depending on the size.

- Double solenoid valve positions can be equipped with any valve or a cover plate.

- Single solenoid valve positions can only be equipped with single solenoid valves.



Peripherals overview

Pneumatic components of the valve terminal – CPI connection, fieldbus		
Designation	Description	→ Page/Internet
[1] Solenoid valve	Width 10 mm, 14 mm	94, 99
[2] Cover cap, coded	After fitting the cover cap, the manual override is non-detenting only	111
[3] Cover cap, concealed	After fitting the cover cap, the manual override is blocked	111
[4] Inscription label holder	Can be pushed onto the manual override	107
[5] Cover plate	For unused valve position (vacant position), width 10 mm, 14 mm	94, 99
[6] Seal	–	–
[7] Flat plate silencer	–	–
[8] Exhaust air plate	For ducted exhaust air	112
[9] Electronics module	For proportional pressure regulator	109
	For soft-start/quick exhaust valve	109
[10] Proportional pressure regulator	–	109
Soft-start/exhaust valve	–	88
[11] Seal	–	–
[12] Electronics module	For connecting valves	98, 103, 108
[13] Regulator plate	Vertical stacking (pressure regulator, vertical pressure shut-off plate, vertical pressure supply plate)	105
[14] Solenoid valve	Width 20 mm	104
[15] Cover plate	For unused valve position (vacant position), width 20 mm	111
[16] DIN rail mounting	–	114
[17] Right end plate	–	110
[18] Separating seal	For sub-base	111
[19] Electrical interlinking module	For fieldbus connection, for proportional pressure regulator, width 10 mm, 14 mm, 20 mm	98, 103, 108
[20] Sub-base	For two valve positions width 20 mm	107
[21] Paper foil label	For inscription label holder	–
[22] Fittings	For working ports	113
	For pneumatic supply plate	113
[23] Paper foil label	For inscription label holder	–
[24] Sub-base	For soft-start/quick exhaust valve	109
[25] Mounting	Optional for valve terminal mounting (on sub-base of the soft-start/quick exhaust valve)	114
[26] Pressure sensor	–	111
[27] Electrical interlinking module	For fieldbus connection, for proportional pressure regulator, width 10 mm, 14 mm, 20 mm	98, 103, 108
[28] Supply plate	–	112
[29] Mounting	Optional for valve terminal mounting (on supply plate)	114
[30] Electrical supply plate	For auxiliary voltage supply for large valve terminals	111
[31] Sub-base	For four valve positions width 10 mm, 14 mm	97, 102
[32] Seal	–	–
[33] Electronics module	–	98, 103, 108

Peripherals overview

Valve terminal with multi-pin plug connection:

Order code:

- 32P-... for the pneumatic components
- 32E-... for the electrical components

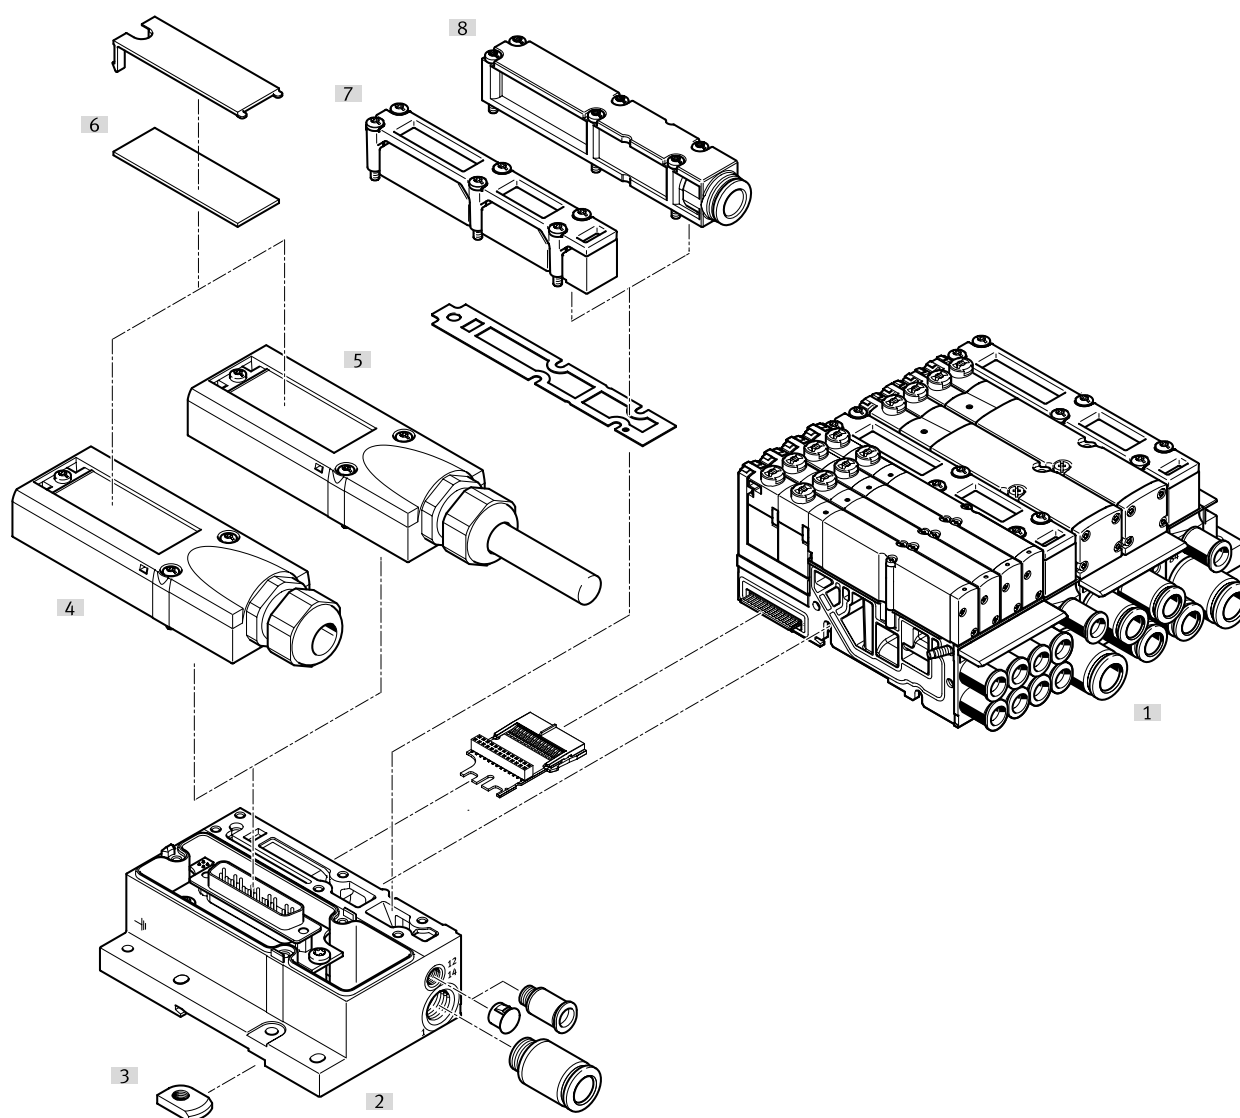
MPA valve terminals with multi-pin plug connection can be expanded by up to 24 solenoid coils.

The multi-pin plug connection is designed as a removable 25-pin Sub-D connection to IP65.

The cable can be selected when ordering:

- 2.5 m
- 5 m
- 10 m

In each case for max. 8 or 24 valves




Designation	Description	→ Page/Internet
[1] Valve terminal	With multi-pin plug connection	–
[2] Electrical interface	For multi-pin plug	110
[3] DIN rail mounting	–	114
[4] Multi-pin plug connection	For self-assembly	112
[5] Multi-pin plug connection	With multi-pin cable	112
[6] Inscription labels	Large, for multi-pin plug connection	–
[7] Flat plate silencer	For pneumatic interface	–
[8] Exhaust air plate	For ducted exhaust air	112

Peripherals overview

Valve terminal with AS-Interface connection

- Order code:
- 32P-... for the pneumatic components
 - 52E-... for the electrical components

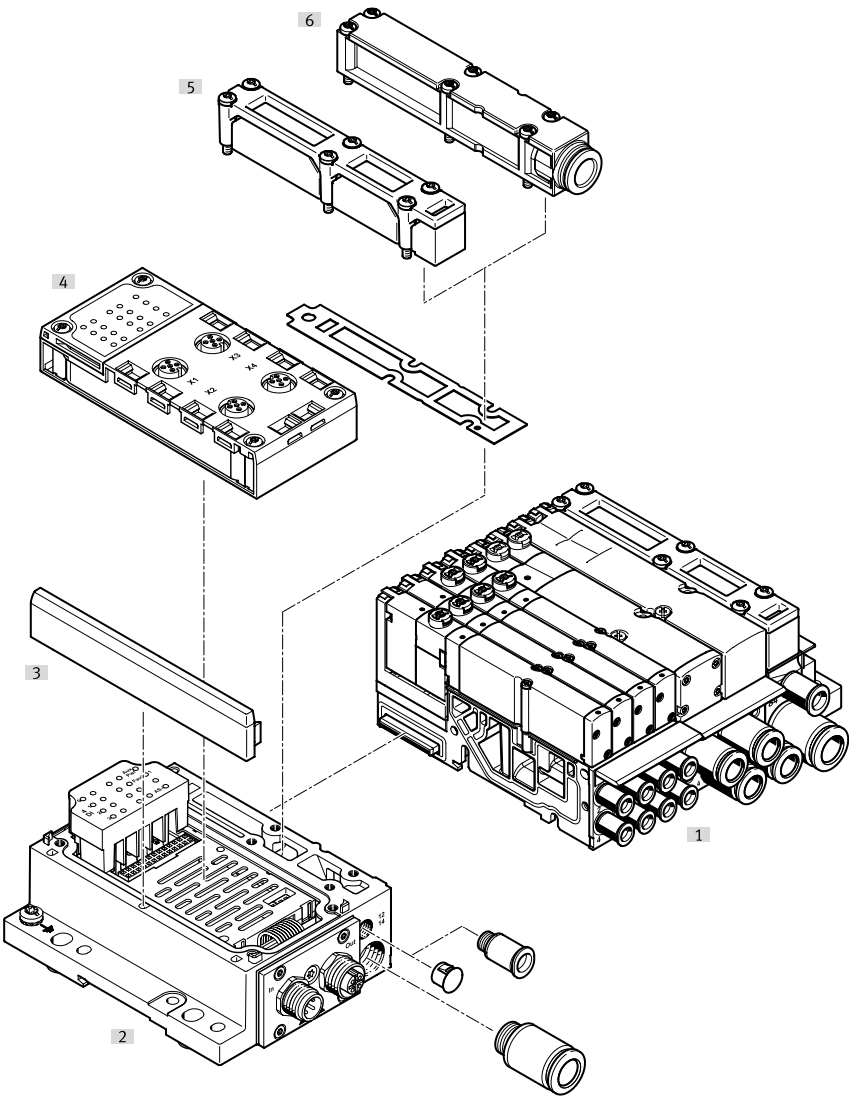MPA valve terminals with AS-Interface can be expanded by up to 8 solenoid coils.



Designation	Description	→ Page/Internet
[1] Valve terminal	with AS-interface connection	–
[2] Electrical interface	–	110
[3] Cover	–	–
[4] Manifold block	–	110
[5] Flat plate silencer	For pneumatic interface	–
[6] Exhaust air plate	For ducted exhaust air	112

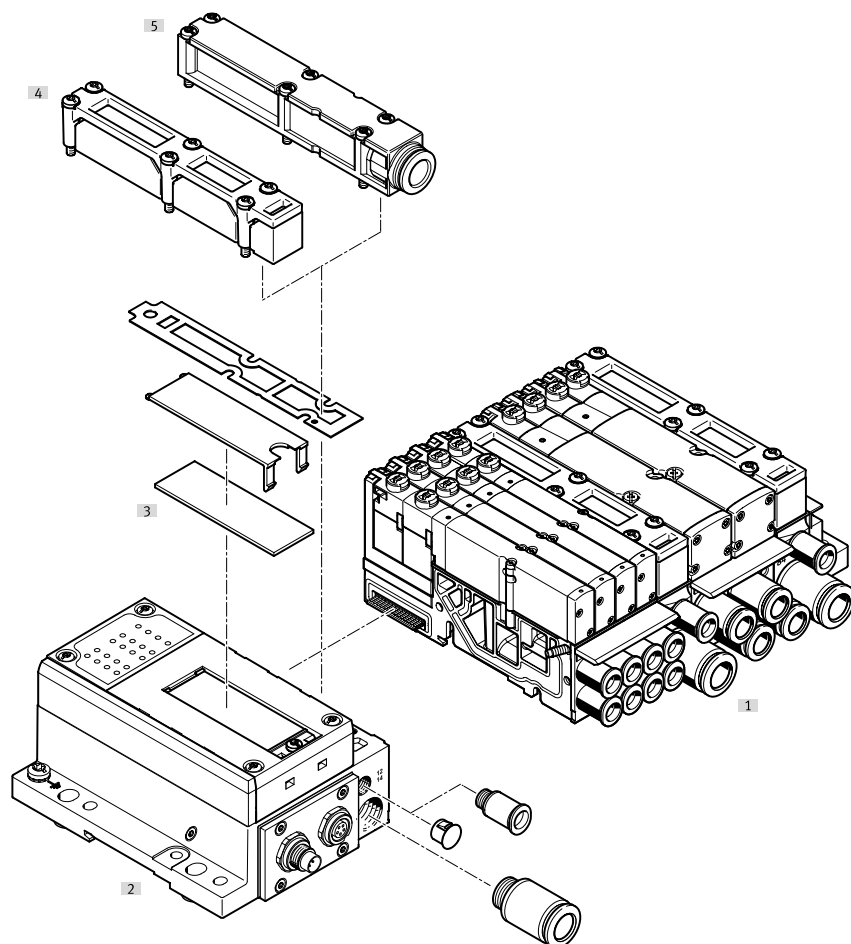
Peripherals overview

Valve terminal with CPI connection

Order code:

- 32P-... for the pneumatic components
- 56E-... for the electrical peripherals

MPA valve terminals with CPI connection can be expanded by up to 32 solenoid coils.



Designation	Description	→ Page/Internet
[1] Valve terminal MPA	—	—
[2] Electrical interface	—	110
[3] Inscription labels	Large for CPI electrical interface	—
[4] Flat plate silencer	For pneumatic interface	—
[5] Exhaust air plate	For ducted exhaust air	112

Peripherals overview

Valve terminal with fieldbus interface, control block (electrical peripherals CPX)

Order code:

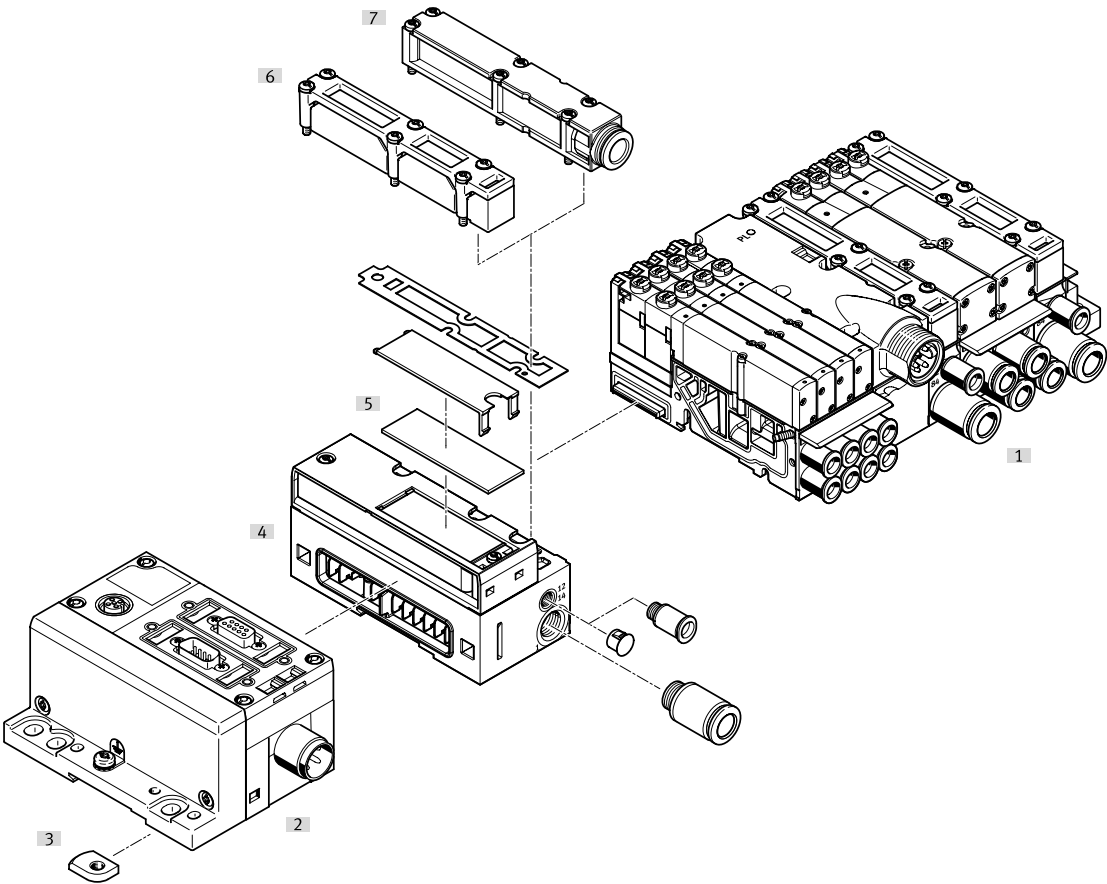
- 32P-... for the pneumatic components
- 50E-... for the electrical peripherals

Valve terminals with fieldbus interfaces can be configured with up to 16 sub-bases. In combination with MPA1 or MPA14 and 8 solenoid coils per sub-base, up to 128 solenoid coils can thus be used. An MPA2 with 4 solenoid coils per sub-base can actuate 64 solenoid coils.

Each valve position can be equipped with any valve or a cover plate. The rules for CPX apply to the equipment that can be used with the electrical peripherals CPX.

- Digital inputs/outputs
- Analogue inputs/outputs
- Parameterisation of inputs and outputs
- Integrated, convenient diagnostics
- Preventive maintenance concepts

In general:



Designation	Description	→ Page/Internet
[1] Valve terminal MPA	–	–
[2] CPX modules	–	–
[3] DIN rail mounting	–	114
[4] Pneumatic interface	For CPX modules	110
[5] Inscription labels	Large, for pneumatic interface CPX	–
[6] Flat plate silencer	For pneumatic interface	–
[7] Exhaust air plate	For ducted exhaust air	112

Peripherals overview

Valve terminal with fieldbus interface, control block (electrical peripherals CPX-AP-A)

Order code:

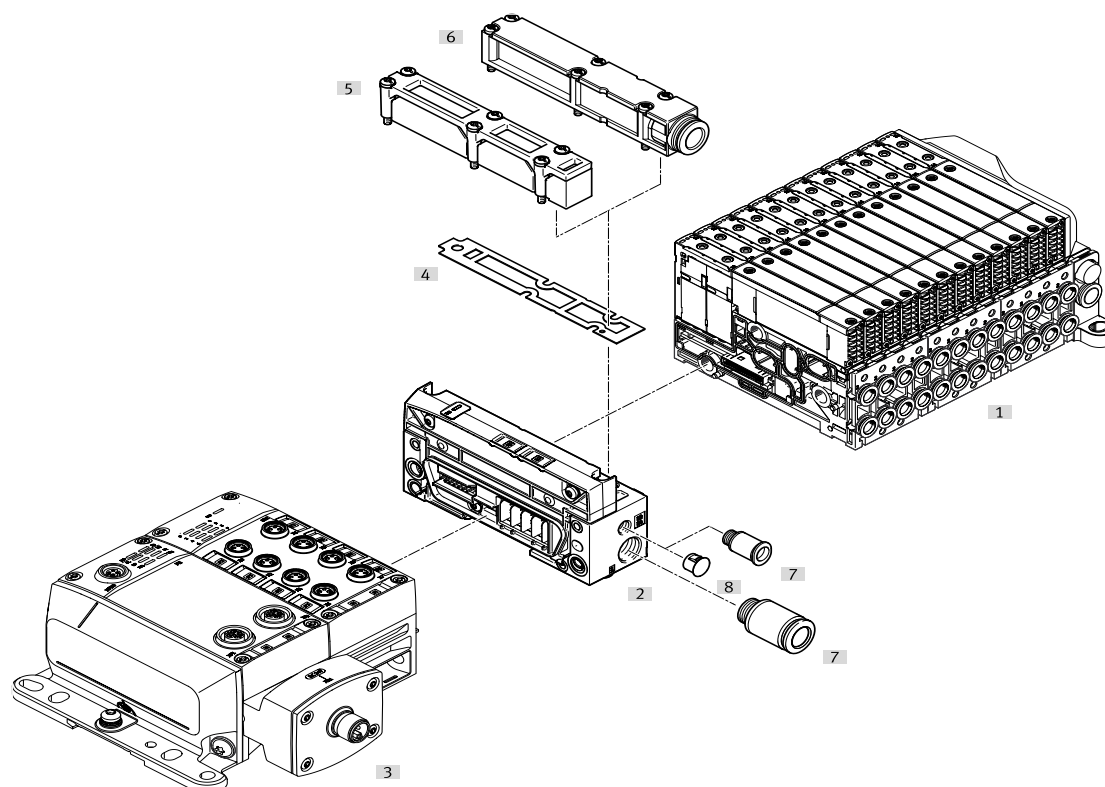
- 32P-... for the pneumatic components
- 50E-... for the electrical peripherals
- peripherals

Valve terminals with fieldbus interfaces can be configured with up to 16 sub-bases. In combination with MPA1 or MPA14 and 8 solenoid coils per sub-base, up to 128 solenoid coils can thus be used. An MPA2 with 4 solenoid coils per sub-base can actuate 64 solenoid coils.

Each valve position can be equipped with any valve or a cover plate. The rules for CPX apply to the equipment that can be used with the electrical peripherals CPX.

In general:


- Digital inputs/outputs
- Analogue inputs/outputs
- Parameterisation of inputs and outputs
- Integrated, convenient diagnostics
- Preventive maintenance concepts



Designation	Description	→ Page/Internet
[1] Control block	CPX-AP-A	110
[2] Pneumatic interface	For CPX modules	110
[3] CPX modules	–	–
[4] Seal	–	–
[5] Flat plate silencer	For pneumatic interface	–
[6] Exhaust air plate	For ducted exhaust air	112
[7] Push-in fitting	–	113
[8] Blanking plug	–	113

Key features – Pneumatic components

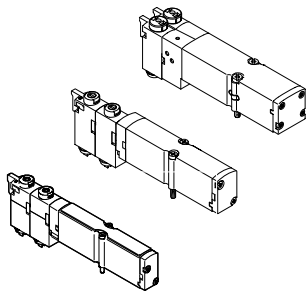Sub-base valve



MPA offers a comprehensive range of valve functions. All valves have a patented sealing system, which ensures efficient sealing, a broad pressure range and a long service life. They have a pneumatic pilot control for optimising performance. Compressed air is supplied via a pilot air supply port.

Sub-base valves can be replaced quickly since the tubing connections remain on the sub-base. This design is also particularly flat.

Whatever valve function is required, there are sub-base valves with one solenoid coil (single solenoid) or with two solenoid coils (double solenoid or two single solenoid valves in one housing).

Design

Replacing valves

The valves are attached to the metal sub-base using two screws,

which means that they can be easily replaced. The sturdy mechanical structure of the sub-base guarantees good long-term sealing.

Extension

Cover plates can be replaced by valves at a later date. The dimensions, mounting points and existing pneumatic installations remain unchanged during this process.

The valve code (M, MS, MSC, MU, J, N, NS, NU, K, KS, KU, H, HS, HU, B, G, E, X, W, D, DS, I) is located on the front of the valve beneath the manual override.




5/2-way valve

Code	Circuit symbol	Valve size [mm]	Description
M		10, 14, 20	• Single solenoid • Pneumatic spring return • Reversible • Operating pressure –0.09 ... +1 MPa
MS		10, 14, 20	• Single solenoid • mechanical spring return • Reversible • Operating pressure –0.09 ... +0.8 MPa
MSC		10, 14, 20	• Single solenoid • Poppet valve with spring return • mechanical spring return • Reversible • Operating pressure –0.09 ... +1 MPa
MU		10	• Single solenoid • Polymer poppet valve • mechanical spring return • Reversible • Operating pressure –0.09 ... +1 MPa • 5/2-way function is achieved using two mechanically separate switching elements
J		10, 14, 20	• Double solenoid • Reversible • Operating pressure –0.09 ... +1 MPa



Key features – Pneumatic components

2x 3/2-way valve			
Code	Circuit symbol	Valve size [mm]	Description
N		10, 14, 20	• Single solenoid • Normally open • Pneumatic spring return • Operating pressure 0.3 ... 1 MPa
NS		10, 14, 20	• Single solenoid • Normally open • mechanical spring return • Reversible • Operating pressure -0.09 ... +0.8 MPa
NU		10	• Single solenoid • Polymer poppet valve • Normally open • mechanical spring return • Reversible • Operating pressure -0.09 ... +1 MPa
K		10, 14, 20	• Single solenoid • Normally closed • Pneumatic spring return • Operating pressure 0.3 ... 1 MPa
KS		10, 14, 20	• Single solenoid • Normally closed • mechanical spring return • Reversible • Operating pressure -0.09 ... +0.8 MPa
KU		10	• Single solenoid • Polymer poppet valve • Normally closed • mechanical spring return • Reversible • Operating pressure -0.09 ... +1 MPa
H		10, 14, 20	• Single solenoid • Normal position – 1x normally closed – 1x normally open • Pneumatic spring return • Operating pressure 0.3 ... 1 MPa
HS		10, 14, 20	• Single solenoid • Normal position – 1x normally closed – 1x normally open • mechanical spring return • Reversible • Operating pressure -0.09 ... +0.8 MPa
HU		10	• Single solenoid • Polymer poppet valve • Normal position – 1x normally closed – 1x normally open • mechanical spring return • Reversible • Operating pressure -0.09 ... +1 MPa




Key features – Pneumatic components


5/3-way valve			
Code	Circuit symbol	Valve size [mm]	Description
B		10, 14, 20	• Mid-position pressurised¹⁾ • mechanical spring return • Reversible • Operating pressure –0.09 ... +1 MPa
G		10, 14, 20	• Mid-position closed¹⁾ • mechanical spring return • Reversible • Operating pressure –0.09 ... +1 MPa
E		10, 14, 20	• Mid-position exhausted¹⁾ • mechanical spring return • Reversible • Operating pressure –0.09 ... +1 MPa

- 1) If neither solenoid coil is energised, the valve is moved to its mid-position by spring force.
If both coils are energised at the same time, the valve remains in the previously assumed switching position.





3/2-way valve			
Code	Circuit symbol	Valve size [mm]	Description
W		10, 14, 20	• Single solenoid • Normally open • External pressure supply • Pneumatic spring return • Reversible • Operating pressure –0.09 ... +1 MPa Pressure supplied at working port 2 (–0.09 ... +1 MPa) can be switched with both internal and external pilot air supply.
X		10, 14, 20	• Single solenoid • Normally closed • External pressure supply • Pneumatic spring return • Reversible • Operating pressure –0.09 ... +1 MPa Pressure supplied at working port 4 (–0.09 ... +1 MPa) can be switched with both internal and external pilot air supply.

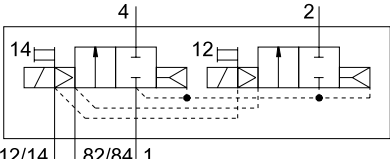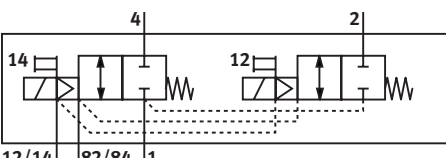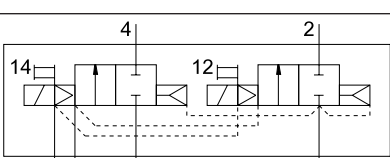Key features – Pneumatic components

2x 2/2-way valve			
Code	Circuit symbol	Valve size [mm]	Description
D		10, 14, 20	- Single solenoid - Normally closed - Pneumatic spring return - Operating pressure 0.3 ... 1 MPa
DS		10, 14, 20	- Single solenoid - Normally closed - mechanical spring return - Reversible - Operating pressure -0.09 ... +0.8 MPa
I		10, 14, 20	- Single solenoid 1x normally closed 1x normally closed, reversible only - Pneumatic spring return - Operating pressure 0.3 ... 1 MPa - Vacuum at port 3/5 only


**Note**

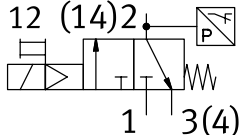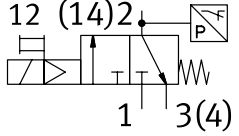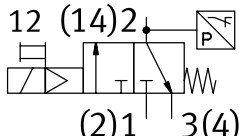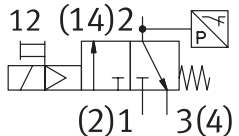A filter must be installed upstream of valves operated in vacuum mode. This prevents any foreign matter in the intake air getting into the valve (e.g. when operating a suction cup).

Pilot air switching valve			
Code	Circuit symbol	Valve size [mm]	Description
IS		10, 14	- Single solenoid - Normally closed - mechanical spring return - Operating pressure 0.3 ... 0.8 MPa - With internal power supply
IU		10, 14	- Single solenoid - Normally closed - mechanical spring return - Operating pressure 0.3 ... 0.8 MPa - With internal power supply - With external sensor M8 plug connector
ES		10, 14	- Single solenoid - Normally closed - mechanical spring return - Operating pressure 0.3 ... 0.8 MPa - With external power supply
EU		10, 14	- Single solenoid - Normally closed - mechanical spring return - Operating pressure 0.3 ... 0.8 MPa - With external power supply - With external sensor M8 plug connector

Key features – Pneumatic components

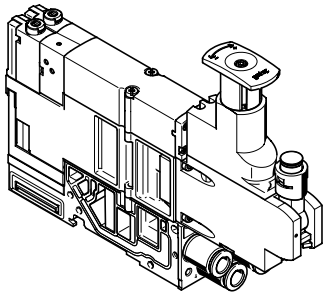
Vertical stacking



Additional functional units can be added to each valve position between the sub-base and the valve.

These functions are known as vertical stacking modules and enable special functions or control of an individual valve position.

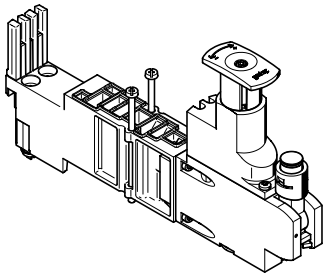Pressure regulator plate



An adjustable pressure regulator can be installed between the sub-base and the valve in order to control the force of the triggered actuator.

This pressure regulator maintains a constant output pressure (secondary side) independent of pressure fluctuations (primary side) and air consumption.

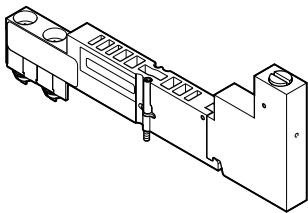
Standard version:

- For pressure regulation up to 6 bar or up to 10 bar
- Without pressure gauge (optional, rotatable, connection M5 with

MPA1, cartridge connection with MPA2)

- MPA2: Regulator head with 3 positions (locked, reference position, idle running)
- MPA1: Set using screwdriver

Vertical pressure shut-off plate for MPA1




The vertical pressure shut-off plate can be used to hot swap individual valves without switching off the overall air supply.

The working pressure for the individual valve can be switched off manually via the vertical pressure shut-off plate using the actuating element.

Key features – Pneumatic components

Vertical stacking

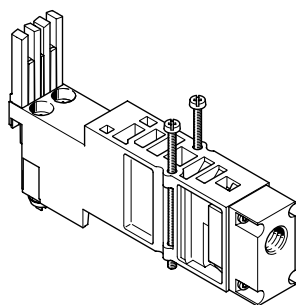
Vertical pressure supply plate for MPA2



This vertical pressure supply plate enables an individual valve to be supplied with individual operating pressure independently of the operating pressure of the valve terminal.

The exhaust and pilot air supply of the valve are still provided via the central ports of the valve terminal.

Check valve



The check valves prevent the air (back pressure) from exhaust ducts 3 and 5 from entering the solenoid valve, preventing the back pressure from having a disruptive effect on other connected actuators. The check valves are integrated into ducts 3 and 5 of the sub-bases designed specifically for this.

Please see the relevant assembly instructions:

→ www.festo.com/catalogue/mpa → Support/Downloads.

This function makes it possible to effectively protect single-acting process valves from the effects of back pressure.

This ensures reliable and feed-back-free switching operations, especially in the case of rapid switching operations.



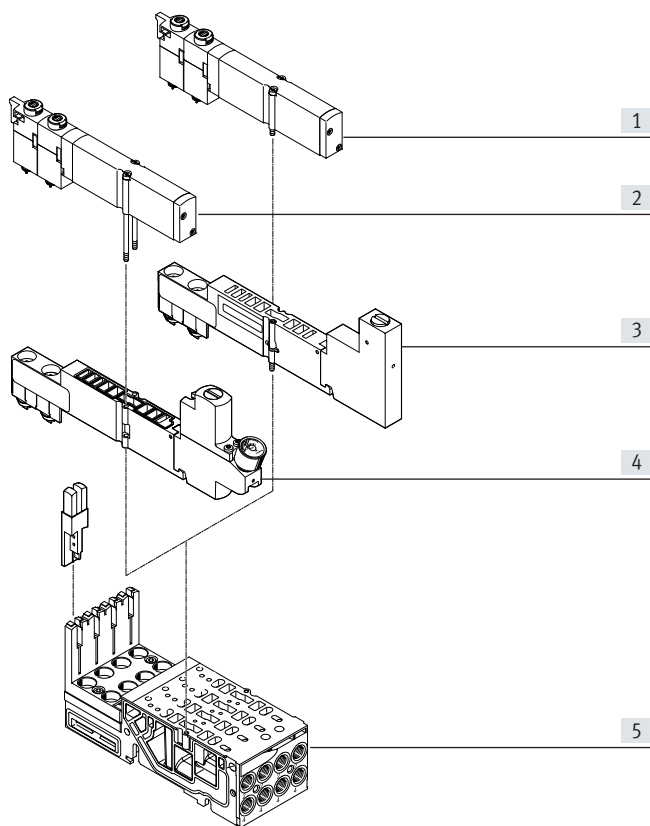
Note

- Special sub-bases are available for use with check valves.
- Standard sub-bases cannot be retrofitted with check valves.
- Pre-assembled sub-bases with integrated check valves are available.
- Check valves and fixed flow restrictors cannot be used at the same time (in the same duct).

Key features – Pneumatic components


Vertical stacking

Vertical stacking components, valve size 10 mm




- [1] Valve VMPA1
- [2] Valve VMPA1, retaining screws replaced by long version (included in the scope of delivery of the regulator plate)
- [3] Vertical pressure shut-off plate VMPA1-HS
- [4] Regulator plate VMPA1
- [5] Sub-base

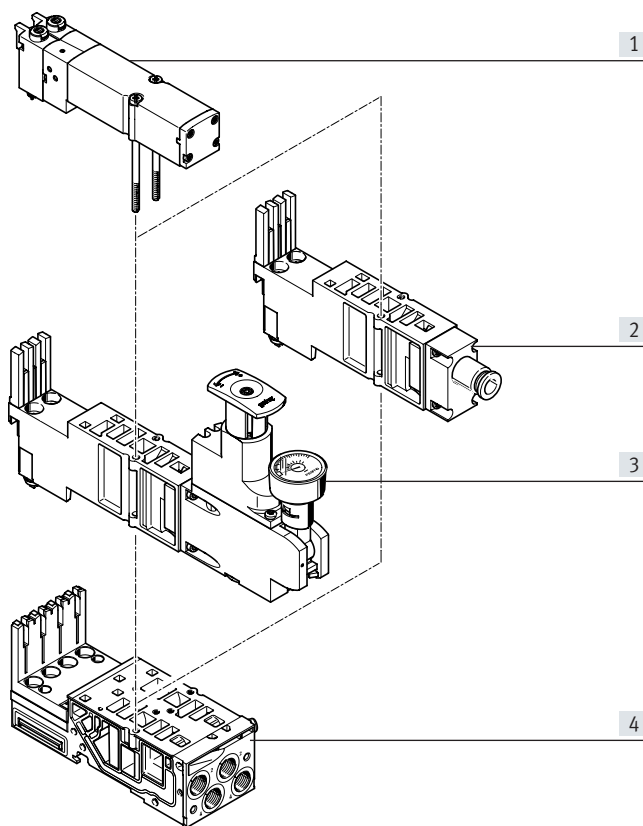Vertical stacking components, valve size 20 mm



- [1] Valve VMPA2
- [2] Vertical pressure supply plate
- [3] Regulator plate VMPA2
- [4] Sub-base

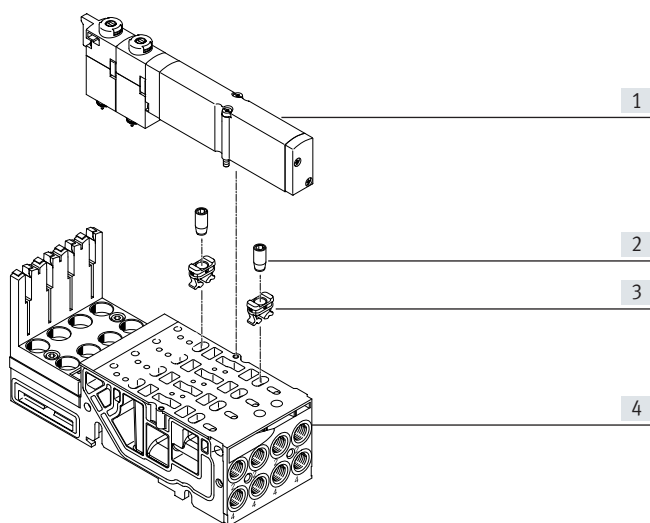Fixed flow restrictor for manifold sub-bases MPA



- [1] Valve VMPA1
- [2] Fixed flow restrictor
- [3] Retaining bracket
- [4] Sub-base

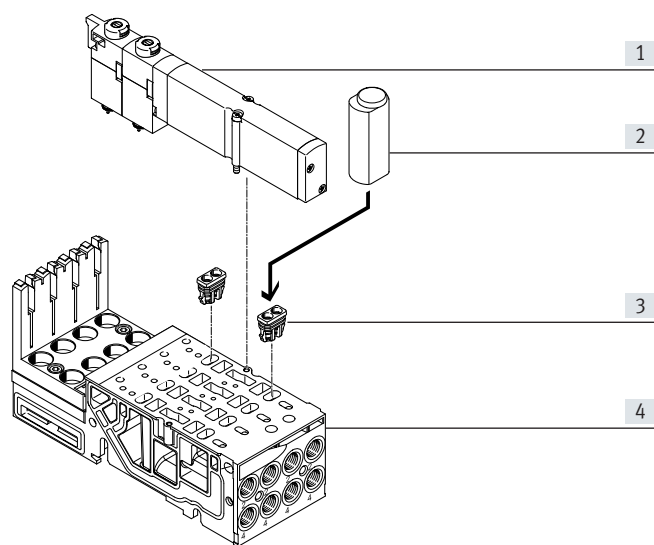
The fixed flow restrictor can be used to permanently set the exhaust flow rate in ducts 3 and 5. To be able to screw the restrictor into the sub-base, the retaining bracket is first pressed into the exhaust openings on the sub-base as far as the stop.

The fixed flow restrictor can then be screwed in flush with the top side of the retaining bracket. The restrictor screw cuts a thread into the retaining bracket as it is screwed in. As the restrictor is being screwed in, two hooks on the retaining bracket also deform to secure it into the sub-base.

Key features – Pneumatic components

Vertical stacking

Check valve



- [1] Valve VMPA14
- [2] Assembly tool
- [3] Check valve
- [4] Sub-base

Festo check valves can only be used in combination with the sub-bases designed specifically for this purpose. The check valves should be installed according to the specifications using the enclosed assembly tool. Once installed, the check valves cannot be removed.

Please see the relevant assembly instructions:
 → www.festo.com/catalogue/mpa → Support/Downloads.


There are special sub-bases available that facilitate the installation of check valves for widths 14 mm and 20 mm.

**Note**

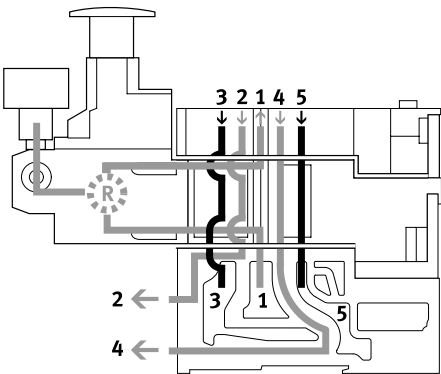- Special sub-bases are available for use with check valves.
- Standard sub-bases cannot be retrofitted with check valves.
- Pre-assembled sub-bases with integrated check valves are available.
- Check valves and fixed flow restrictors cannot be used at the same time (in the same duct).

Key features – Pneumatic components

Vertical stacking
Mode of operation of the pressure regulator plate (P regulator) for port 1; code: PA, PF




Advantages

- The pressure regulator is not affected by exhausting, since the pressure is regulated upstream of the valve.
- The pressure regulator can always be adjusted, since the pressure from the valve terminal is always present.

Application examples

- An equal working pressure is required at working ports 2 and 4.
- A working pressure (e.g. 3 bar) lower than the operating pressure at the valve terminal (e.g. 8 bar) is required.

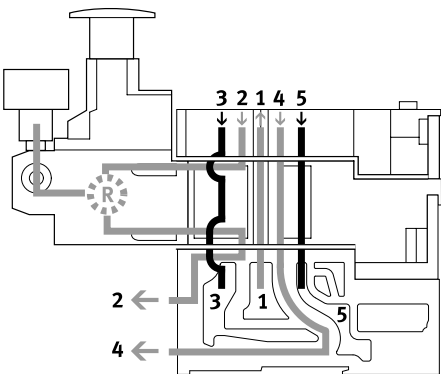Operating mode of the pressure regulator plate (B regulator) for port 2; code: PC, PH



Constraints

The pressure regulator can only be adjusted in the switched state (e.g. the valve has switched to 2 and exhausts from 4 to 5).

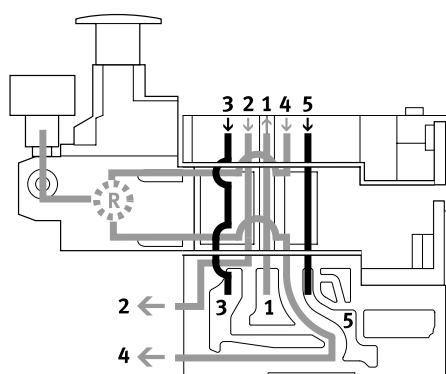
Application example

The pressure regulator facilitates the reduction of pressure at port 2 of an individual valve rather than the operating pressure of the valve terminal

Key features – Pneumatic components

Vertical stacking

Operating mode of the pressure regulator plate (A regulator) for port 4; code: PB, PK



This pressure regulator regulates the pressure in duct 4 after the pressure medium flows through the valve. During exhausting, the air flow in the valve is exhausted from duct 4 to duct 5 via the pressure regulator.

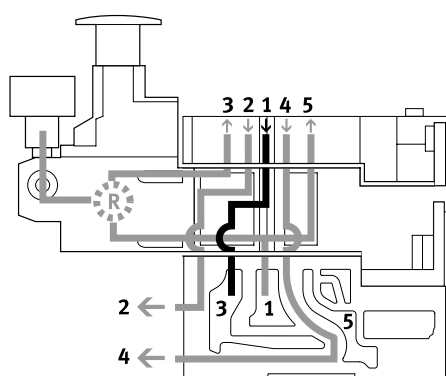
Constraints

The pressure regulator can only be adjusted in the switched state (e.g. the valve has switched to 4 and exhausts from 2 to 3).

Application example

If different working pressures are required at ports 4 and 2. The pressure from duct 1 is present at port 2.

Operating mode of the pressure regulator plate (B regulator, reversible) for port 2, reversible; code: PL, PN




The reversible B regulator splits the supply air in duct 1 and regulates the pressure upstream of the valve in duct 3 (the unregulated pressure from duct 1 is in duct 5). The regulated air is then routed to duct 2. The valve is thus operated in reverse mode.

During exhausting, the exhaust flow in the valve is from duct 2 to duct 1 and the air is returned to duct 3 via the intermediate plate.

Application examples

- If a different pressure than the operating pressure of the valve terminal is required in duct 2.
- When fast exhausting is required.
- When the pressure regulator must always be adjustable.



Note

Reversible pressure regulator plates should only be combined with valves that can be operated in reverse mode.

Advantages

- Fast cycle times
- 50% higher exhaust flow rate, as air is not exhausted via the pressure regulator. The load on the pressure regulator is also reduced.
- No quick exhaust valves are required.
- Operating pressure is always present at the pressure regulator, as the pressure is regulated upstream of the valve, i.e. the regulator can always be adjusted.

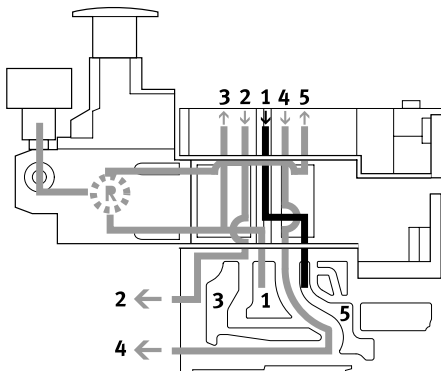
Constraints

- 2x 3/2-way valves (code N, K, H) cannot be used, as pressure is present at ports 3 and 5.

Key features – Pneumatic components

Vertical stacking

Operating mode of the pressure regulator plate (A regulator, reversible) for port 4, reversible; code: PK, PM




The reversible A regulator splits the working air in duct 1 and regulates the pressure upstream of the valve in duct 5 (the unregulated pressure from duct 1 is in duct 3). The regulated air is then routed to duct 4. The valve is thus operated in reverse mode.

During exhausting, the exhaust flow in the valve is from duct 4 to duct 1 and the air is returned to duct 5 via the intermediate plate.

Application examples

- If a different pressure than the operating pressure of the valve terminal is required in duct 4.
- When fast exhausting is required.
- When the pressure regulator must always be adjustable.



Note

Reversible pressure regulator plates should only be combined with valves that can be operated in reverse mode.

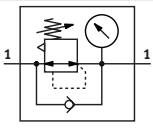
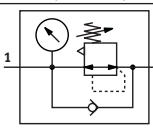
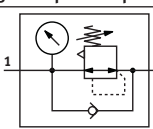
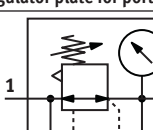
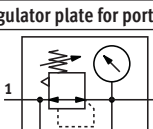
Advantages

- Fast cycle times
- 50% higher exhaust flow rate, as air is not exhausted via the pressure regulator. The load on the pressure regulator is also reduced.
- No quick exhaust valves are required.
- Operating pressure is always present at the pressure regulator, as the pressure is regulated upstream of the valve, i.e. the regulator can always be adjusted.

Constraints

- 2x 3/2-way valves (code N, K, H) cannot be used, as pressure is present at ports 3 and 5.

Key features – Pneumatic components

Vertical stacking – Pressure regulator plate				
Code		Width	Control range	Description
		[mm]		
Pressure regulator plate for port 1 (P regulator)				
PA		10	Up to max. 8.5 bar	Regulates the operating pressure in duct 1 upstream of the directional control valve
		14		
		20		
PF		10	Up to max. 6 bar	
		14		
		20		
Pressure regulator plate for port 2 (B regulator)				
PC		10	Up to max. 8.5 bar	Regulates the operating pressure in duct 2 downstream of the directional control valve
		14		
		20		
PH		10	Up to max. 6 bar	
		14		
		20		
Pressure regulator plate for port 4 (A regulator)				
PB		10	Up to max. 8.5 bar	Regulates the operating pressure in duct 4 downstream of the directional control valve
		14		
		20		
PG		10	Up to max. 6 bar	
		14		
		20		
Pressure regulator plate for port 2, reversible (B regulator)				
PL		20	Up to max. 8.5 bar	Reversible pressure regulator for port 2
PN		20	Up to max. 6 bar	
Pressure regulator plate for port 4, reversible (A regulator)				
PK		20	Up to max. 8.5 bar	Reversible pressure regulator for port 4
PM		20	Up to max. 6 bar	

Key features – Pneumatic components

Description of proportional pressure regulator

The proportional pressure regulator VPPM-... is used to regulate pressure proportional to a specified setpoint value.

A built-in pressure sensor records the pressure at the working port and compares this value with the setpoint value. If there are deviations between the setpoint value and actual value,


the valve regulates until the output pressure has reached the setpoint value. For a constant pressure supply, which is required for high control quality, the proportional pressure regulator has an additional supply port. The proportional pressure regulator can be configured via the PLC or on-site via the interface for CPX-FMT. The pro-

portional pressure regulator can be used for CPI connection and fieldbus.


**Note**

The output pressure will be unregulated if there is a break in the power supply cable.

Proportional pressure regulator

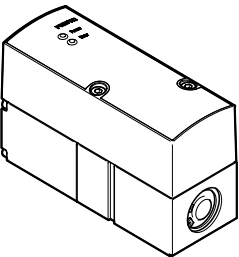Illustration	Code	Type	Linearity error full-scale [%]	Input pressure 1 [MPa]	Pressure regulation range [MPa]
	QA	VPPM-6TA-L-1-F-0L2H	2	0 ... 0.4	0.002 ... 0.2
	QB	VPPM-6TA-L-1-F-0L6H	2	0 ... 0.8	0.006 ... 0.6
	QC	VPPM-6TA-L-1-F-0L10H	2	0 ... 1.1	0.01 ... 1
	QD	VPPM-6TA-L-1-F-0L2H-S1	1	0 ... 0.4	0.002 ... 0.2
	QE	VPPM-6TA-L-1-F-0L6H-S1	1	0 ... 0.8	0.006 ... 0.6
	QF	VPPM-6TA-L-1-F-0L10H-S1	1	0 ... 1.1	0.01 ... 1
	QG	VPPM-8TA-L-1-F-0L2H-C1	2	0 ... 0.4	0.002 ... 0.2
	QH	VPPM-8TA-L-1-F-0L6H-C1	2	0 ... 0.8	0.006 ... 0.6
	QK	VPPM-8TA-L-1-F-0L10H-C1	2	0 ... 1.1	0.01 ... 1
	QL	VPPM-8TA-L-1-F-0L2H-S1C1	1	0 ... 0.4	0.002 ... 0.2
	QM	VPPM-8TA-L-1-F-0L6H-S1C1	1	0 ... 0.8	0.006 ... 0.6
	QN	VPPM-8TA-L-1-F-0L10H-S1C1	1	0 ... 1.1	0.01 ... 1


Soft-start/exhaust valve

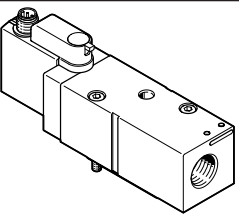Illustration	Code	Type
	–	VABF-S6-1-P5A4S2YE-G12-1T1L-PZ
	–	VABF-S6-1-P5A4S1YE-G12-1T1L-PZ
	–	VABF-S6-1-P5A4S2S-G12-1T1L-PZ
	–	VABF-S6-1-P5A4S1S-G12-1T1L-PZ

Key features – Pneumatic components


Terms related to the proportional-pressure regulator

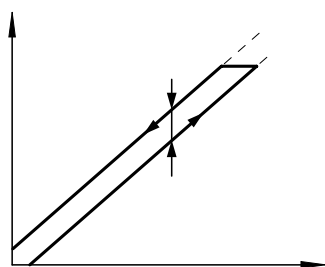Hysteresis




There is always a linear relationship between the setpoint value entered and the pressure output within a certain tolerance. Nevertheless, it makes a difference whether the setpoint value is entered as rising or falling. The difference between the maximum deviations is referred to as hysteresis.

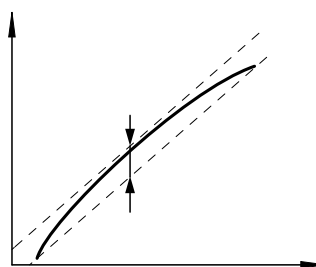Linearity error



A perfectly linear progression of the control characteristic of the output pressure is theoretical. The maximum percentage deviation from this theoretical control characteristic is referred to as the linearity error. The percentage value refers to the maximum output pressure (full scale).

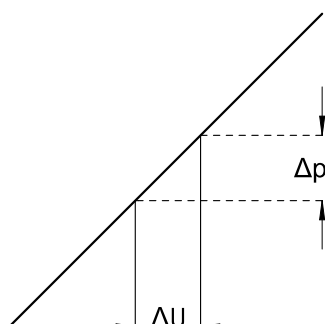Response sensitivity




The response sensitivity of the device determines how precisely one can change, i.e. adjust, a pressure. The smallest setpoint value difference that results in a change in the output pressure is referred to as the response sensitivity. In this case, 0.01 bar.

Repetition accuracy (reproducibility)




The repetition accuracy is the margin within which the fluidic output variable is scattered when the same electrical input signal coming from the same direction is repeatedly adjusted. The repetition accuracy is expressed as a percentage of the maximum fluidic output signal.

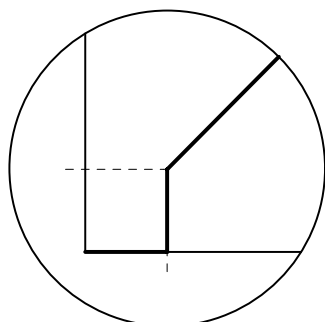Zero point suppression



In practice, there can be a residual voltage or residual current at the setpoint input of the VPPM via the setpoint generator. Zero point suppression is used so the valve is reliably exhausted at a setpoint value of zero.

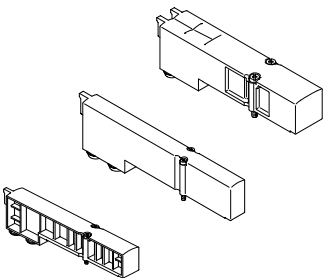Key features – Pneumatic components




Cover plate

Plate without valve function for reserving valve positions on a valve terminal.

Valve and cover plates are attached to the sub-base using two screws.

Valve function		Width [mm]	Description
Code	Circuit symbol		
L	—	10, 14, 20	For valve terminal only: cover plate for valve position

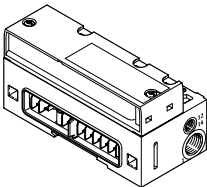

Compressed air supply and exhaust

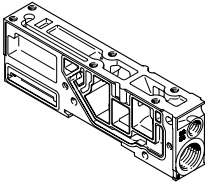
Pneumatic interface

The valve terminal MPA can be supplied with air at one or more points. This ensures that the valve terminal will always have an adequate air supply and exhaust, even with large-scale expansions.

The main supply to the valve terminal is located on the pneumatic interface, which links the electrical and pneumatic parts. Additional provision is made for several supply plates.

Exhausting is either via integrated flat plate silencers or common lines for ducted exhaust air.

These exhausts are located on the pneumatic interface as well as on the supply plates and on the right end plate (VMPA-EPR-G).




Supply plate

When there is a need to increase the air supply, additional supply plates can be provided.


Exhausting is either via integrated flat plate silencers or common lines for ducted exhaust air.

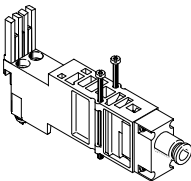In the case of ducted exhaust air, at least one additional supply plate is required, which is used to exhaust the air from the pilot air supply (port 82/84) (when using a right end plate without port 82/84).



Vertical pressure supply plate

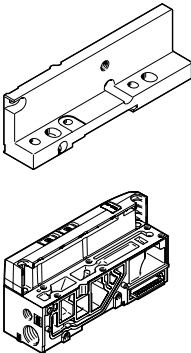The individual compressed air supply of a single valve with a width of 20 mm can be realised using the vertical pressure supply plate VMPA2-VSP-



Right end plate

The exhaust air can be ducted using the right end plate with port 82/84.

Key features – Pneumatic components

Pilot air supply

The port for the main pneumatic supply is located on the pneumatic interface.

The ports differ for the following types of pilot air supply:

- Internal
- External

Internal pilot air supply

Internal pilot air supply can be selected if the required working pressures are between 0.3 and 0.8 MPa.

The pilot air supply is then branched from the working air 1 in the pneumatic interface using an internal connection. Port 12/14 is sealed with a blanking plug.

External pilot air supply

If the supply pressure is less than 0.3 MPa or greater than 0.8 MPa, you must operate your MPA valve terminal with external pilot air supply. In this case, the pilot air is additionally supplied via port 12/14 on the pneumatic interface.



Note

If a gradual pressure build-up in the system using a soft-start valve is chosen, an external pilot air supply should be connected so that the pilot pressure applied during switch-on is already very high.

Pilot air switching valve

The pilot air switching valve supplies the downstream valves in a pressure zone with pilot air (12/14). The pilot air switching valve can be used to implement the safety function "Protection against unexpected start-up".

The compressed air to the pilot air switching valve can be supplied either internally via duct 1 of the valve terminal (or pressure zone) or externally via port 2 of the sub-base on which the pilot air switching valve is located.

In the case of internal pressure supply from duct 1, vacuum operation (in duct 1) is not possible.

When configuring the compressed air supply, please ensure that the pilot air switching valve has a working pressure of 0.3...0.8 MPa.

Like all valves MPA, the pilot air switching valve has a manual override.

Internal pilot air supply

Normal position:

- Pressure is supplied via duct 1.
- Duct 2 on the sub-base is sealed with a blanking plug.
- Operating pressure of 0.3...0.8 MPa required in duct 1.
- In the normal position of the valve, duct 14 is exhausted to atmosphere via port 4 of the sub-base (silencer).

Switching status:

- In the switched position, duct 12/14 of the valve terminal is supplied with pressure from duct 1 via the pilot air switching valve.
- The integrated pressure sensor indicates the presence of pressure in duct 12/14.

External pilot air supply

Normal position:

- Pressure is supplied via duct 2.
- The connection between duct 1 and the valve is closed.
- No restriction on the operating pressure in duct 1.
- In the normal position of the valve, duct 14 is exhausted to atmosphere via port 4 of the sub-base (silencer).

Switching status:

- In the switched position, duct 12/14 of the valve terminal is supplied with pressure from duct 2 via the pilot air switching valve.
- The integrated pressure sensor indicates the presence of pressure in duct 12/14.

Soft-start valve

The soft-start/quick exhaust valve is used for the slow and safe build-up of the supply pressure and quick exhausting of duct 1 of the valve terminal.

Pilot air to the valve terminal can be supplied either via the soft-start valve with internal pilot air or via the various end plate variants with external pilot air.

The switching on process takes place step by step:







- For valves with pilot air supply, the valve switches the full operating pressure to duct 12/14 when the control signal is applied
- The working pressure provided for duct 1 increases slowly; the flow can be adjusted using the flow control screw.

- Once the working pressure in duct 1 reaches half the operating pressure, the soft-start valve switches to full operating pressure at duct 1 of the valve terminal.

Key features – Pneumatic components

Compressed air supply and pilot air supply				Note
Code	Illustration			
	Type of compressed air supply and pilot air supply			
	Pneumatic interface	Supply plate	Right end plate	
S				Internal pilot air supply, flat plate silencer - Pilot air supply is branched internally from port 1 in the pneumatic interface - Exhaust port 3/5 and pilot exhaust port 82/84 via flat plate silencer - For operating pressure in the range 0.3 ... 0.8 MPa
T				External pilot air supply, flat plate silencer - Pilot air supply between 0.3 and 0.8 MPa is connected at port 12/14 - Exhaust port 3/5 and pilot exhaust port 82/84 via flat plate silencer - For operating pressure in the range -0.09 ... +1 MPa (suitable for vacuum)
V				Internal pilot air supply, ducted exhaust air - Pilot air supply is branched internally from port 1 in the pneumatic interface - Exhaust port 3/5: connection to pneumatic interface and supply plate - Pilot exhaust port 82/84: connection to supply plate only - For operating pressure in the range 0.3 ... 0.8 MPa
X				External pilot air supply, ducted exhaust air - Pilot air supply (0.3 ... 0.8 MPa) is connected at port 12/14. - Exhaust port 3/5: connection to pneumatic interface and supply plate - Pilot exhaust port 82/84: connection to supply plate only - For operating pressure in the range -0.09 ... +1 MPa (suitable for vacuum)
Y				Internal pilot air supply, ducted exhaust air via right end plate - Pilot air supply is branched internally from port 1 in the pneumatic interface - Exhaust port 3/5: connection to pneumatic interface and supply plate - Pilot exhaust air 82/84 ducted via right-hand end plate (VMPA-EPR-G) - For operating pressure in the range 0.3 ... 0.8 MPa
Z				External pilot air supply, ducted exhaust air via right end plate - Pilot air supply (0.3 ... 0.8 MPa) is connected at port 12/14. - Exhaust port 3/5: connection to pneumatic interface and supply plate - Pilot exhaust air 82/84 ducted via right-hand end plate (VMPA-EPR-G) - For operating pressure in the range -0.09 ... +1 MPa (suitable for vacuum)

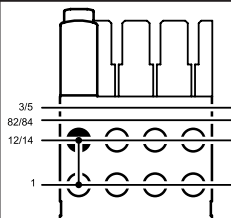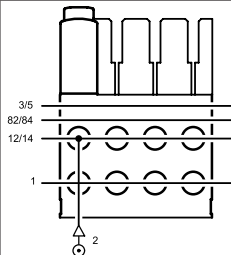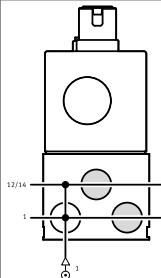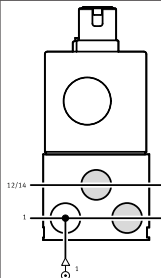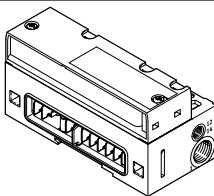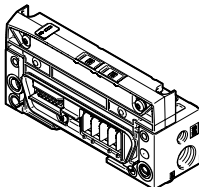Key features – Pneumatic components

Compressed air supply and pilot air supply			
Code	Illustration	Note	
	Type of compressed air supply and pilot air supply		
Pilot air switching valve			
IS, IU		Internal pilot air supply, pilot air switching valve • Pilot air supply is branched internally from port 1 in the pilot air switching valve • Pilot air supply for the pressure zone to the right of the pilot air switching valve • In the unswitched state, duct 12/14 is exhausted via a silencer at port 4 of the pilot air switching valve • For operating pressure in the range 0.3 ... 0.8 MPa • Separating seal to pneumatic interface required • Solenoid exhaust air 84 is discharged into the environment	
ES, EU		External pilot air supply, pilot air switching valve • Pilot air supply is connected externally via port 2 on the pilot air switching valve • Pilot air supply for the pressure zone to the right of the pilot air switching valve • In the unswitched state, duct 12/14 is exhausted via a silencer at port 4 of the pilot air switching valve • For operating pressure in the range 0.3 ... 0.8 MPa • Separating seal to pneumatic interface required • Solenoid exhaust air 84 is discharged into the environment	
Soft-start/exhaust valve			
–		With pilot air supply	
–		Without pilot air supply	
Pneumatic interface			
Code	Pneumatic interface design variants		Note
	Illustration	Type	
M		VMPA-FB-EPL...	• Used together with compressed air supply S, T, V, X • In combination with V or X, the pilot exhaust air must be exhausted at at least one supply plate. With several supply plates, port 82/84 on the final one is open ex works.
M		VMPA-AP-EPL...	• Used together with compressed air supply S, T, V, X • In combination with V or X, the pilot exhaust air must be exhausted at at least one supply plate. With several supply plates, port 82/84 on the final one is open ex works.

Key features – Pneumatic components

Supply plate

Additional supply plates can be used for larger terminals or to create pressure zones.

If several valves are to be operated simultaneously at full flow rate, it is recommended that a supply plate be positioned after every 8 valves (MPA1 or MPA14), or every 4 valves (MPA2).

Supply plates can be configured at any point upstream or downstream of sub-bases.

This applies to the following interfaces:

- MPA with CPX
- MPA with multi-pin plug connection
- MPA with AS-Interface connection
- MPA with CPI connection

MPA with ducted exhaust air

When using a right end plate without port 82/84, it is essential that a supply plate for ducted exhaust air is used. Alternatively, an end plate with port 82/84 (VMPA-EPR-G) can be used for ducted exhaust air. In this case, no supply plate is required.

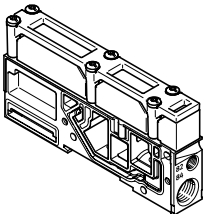
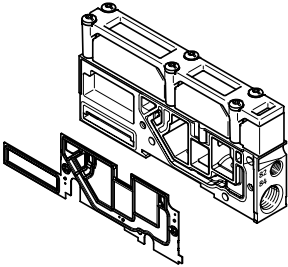
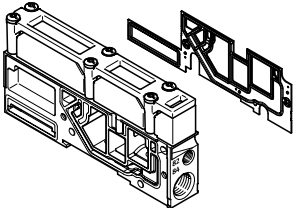
Supply plates contain the ports:

- Compressed air supply (1)
- Exhaust for the pilot air supply (82/84) and pressure compensation
- Exhaust air (3/5)

Depending on your order, the exhaust ducts are either ducted or vented via the flat plate silencer.

The supply plate is configured using the code letter U if no directly adjoining separating seal is required.


If a separating seal (S, T or R) is selected directly to the right or left of the supply plate, then the code letter V or W identifies the position of the left or right separating seal. The code for the separating seal (S, T or R) is placed in front of the code for the supply plate (V or W).

Supply plate (without exhaust plate)			
Code ¹⁾	Illustration	Type	Note
U		VMPA1-...-SP...	Supply plate without separating seal (no R, S or T selected)
V		VMPA1-...-SP...	Supply plate with separating seal on the left, if R, S or T selected
W		VMPA1-...-SP...	Supply plate with separating seal on the right, if R, S or T selected

1) Depending on the air supply code S, T, V, X, the supply plate is equipped with a silencer or an exhaust plate.

Key features – Pneumatic components

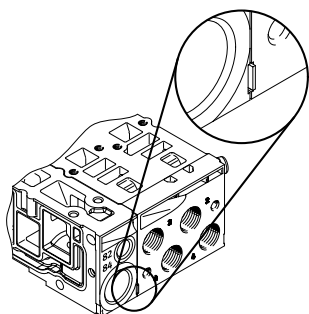Creating pressure zones and separating exhaust air



MPA offers a number of options for creating pressure zones if different working pressures are required. Depending on the electrical interface, up to 16 pressure zones are possible. A pressure zone is created by isolating the internal supply ducts between the sub-bases using an appropriate separating seal or using a separator that is permanently integrated in the sub-base (code I or code III).

Compressed air is supplied and exhausted via a supply plate. The position of the supply plates and separating seals can be freely selected with the valve terminal MPA. Separating seals are integrated ex-works as per your order. Separating seals can be recognised by their coding, even when the valve terminal is assembled.

**Note**

The following must be taken into account for expansion or conversions at a later date:
Different separating seals are required for operation with ducted exhaust air and operation with flat plate silencers.

Creating pressure zones – using a separating seal




Code	For operation with flat plate silencer		For operation with ducted exhaust air		Note
	Illustrated examples	Coding	Illustrated examples	Coding	
–	 VMPA...-DPU		 VMPA...-DP		No duct separation
T	 VMPA...-DPU-P		 VMPA...-DP-P		Duct 1 separated
S	 VMPA...-DPU-PRS		 VMPA...-DP-PRS		Duct 1 and 3/5 separated
R	 VMPA...-DPU-RS		 VMPA...-DP-RS		Duct 3/5 separated

Creating pressure zones – using a separating seal

Code	For operation with pilot air switching valve		Note
	Illustrated examples	Coding	
K	 VMPA...-K		- Seal with duct separation 12/14 and 1, 3, 5 - Coding with yellow mark
N ¹⁾	 VMPA...-N		- Seal with duct separation 12/14 - Coding with black mark

1) Only in combination with additional feed/supply plate

Key features – Pneumatic components

Creating pressure zones – via sub-base			Note
Code	For operation with flat plate silencer or with ducted exhaust air		
	Illustrated examples	Coding	
I			Duct 1 separated (short mark)
III			Duct 1 and 3/5 separated (long mark)

**Note**

Duct separation cannot be removed at a later date and takes place in the centre of the sub-base:

- Between valve 2 and 3 for width 10 mm
- Between valve 2 and 3 for width 14 mm
- Between valve 1 and 2 for width 20 mm


Key features – Pneumatic components

Examples: Compressed air supply and pilot air supply

Internal pilot air supply, flat plate silencer

Pneumatic supply to the valve terminal:
code S

The illustration on the right shows an example of the configuration and connection of the air supply with internal pilot air supply. Port 12/14 on the pneumatic interface or on the electrical interface (multi-pin) is tightly sealed. Ports 3/5 and 82/84 are exhausted via the flat plate silencers. Port 82/84 is tightly sealed. Separating seals can optionally be used to create pressure zones.

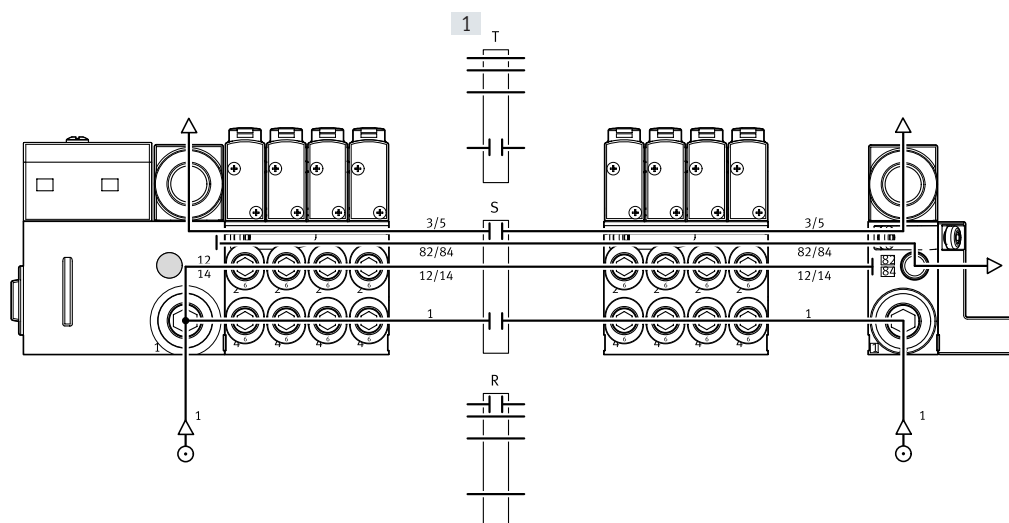


[1] Optional separating seal

External pilot air supply, flat plate silencer

Pneumatic supply to the valve terminal:
code T

The illustration on the right shows an example of how the compressed air supply is configured and connected when using external pilot air supply. Port 12/14 on the pneumatic interface or the electrical interface (multi-pin) is therefore equipped with a fitting. Ports 3/5 and 82/84 are exhausted via the flat plate silencers. Port 82/84 is tightly sealed. Separating seals can optionally be used to create pressure zones.

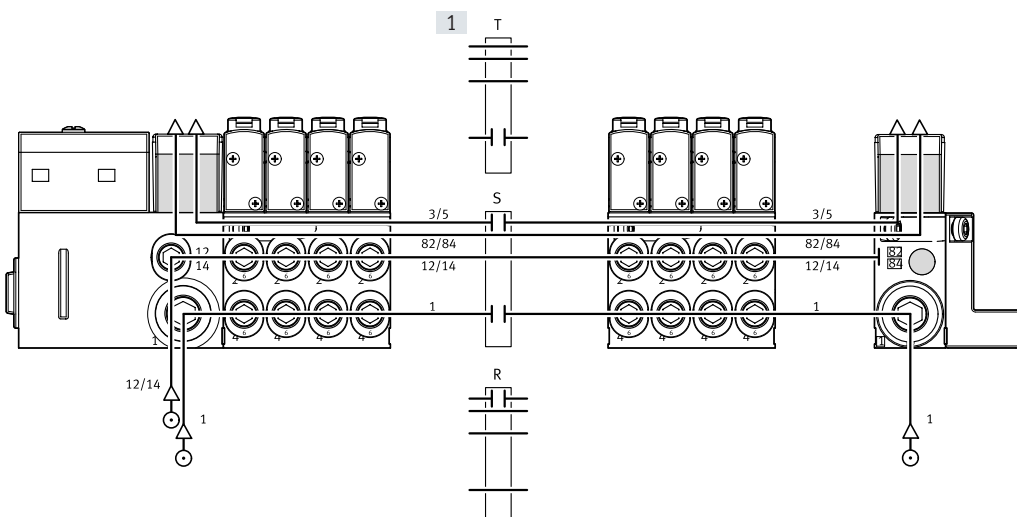

[1] Optional separating seal


Key features – Pneumatic components

Examples: Compressed air supply and pilot air supply

Internal pilot air supply, ducted exhaust air

Pneumatic supply to the valve terminal:
code V

The illustration on the right shows an example of the configuration and connection of the compressed air supply with internal pilot air supply. Port 12/14 on the pneumatic interface or on the electrical interface (multi-pin) is tightly sealed. Exhaust ports 3/5 and 82/84 are exhausted via the appropriate connections. Separating seals can optionally be used to create pressure zones.

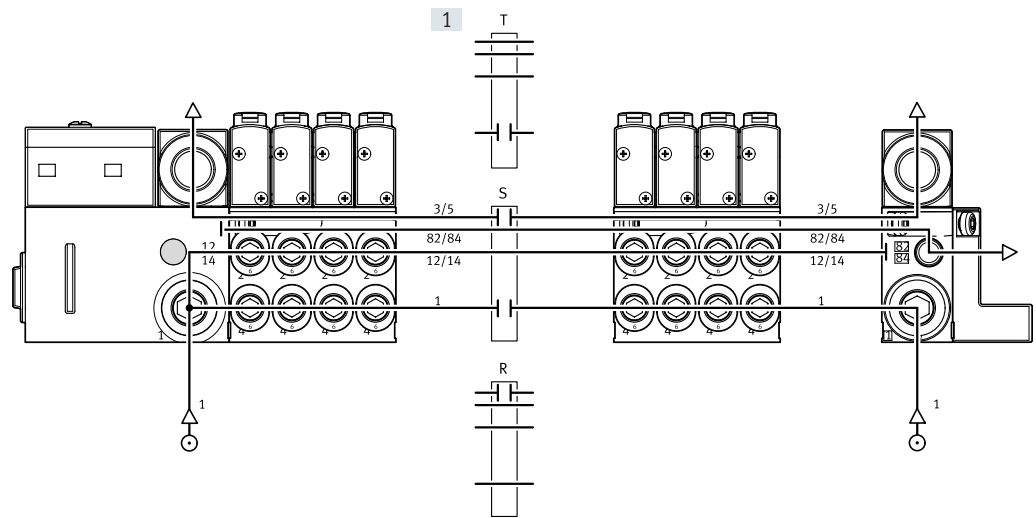


[1] Optional separating seal

External pilot air supply, ducted exhaust air

Pneumatic supply to the valve terminal:
code X

The illustration on the right shows an example of the configuration and connection of the compressed air supply in the case of external pilot air supply. Port 12/14 on the pneumatic interface or the electrical interface (multi-pin) is therefore equipped with a fitting. Exhaust ports 3/5 and 82/84 are exhausted via the appropriate connections. Separating seals can optionally be used to create pressure zones.

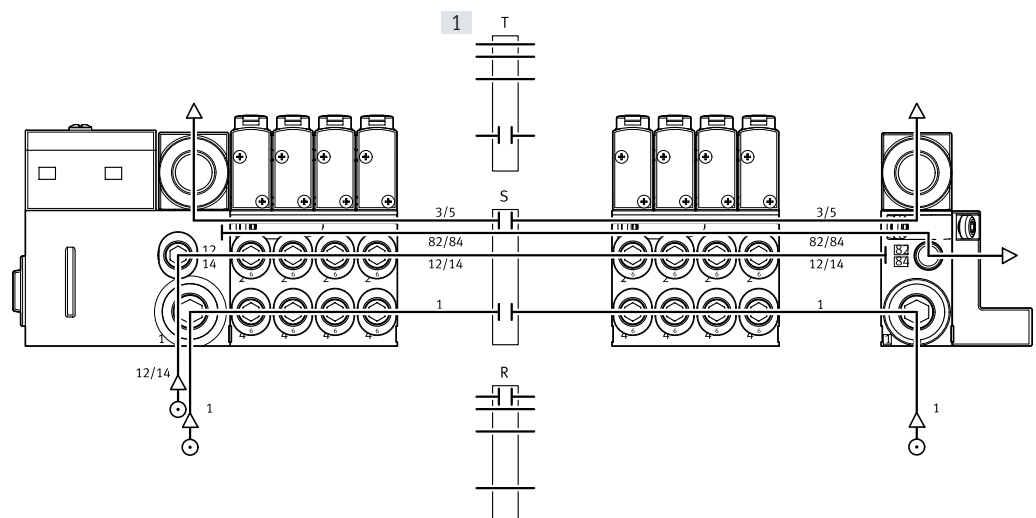

[1] Optional separating seal


Key features – Pneumatic components

Examples: Compressed air supply and pilot air supply

Internal pilot air supply, ducted exhaust air 82/84 via right end plate

Pneumatic supply to the valve terminal:
code Y

The illustration on the right shows an example of the configuration and connection of the compressed air supply with internal pilot air supply. Port 12/14 on the pneumatic interface or on the electrical interface (multi-pin) is tightly sealed. The exhaust port 3/5 is exhausted via the corresponding ports. The exhaust air from port 82/84 is ducted via the right end plate (VMPA-EPR-G). In this case, there is no need for a power supply module for exhausting the ducted exhaust air 82/84. Separating seals can optionally be used to create pressure zones.

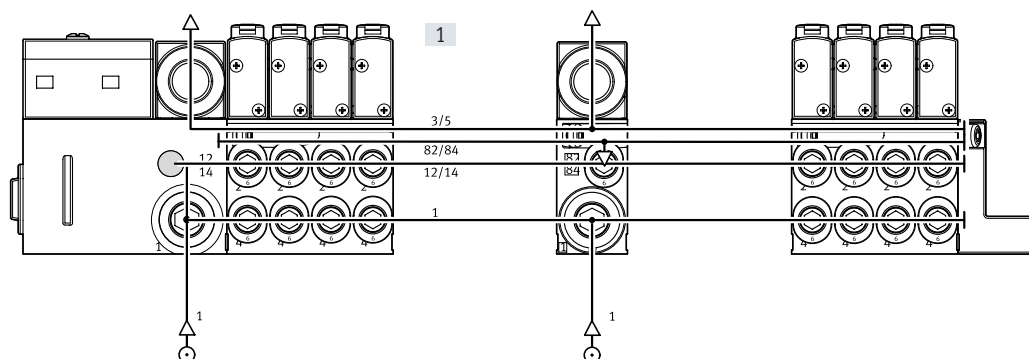


[1] Optional separating seal

External pilot air supply, ducted exhaust air 82/84 via right end plate

Pneumatic supply to the valve terminal:
code Z

The illustration on the right shows an example of the configuration and connection of the compressed air supply in the case of external pilot air supply. Port 12/14 on the pneumatic interface or the electrical interface (multi-pin) is therefore equipped with a fitting. The exhaust port 3/5 is exhausted via the corresponding ports. The exhaust air from port 82/84 is ducted via the right end plate (VMPA-EPR-G). In this case, there is no need for a power supply module for exhausting the ducted exhaust air 82/84. Separating seals can optionally be used to create pressure zones.

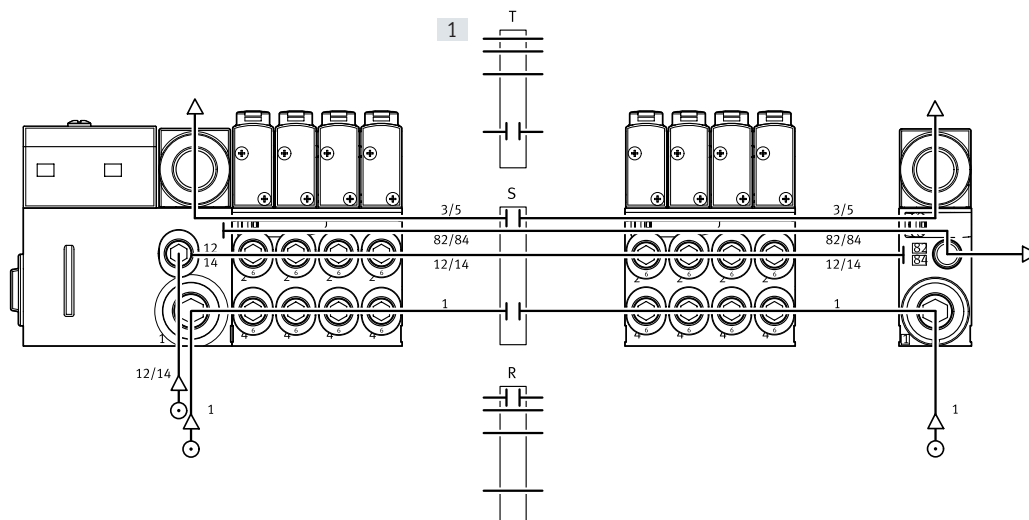

[1] Optional separating seal

Key features – Pneumatic components


Examples: Compressed air supply and pilot air supply

Pilot air switching valve for internal pilot air supply

Pneumatic supply to the valve terminal with internal pilot air.

Second pressure zone with pilot air switching valve with internal pilot air supply: code IU, IS

The illustration on the right shows an example of the configuration and connection of the compressed air supply with internal pilot air supply. Port 12/14 on the pneumatic interface or on the electrical interface (multi-pin) and on the pilot air switching valve is tightly sealed. Exhaust ports 3/5 and 82/84 are exhausted via the appropriate connections. The separating seal is essential when using the pilot air switching valve. Pilot air supply for the pressure zone to the right of the pilot air switching valve can be individually switched off by the pilot air switching valve of duct 1 of this pressure zone.

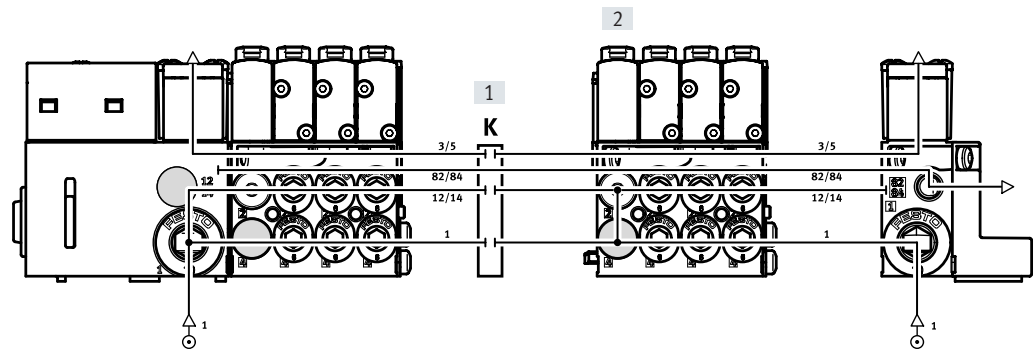

- [1] Separating seal, specifically for pilot air switching valve with separation of duct 12/14
- [2] Pilot air switching valve for internal pilot air supply

Key features – Pneumatic components


Examples: Compressed air supply and pilot air supply

Pilot air switching valve for external pilot air supply

Pneumatic supply to the valve terminal with external pilot air.

Second pressure zone with pilot air switching valve with external pilot air supply: code EU, ES

The illustration on the right shows an example of the configuration and connection of the compressed air supply in the case of external pilot air supply. Port 12/14 on the pneumatic interface or the electrical interface (multi-pin) is therefore equipped with a fitting. Exhaust ports 3/5 and 82/84 are exhausted via the appropriate connections. A separating seal with separation of duct 12/14 is essential when using the pilot air switching valve. Pilot air supply for the pressure zone to the right of the pilot air switching valve can be individually switched off by the pilot air switching valve. The pilot air switching valve obtains the compressed air supply for the pilot air from port 2 of the sub-base.

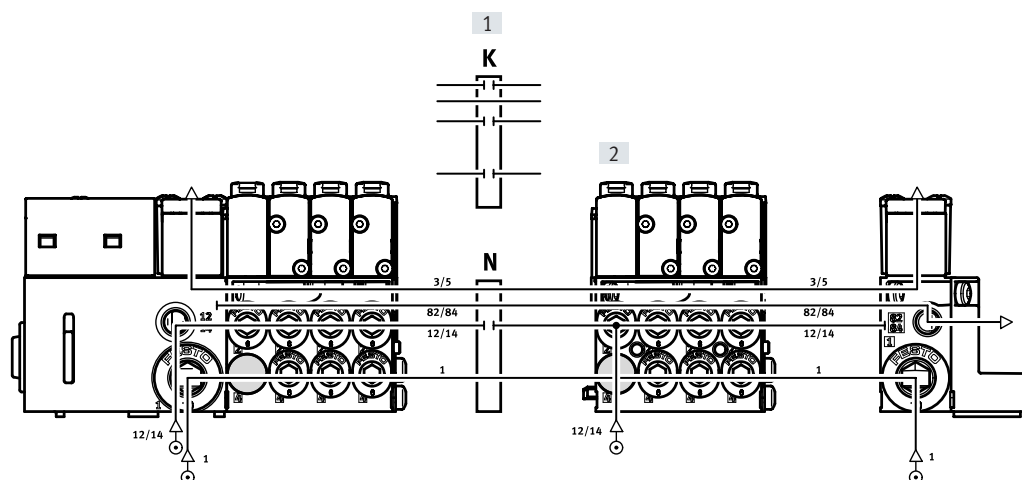


- [1] Separating seal, specifically for pilot air switching valve with separation of duct 12/14
- [2] Pilot air switching valve for external pilot air supply

Key features – Pneumatic components


Examples: Compressed air supply and pilot air supply

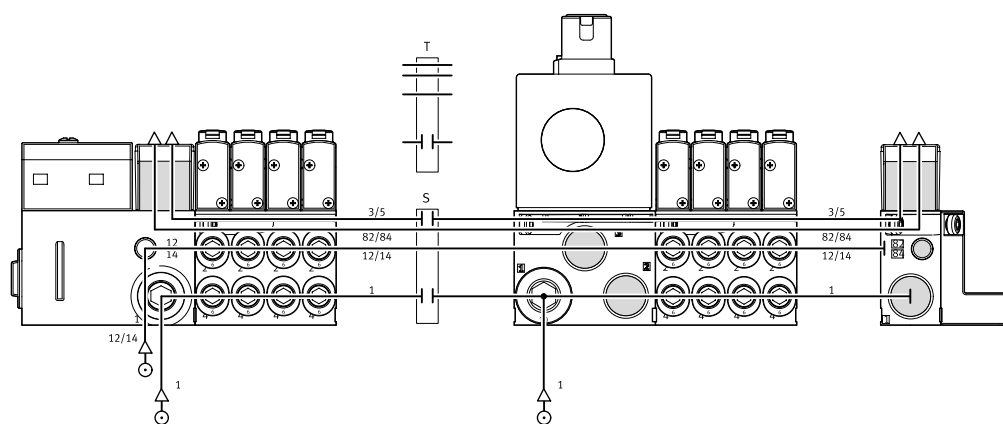Soft-start/quick exhaust valve with pilot air supply



Examples: Compressed air supply and pilot air supply

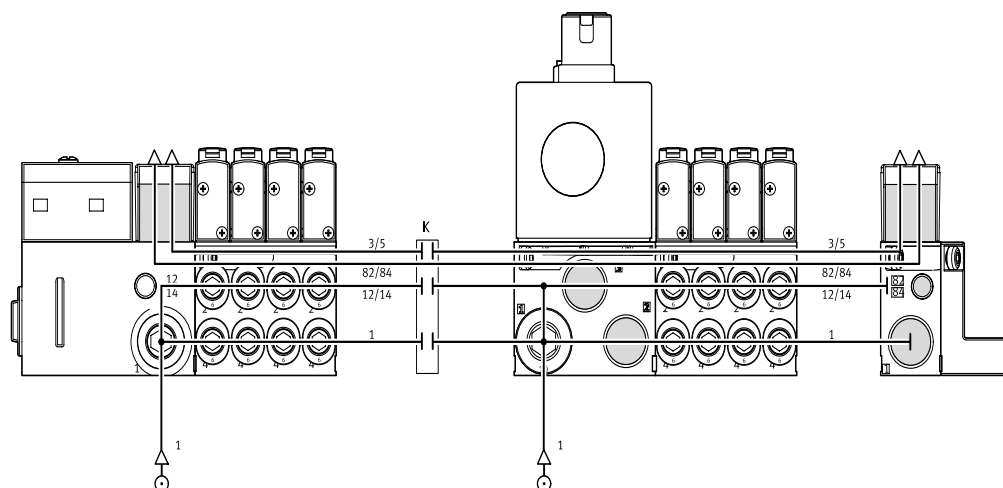Soft-start/quick exhaust valve without pilot air supply




Key features – Pneumatic components

Examples: Creating pressure zones

MPA with CPX terminal connection

The illustration shows an example of the configuration and connection of three pressure zones using separating seals using external pilot air supply.

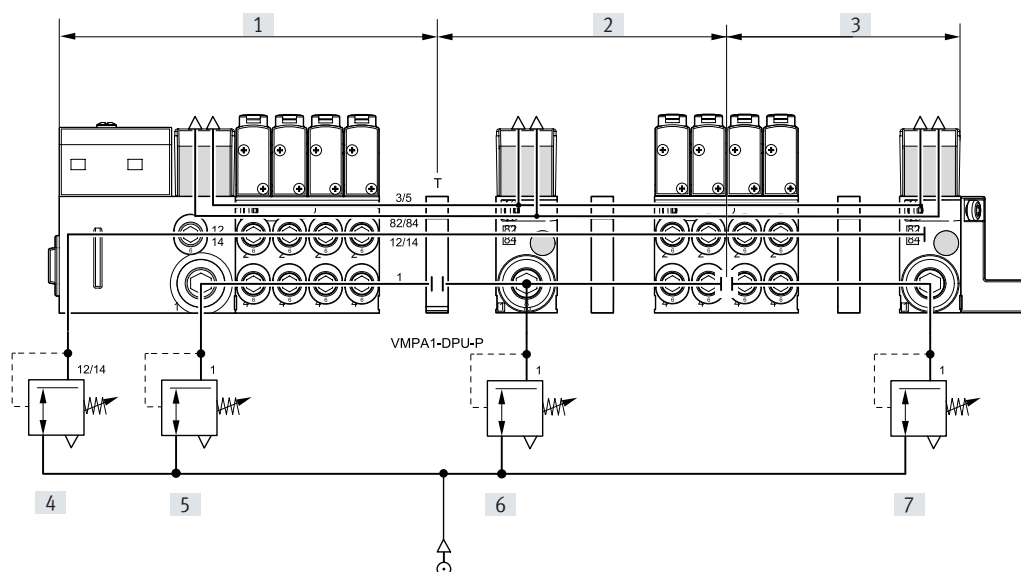
- [1] Zone 1
- [2] Zone 2
- [3] Zone 3
- [4] Pilot air supply
- [5] P1
- [6] P2
- [7] P3



MPA with multi-pin plug connection

The illustration shows an example of the configuration and connection of the pressure zones using external pilot air supply.

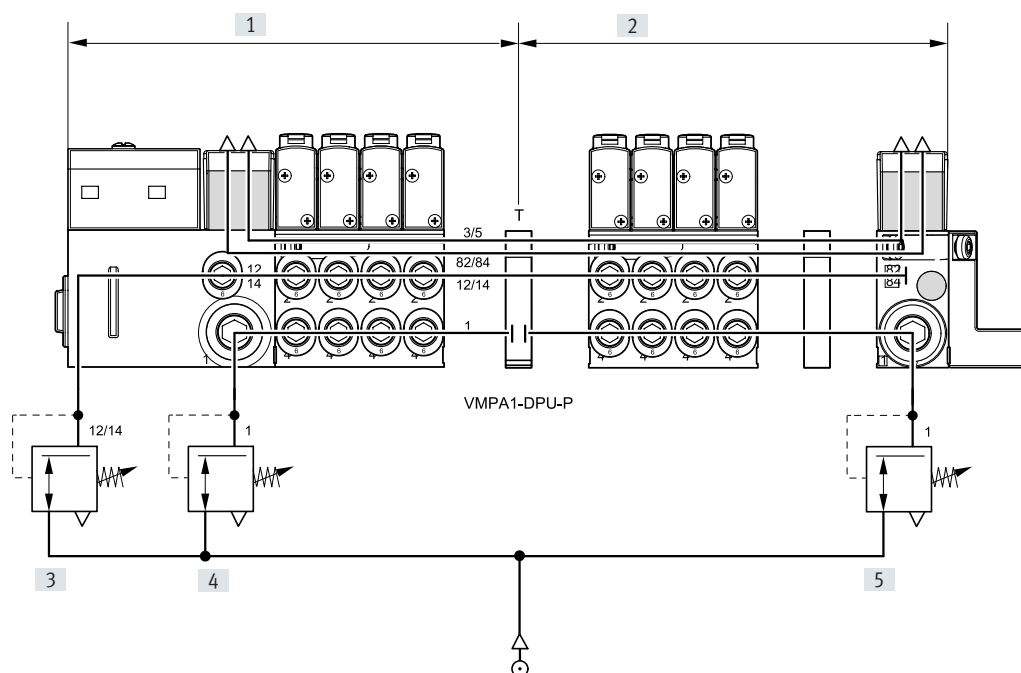- [1] Zone 1
- [2] Zone 2
- [3] Pilot air supply
- [4] P1
- [5] P2




Key features – Pneumatic components

Examples: Creating pressure zones

MPA with CPX-AP-A terminal connection

The illustration shows an example of the configuration and connection of three pressure zones using separating seals using external pilot air supply.

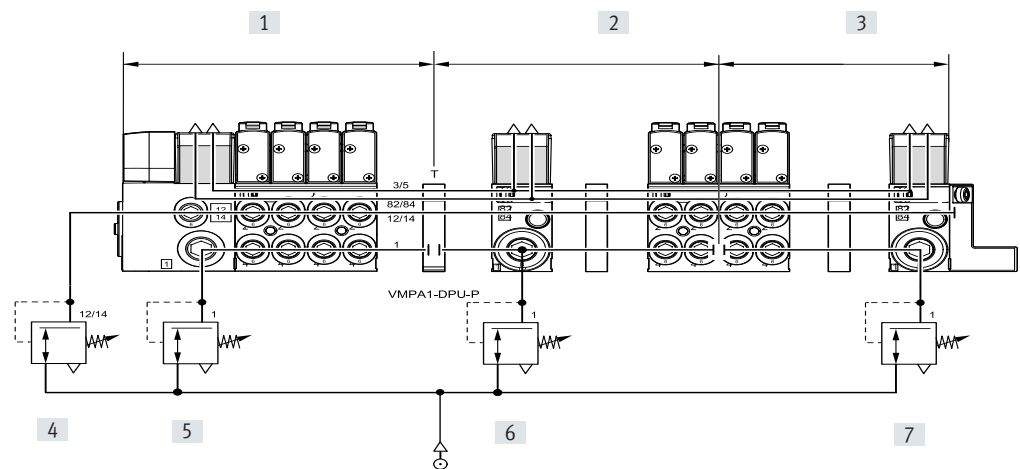- [1] Zone 1
- [2] Zone 2
- [3] Zone 3
- [4] Pilot air supply
- [5] P1
- [6] P2
- [7] P3



Key features – Pneumatic components

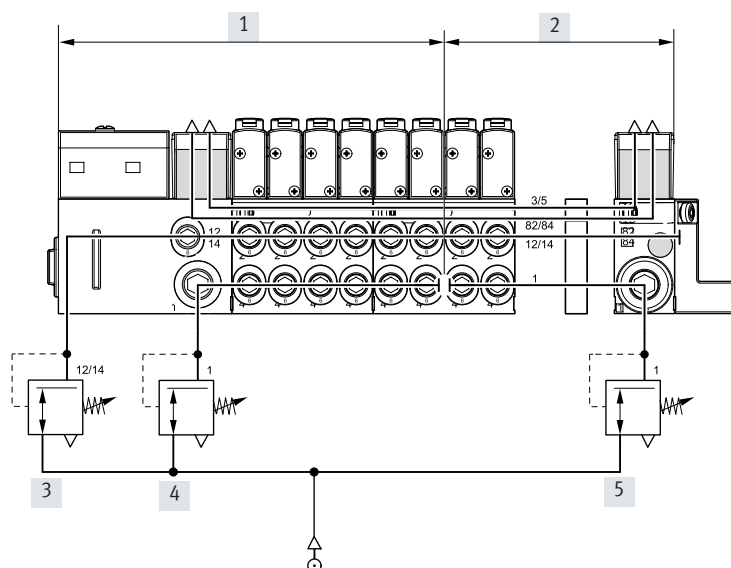
Examples: Creating pressure zones

Sub-base with pressure zone separation in duct 1

Another option for pressure zone separation can be achieved by using sub-bases with pressure zone separation. The illustration on the right shows the variant with pressure zone separation in duct 1.

Pilot air supply

- [1] Zone 1
- [2] Zone 2
- [3] Pilot air supply
- [4] P1
- [5] P2




Sub-base with pressure zone separation in duct 1 and duct 3/5

The illustration on the right shows the variant with pressure zone separation in duct 1 and duct 3/5.


Pilot air supply

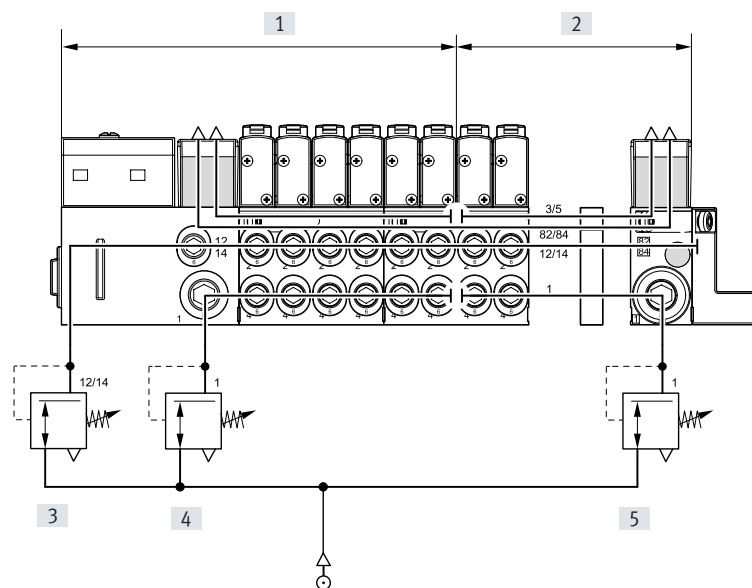- [1] Zone 1
- [2] Zone 2
- [3] Pilot air supply
- [4] P1
- [5] P2



Key features – Pneumatic components

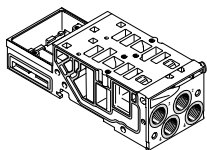Sub-base



MPA is based on a modular system consisting of sub-bases and valves. The sub-bases are screwed together, thus forming the support system for the valves. They contain the ducts for supplying compressed air to and exhausting the valve terminal as well as the working





ports for the pneumatic drives for each valve. Each sub-base is connected to the next using three screws. Individual valve terminal sections can be isolated and further blocks can be inserted by loosening these screws. This ensures that

the valve terminal can be rapidly and reliably extended.

Sub-base variants					
Code	Illustration	Type	Width	Number of valve positions (solenoid coils)	Note
			[mm]		
Sub-base for multi-pin plug/fieldbus connection					
A, C ¹⁾		VMPA1-FB-AP-4-1	10	4 (8/4 ¹⁾)	Working ports (2, 4) on the sub-base • Connection sizes: MPA1: M7, QS4, QS6 • Code I: duct 1 separated in the sub-base • Code III: duct 1 and duct 3/5 separated in the sub-base
AI, CI ¹⁾		VMPA1-FB-AP-4-1-T1			
AIII, CIII ¹⁾		VMPA1-FB-AP-4-1-S1			
E, F ¹⁾		VMPA14-FB-AP-4-1	14	4 (8/4 ¹⁾)	Working ports (2, 4) on the sub-base • Connection sizes MPA14: G1/8, QS6, QS8 • Code I: duct 1 separated in the sub-base • Code III: duct 1 and duct 3/5 separated in the sub-base
EI, FI ¹⁾		VMPA14-FB-AP-4-1-T1			
EIII, FIII ¹⁾		VMPA14-FB-AP-4-1-S1			
B, D ¹⁾		VMPA2-FB-AP-2-1	20	2 (4/2 ¹⁾)	Working ports (2, 4) on the sub-base • Connection sizes MPA2: G1/8, QS6, QS8 • Code I: duct 1 separated in the sub-base • Code III: duct 1 and duct 3/5 separated in the sub-base
BI, DI ¹⁾		VMPA2-FB-AP-2-1-T0			
BIII, DIII ¹⁾		VMPA2-FB-AP-2-1-S0			
Sub-base for pilot air switching valve, for fieldbus connection					
QA		VMPA1-AP-4-EMG-8-S	10	1+3 (2+6/3) Pilot air switching valve + valves	Working ports (2, 4) on the sub-base • Connection sizes: MPA1: M7, QS4, QS6 • Including electronics module
		VMPA1-AP-4-EMG-D2-8-S			
QE		VMPA14-AP-4-EMG-8-S	14	1+3 (2+6/3) Pilot air switching valve + valves	Working ports (2, 4) on the sub-base • Connection sizes MPA14: G1/8, QS6, QS8 • Including electronics module
		VMPA14-AP-4-EMG-D2-8-S			


1) Only possible with multi-pin plug connection

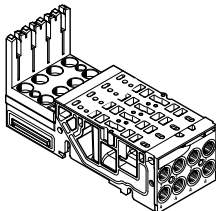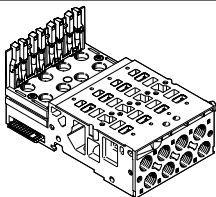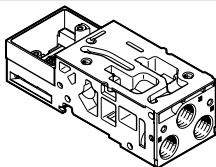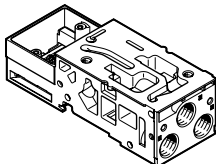Key features – Pneumatic components

Sub-base variants					
Code	Illustration	Type	Width	Number of valve positions (solenoid coils)	Note
			[mm]		
Sub-base for pilot air switching valve, for multi-pin plug connection					
QA		VMPA-1-AP-4-EMM-8-SK	10	1+3 (2+6/3) Pilot air switching valve + valves	Working ports (2, 4) on the sub-base • Connection sizes: MPA1: M7, QS4, QS6 • Including electronics module
		VMPA1-AP-4-EMM-8-SL			
QE		VMPA14-AP-4-EMM-8-SK	14	1+3 (2+6/3) Pilot air switching valve + valves	Working ports (2, 4) on the sub-base • Connection sizes MPA14: G1/8, QS6, QS8 • Including electronics module
		VMPA14-AP-4-EMM-8-SL			
Sub-base for soft-start valve, for multi-pin connection					
QR, QS, QT, QU for multi-pin/fieldbus interface		VMPA-FB-AP-1-P5	–	1 soft-start/quick exhaust valve	Pressure supply connection G1/4 • 1-P5 has no electronic module • 1-EMG-P5 has an electronic module for a fieldbus interface • 1-EMM-P5-SK has an electronic module for multi-pin plug connection, short link • 1-EMM-P5-SL has an electronic module for multi-pin plug connection, long link
		VMPA-FB-AP-1-EMG-P5			
		VMPA-FB-AP-1-EMM-P5-SK			
		VMPA-FB-AP-1-EMM-P5-SL			
Sub-base plate for soft-start valve, for fieldbus interface					
QR, QS, QT, QU for multi-pin/fieldbus interface PR, PS, PT, PU for fieldbus interface		VMPA-FB-AP-1-P5	–	1 soft-start/quick exhaust valve	Pressure supply connection G1/4 • 1-P5 has no electronic module • 1-EMG-P5 has an electronic module for a fieldbus interface • 1-EMM-P5-SK has an electronic module for multi-pin plug connection, short link • 1-EMM-P5-SL has an electronic module for multi-pin plug connection, long link
		VMPA-FB-AP-1-EMG-P5			
		VMPA-FB-AP-1-EMM-P5-SK			
		VMPA-FB-AP-1-EMM-P5-SL			

Key features – Pneumatic components

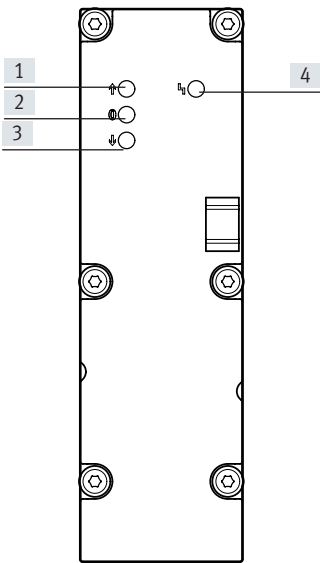Pressure sensor












- [1] Red LED: pressure exceeded
- [2] Green LED: pressure maintained
- [3] Red LED: pressure not reached
- [4] Red LED: displaying collective error

The pressure sensor uses three LEDs to indicate whether the applied pressure exceeds, conforms to or hasn't reached the setpoint value. An additional LED indicates collective errors (limit exceeded or not reached). The limits for pressure monitoring are set through parameterisation. The pressure sensor plate can be parameterised via the PLC or the interface for CPX-FMT.

Alternatively, the pressure in the exhaust duct (3/5) and the process pressure (external) can be measured. Pressure measurement in the exhaust duct is used for monitoring the operating pressure during reverse operation (supply to 3/5).

Pressure sensor versions			
Code	Illustration	Type	Use
PE		VMPA-FB-PS-1	Monitoring the operating pressure in duct 1
PF		VMPA-FB-PS-3/5	Monitoring the pressure in exhaust ducts 3 and 5 (Monitoring the exhaust performance or monitoring the pressure for a reversibly operated valve terminal)
PG		VMPA-FB-PS-P1	Monitoring an external process pressure





Key features – Pneumatic components

Electrical interface versions					
Code	Illustration	Type	Width [mm]	Number of valve positions (solenoid coils)	Note
Electronics module for multi-pin plug (MPM)					
A, C		VMPA1-MPM-EMM-8 VMPA1-MPM-EMM-4	10	4 (8) 4 (4)	Each solenoid coil is assigned to a specific pin of the multi-pin plug for the valves to be actuated. Regardless of whether valve positions are fitted with cover plates or valves, they are used to control: • One address for a single coil • Two addresses for a double coil
E, F		VMPA14-MPM-EMM-8 VMPA14-MPM-EMM-4	14	4 (8) 4 (4)	
B, D		VMPA2-MPM-EMM-4 VMPA2-MPM-EMM-2	20	2 (4) 2 (2)	
Electronics module for fieldbus with standard diagnostics					
A, H		VMPA1-FB-EMS-8 VMPA1-FB-EMG-8	10	4 (8)	The electronics module includes serial communication and facilitates: • Transmission of switching information • Actuation of up to 8 solenoid coils • Position-based diagnostics • Separate voltage supply for valves • Transmission of status, parameter and diagnostic data There are different versions: • Without separate circuit (VMPA...-FB-EMS-...) • With separate circuit (VMPA...-FB-EMG-...) Diagnostic function: • Fault: valve load voltage
E, H		VMPA14-FB-EMS-8 VMPA14-FB-EMG-8	14	4 (8)	
B, QB, H		VMPA2-FB-EMS-4 VMPA2-FB-EMG-4	20	2 (4)	
Electronics module for fieldbus with enhanced diagnostic function					
A, H		VMPA1-FB-EMS-D2-8 VMPA1-FB-EMG-D2-8	10	4 (8)	The electronics module with enhanced diagnostic function includes the same functions as the electronics module with standard diagnostics. The diagnostic function is further enhanced: • Fault: valve load voltage • Fault: wire break (open load) • Fault: short-circuit valve load voltage • Message: condition monitoring
E, H		VMPA14-FB-EMS-D2-8 VMPA14-FB-EMG-D2-8	14	4 (8)	
B, QB, H		VMPA2-FB-EMS-D2-4 VMPA2-FB-EMG-D2-4	20	2 (4)	




 Note

- Multi-pin with modular links
- Sub-bases VMPA1, VMPA14 and VMPA2 can be combined as required
- Positive- or negative-switching control is possible (mixed operation is not permitted)
- Double solenoid valves cannot be mounted on single solenoid electronics modules
- Single solenoid valves can be mounted on double solenoid electronics modules

Key features – Pneumatic components

Electrical interface versions					
Code	Illustration	Type	Width [mm]	Number of valve positions (solenoid coils)	Note
Electronics module for pilot air switching valve, for fieldbus					
—		VMPA1-FB-EMG-8-S	10	1+3 (2+6/3) Pilot air switching valve + valves	The electronics module includes serial communication and facilitates: • Transmission of switching information • Actuation of 1 pilot air switching valve plus up to 3 further valves (with max. 6 solenoid coils) • Position-based diagnostics • Separate voltage supply for valves • Transmission of status, parameter and diagnostic data • With separate circuit
—		VMPA1-FB-EMG-D2-8-S			The electronics module with enhanced diagnostics function includes the same functions as the electronics module with standard diagnostics. The diagnostics function is further enhanced: • Fault: valve load voltage • Fault: wire break (open load) • Fault: short-circuit valve load voltage • Message: condition monitoring • Actuation of 1 pilot air switching valve plus 3 further valves (with max. 6 solenoid coils)
—		VMPA14-FB-EMG-8-S	14	1+3 (2+6/3) Pilot air switching valve + valves	The electronics module includes serial communication and facilitates: • Transmission of switching information • Actuation of 1 pilot air switching valve plus up to 3 further valves (with max. 6 solenoid coils) • Position-based diagnostics • Separate voltage supply for valves • Transmission of status, parameter and diagnostic data • With separate circuit
—		VMPA14-FB-EMG-D2-8-S			The electronics module with enhanced diagnostics function includes the same functions as the electronics module with standard diagnostics. The diagnostics function is further enhanced: • Fault: valve load voltage • Fault: wire break (open load) • Fault: short-circuit valve load voltage • Message: condition monitoring • Actuation of 1 pilot air switching valve plus 3 further valves (with max. 6 solenoid coils)
Electronic module for soft-start valve, for multi-pin					
—		VMPA1-MPM-EMM-P5	—	1 soft-start/quick exhaust valve (2)	• Electronic module for actuating a soft-start/quick exhaust valve via multi-pin
Electronic module for soft-start valve, for fieldbus					
—		VMPA1-FB-EMG-P5	—	1 soft-start/quick exhaust valve (2)	• Electronic module for actuating a soft-start/quick exhaust valve via fieldbus

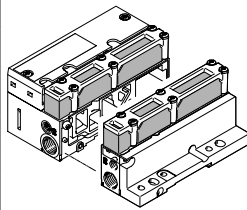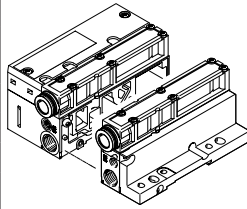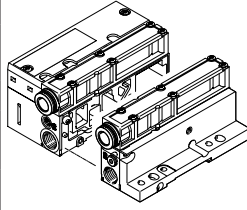Key features – Pneumatic components

Supply and exhaust ports							
Code		Connection		Designation	Code L Push-in connector Large	Code K Push-in connector Small	Code D Thread for supply
S		Internal pilot air supply, silencer					
		1	Working air/vacuum supply	Push-in fitting	QS-G1/4-10-I	QS-G1/4-8-I	G1/4
		3/5	Exhaust air	Flat plate silencer	–	–	–
		12/14	Pilot air supply	–	–	–	–
		82/84	Pilot exhaust air	Flat plate silencer	–	–	–
			Pressure compensation port	Exhausts via silencer to atmosphere			
T		External pilot air supply, silencer					
		1	Working air/vacuum supply	Push-in fitting	QS-G1/4-10-I	QS-G1/4-8-I	G1/4
		3/5	Exhaust air	Flat plate silencer	–	–	–
		12/14	Pilot air supply	Push-in fitting	QSM-M7-6-I	QSM-M7-6-I	M7
		82/84	Pilot exhaust air	Flat plate silencer	–	–	–
			Pressure compensation port	Exhausts via silencer to atmosphere			
V		Internal pilot air supply, ducted exhaust air					
		1	Working air/vacuum supply	Push-in fitting	QS-G1/4-10-I	QS-G1/4-8-I	G1/4
		3/5	Exhaust air	Push-in fitting	QS-10	QS-10	QS-10
		12/14	Pilot air supply	–	–	–	–
		82/84	Pilot exhaust air	Push-in fitting	QSM-M7-6-I	QSM-M7-6-I	M7
			Pressure compensation port	Exhausts into duct 82/84			
X		External pilot air supply, ducted exhaust air					
		1	Working air/vacuum supply	Push-in fitting	QS-G1/4-10-I	QS-G1/4-8-I	G1/4
		3/5	Exhaust air	Push-in fitting	QS-10	QS-10	QS-10
		12/14	Pilot air supply	Push-in fitting	QSM-M7-6-I	QSM-M7-6-I	M7
		82/84	Pilot exhaust air	Push-in fitting	QSM-M7-6-I	QSM-M7-6-I	M7
			Pressure compensation port	Exhausts into duct 82/84			
Y		Internal pilot air supply, ducted exhaust air via right end plate (VMPA-EPR-G)					
		1	Working air/vacuum supply	Push-in fitting	QS-G1/4-10-I	QS-G1/4-8-I	G1/4
		3/5	Exhaust air	Push-in fitting	QS-10	QS-10	QS-10
		12/14	Pilot air supply	–	–	–	–
		82/84	Pilot exhaust air	Push-in fitting	QSM-M5-3-I	QSM-M5-3-I	M5
			Pressure compensation port	Exhausts into duct 82/84			
Z		External pilot air supply, ducted exhaust air via right end plate (VMPA-EPR-G)					
		1	Working air/vacuum supply	Push-in fitting	QS-G1/4-10-I	QS-G1/4-8-I	G1/4
		3/5	Exhaust air	Push-in fitting	QS-10	QS-10	QS-10
		12/14	Pilot air supply	Push-in fitting	QSM-M7-6-I	QSM-M7-6-I	M7
		82/84	Pilot exhaust air	Push-in fitting	QSM-M5-3-I	QSM-M5-3-I	M5
			Pressure compensation port	Exhausts into duct 82/84			

Key features – Mounting

Valve terminal mounting

Sturdy terminal mounting via:

- Four through-holes for wall mounting
- Additional mounting brackets
- DIN rail mounting

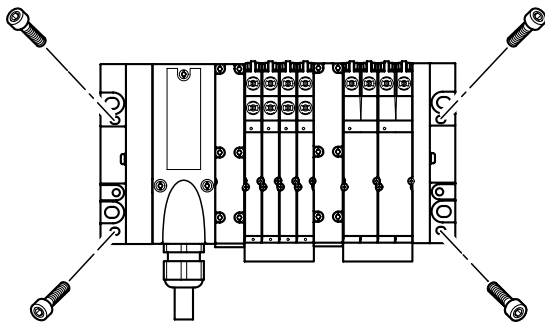


Note

When wall mounting valve terminals MPA with more than 4 sub-bases, use additional mounting brackets type VMPA-BG-RW to prevent damaging the valve terminal. The mounting

brackets can be mounted on the pneumatic supply plates.


Wall mounting – Multi-pin plug connection, AS-Interface and CPI connection



The MPA valve terminal is screwed onto the mounting surface using four M4 or M6 screws. The mounting holes

are on the pneumatic interface and on the right end plate. Optional mounting brackets are also available.

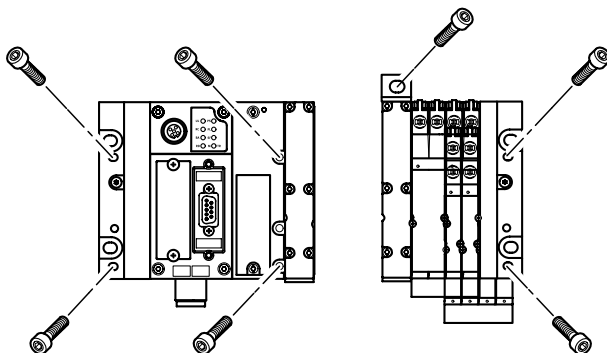
Wall mounting – Fieldbus connection



The MPA valve terminal is screwed onto the mounting surface using six M4 or M6 screws. The mounting holes are on the left end plate (CPX) and on the right end plate MPA.

The pneumatic interface also provides further mounting holes as well as optional mounting brackets.

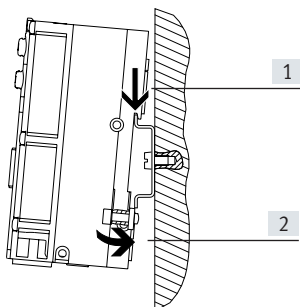DIN rail mounting



The valve terminal MPA is hooked onto the DIN rail a arrow [1].

The valve terminal MPA is then swivelled onto the DIN rail and secured in place with the clamping piece a arrow [2].

The following MPA mounting kit is required for DIN rail mounting of the valve terminal:

- CPX-CPA-BG-NRH

This enables the valve terminal to be mounted on a DIN rail to EN 60715.



Note

More information about mounting solenoid valves on individual sub-bases can be found at
→ VMPA1

Key features – Display and operation

Display and operation

Every solenoid coil is assigned to an LED that indicates its signal status.

- Indicator 12 shows the signal status of the coil for output 2
- Indicator 14 shows the signal status of the coil for output 4

Manual override

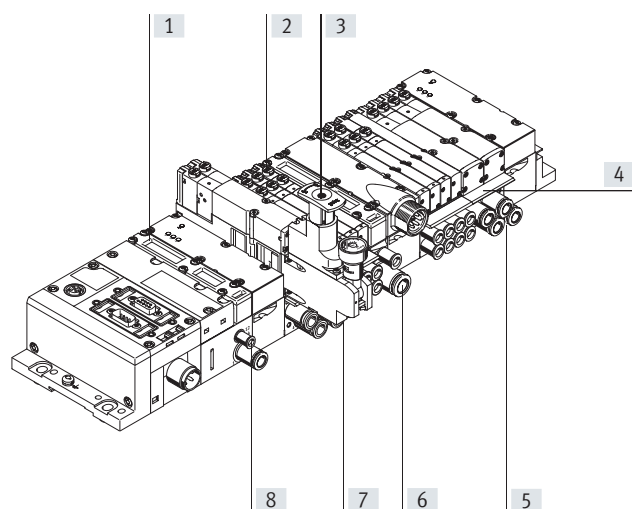
The manual override (MO) enables the valve to be switched when not electrically activated or energised.

The valve is switched by pushing the manual override. The set switching status can also be locked by turning the manual override (code R).

Alternatives:

- The cover cap (code N or as an accessory) prevents the manual override from being locked. The manual override can then only be activated by pushing it.
- The cover cap (code V or as an accessory) can prevent the manual override from being accidentally activated.
- The cover cap (code Y or as an accessory) can be used to operate the manual override in detenting mode without additional tools.

Pneumatic connection and control elements




- [1] Flat plate silencer for exhaust port 3/5
- [2] Manual override (for each pilot solenoid coil, non-detenting or non-detenting/detenting)
- [3] Adjusting knob for optional pressure regulator plate
- [4] Inscription label holder for sub-base
- [5] Working ports 2 and 4, per valve position
- [6] Supply port 1
- [7] Pressure gauge (optional)
- [8] Ports 12 and 14 for supplying the external pilot air



Note

A manually operated valve (manual override) cannot be reset electrically. Conversely, an electrically actuated valve cannot be reset using the mechanical manual override.

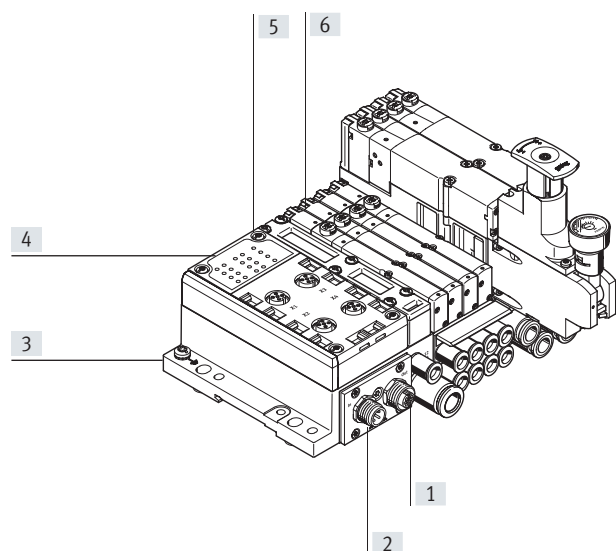Electrical connection and display components on the AS-Interface




- [1] M12 socket for AS-Interface bus and additional supply (AS-i Out)
- [2] M12 plug for AS-Interface bus and auxiliary power supply (AS-i In)
- [3] Earth connection
- [4] Status LEDs for inputs
- [5] Status LEDs for AS-Interface
- [6] Diagnostic LEDs for valves

Key features – Display and operation


Manual override

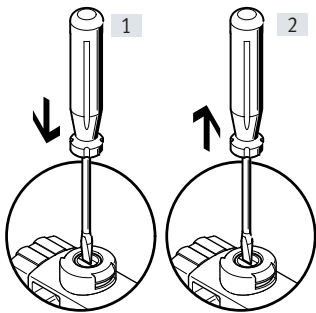MO with automatic return (non-detenting)




- [1] Press in the plunger of the MO with a pointed object or screwdriver. The pilot valve switches and actuates the main valve.
- [2] Remove the pointed object or screwdriver. The spring force pushes the plunger of the manual override back. The pilot valve returns to its normal position as does the single solenoid main valve (not the case with double solenoid valve code J).

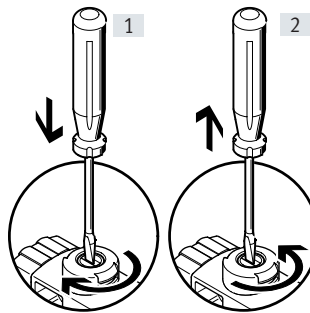MO with locking (detenting)




- [1] Press in the plunger of the MO with a pointed object or screwdriver until the valve switches and then turn the plunger 90° clockwise until the stop is reached. The valve remains in the switching position
- [2] Turn the plunger 90° anti-clockwise until the stop is reached and then remove the pointed object or screwdriver. The spring force pushes the plunger of the manual override back. The valve returns to its normal position (not with double solenoid valve code J).

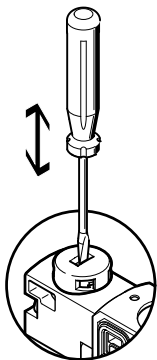MO with automatic return (non-detenting)




MO is actuated by pushing it with a pointed object or screwdriver and reset by spring force (detenting position prevented by coded cover cap). Valves can be ordered with a fitted cover cap in the valve terminal configurator using the selection menu "Manual override" (code N).

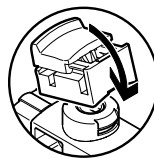MO with latch – Mounting



Turn MO with latch to clip it onto the pilot valve. The cap for the MO can then be operated (detenting) without tools. Valves can be ordered with a fitted cover cap in the valve terminal configurator using the selection menu "Manual override" (code N).

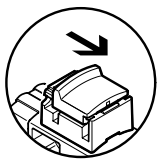
MO with latch – Actuation



Sliding the cap for the MO with latch in the direction of the arrow results in:

- Cap locks into the end position
- The pilot valve switches and actuates the main valve.

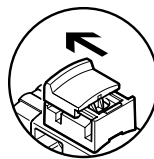MO with latch – Actuation




Sliding the cap for the MO with latch in the direction of the arrow results in:

- Cap locks into the end position
- The spring force pushes the plunger of the manual override back.
- The pilot valve returns to its normal position as does the main single solenoid valve (not the case with double solenoid valve code J).

Key features – Display and operation

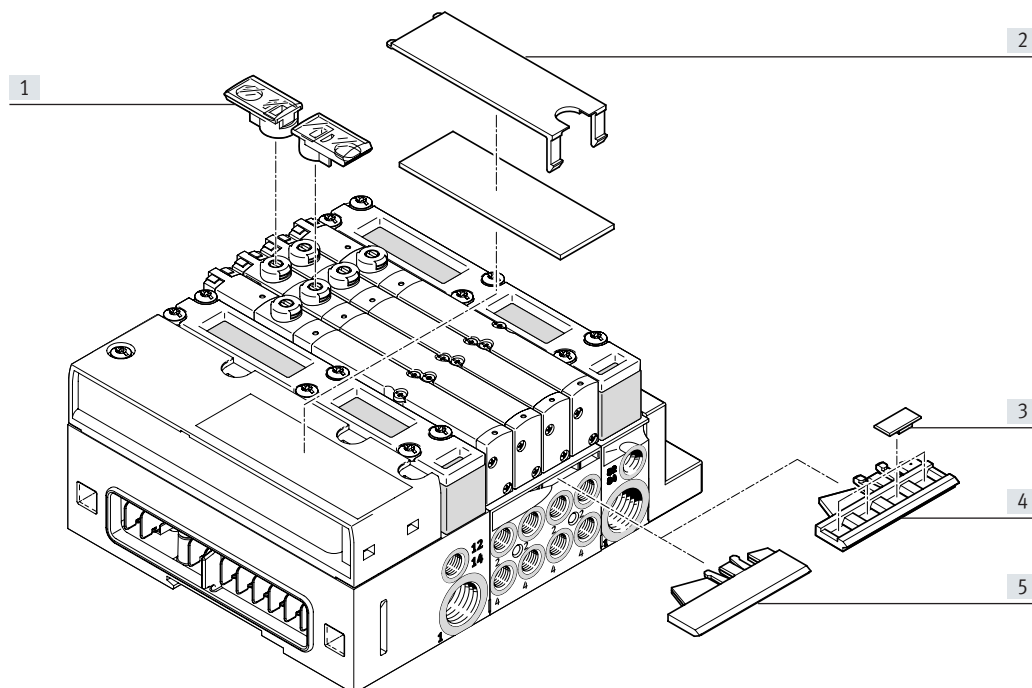Inscription system



- [1] Inscription label holder ASLR-D-L1
- [2] Inscription label on the flat plate silencer of the pneumatic interface
- [3] Inscription labels IBS-6x10
- [4] Inscription label holder for sub-base VMPA...-ST-2-4, 4-part, for IBS-6x10 inscription labels
- [5] Inscription label holder for sub-base VMPA...-ST-1-4, transparent, for paper foil labels

To label the valve, an inscription label holder VMPA1-ST-1-4 (for paper foil labels) or VMPA1-ST-2-4 (for inscription labels IBS-6x10) can be mounted on every sub-base size 10 or 20.

The sub-base for width 14 is wider. Separate inscription label holders VMPA14-ST-1-4 (for paper labels) or VMPA14-ST-2-4 (for inscription labels IBS-6x10) are therefore available for width 14.

The inscription label holder ASLR-D-L1 can be pushed onto the manual override. Inscription label holders/inscription labels that can be ordered individually a page 107.

Large inscription labels can be attached to the flat plate silencer as an alternative or in addition to the smaller labels. Labelling templates can be downloaded from the online portal: More information: www.festo.com/catalogue/mpa d Support/Downloads.

Key features – Electrical components

Electrical power as a result of current reduction

Each MPA solenoid coil is protected with a spark arresting protective circuit as well as against polarity reversal. In addition, all valve types have integrated current reduction.

MPA valves are supplied with operating voltage in the range 18 ... 30 V (24 V +/-25%). This high tolerance is made possible by the integrated control electronics and offers additional safety, e.g. in the case of a drop in operating voltage.

Individual valve

Valves on individual sub-bases can also be used for actuators that are further away from the valve terminal.

- Detachable electronics module with integrated holding current reduction
- Electrical M8 connection, 4-pin with screw connection

**Note**

More information about the individual valve interface can be found at
→ VMPA1

Electrical multi-pin plug connection

The following multi-pin plug connection is offered for the valve terminal MPA:

- Sub-D multi-pin plug connection (25-pin)

Pin 1 ... 24 are used for addresses 1 ... 24 in order.

If fewer than 24 addresses are used for the valve terminal, the remaining pins

to 24 are left free. Pin 25 is reserved for the neutral conductor.

The valves are switched by positive or negative logic (PNP or NPN). Mixed operation is not permitted.

Each pin on the multi-pin plug can actuate exactly one solenoid coil. If the maximum configurable number of valve positions is 24, this means that 24 valves can be addressed, each with a single solenoid coil.

With 12 or fewer valve positions, 2 solenoid coils per valve can be addressed. With 12 or more valve positions, the number of available valve positions for valves with two solenoid coils decreases.

**Note**

If a single solenoid valve is mounted on a double solenoid valve position, the second address is also occupied and cannot be used.

Guidelines on addressing for valves/solenoid coils

- The maximum possible number of addresses for multi-pin plug connection is 24.
- Each sub-base/electronics module occupies a specific number of addresses/pins:
 - Sub-base MPA1 for 4 single solenoid valves: 4
 - Sub-base MPA1 for 4 double solenoid valves: 8
 - Sub-base MPA2 for 2 single solenoid valves: 2
 - Sub-base MPA2 for 2 double solenoid valves: 4
- The addresses are numbered from left to right in ascending order. The following applies for individual valve positions: address x for coil 14 and address x+1 for coil 12.
- If single solenoid valves are mounted on sub-bases for double solenoid valves, the address of coil 12 and the assigned pin will remain unused.

Key features – Electrical components

AS-Interface® fieldbus connection

The AS-Interface allows individual components or small component groups to be widely distributed in terms of space.

The AS-Interface connection of valve terminal MPA-S can be used to control up to 8 solenoid coils. The electrical interface of the valve terminal contains the LEDs that indicate

the signal status and the protective circuit for the valves.



Note

More information can be found at
→ Internet: as-interface

Fieldbus connection CPI

All CP valve terminals and CP modules are connected using a ready-to-install CP cable, and are attached to the CP interface. 4 modules, for example one CPV valve terminal and one to three CP

input modules, make up an installation string that ends at the CP interface. The installation system supports a maximum of 4 installation strings

that can be connected to a CP bus node.



Note

More information can be found at
→ Internet: cpi

Fieldbus connection CPX

All functions and features of the electrical peripherals CPX are permitted in connection with the CPX interface. This means that:

- The valves and electrical outputs are supplied via the operating voltage connection CPX
- The valves are supplied and switched off independently via a separate valve connection on the CPX (code V)



Note

More information can be found at
→ Internet: cpx

Fieldbus interface CPX-AP-A

All functions and features of the electrical peripherals CPX-AP-A are permitted in connection with the CPX interface. This means that:

- The valves and electrical outputs are supplied via the operating voltage connection CPX-AP-A
- The valves are supplied and switched off independently via a separate valve connection on the CPX-AP-A (code V)



Note

More information can be found at
→ Internet: cpx-ap-a

Key features – Electrical components

Pin allocation – Sub-D socket, cable

Pin	Address/coil	Wire colour ²⁾	Pin	Address/coil	Wire colour ²⁾
1	0	WH	17	16	WH PK
2	1	GN	18	17	PK BN
3	2	YE	19	18	WH BU
4	3	GY	20	19	BN BU
5	4	PK	21	20	WH RD
6	5	BU	22	21	BN RD
7	6	RD	23	22	WH BK
8	7	VT	24	23	BN
9	8	GY PK	25	0 V ¹⁾	BK
10	9	RD BU			
11	10	WH GN			
12	11	BN GN			
13	12	WH YE			
14	13	YE BN			
15	14	WH GY			
16	15	GY BN			

**Note**

The drawing shows a view of the Sub-D socket on the multi-pin plug cable VMPA-KMS1-....

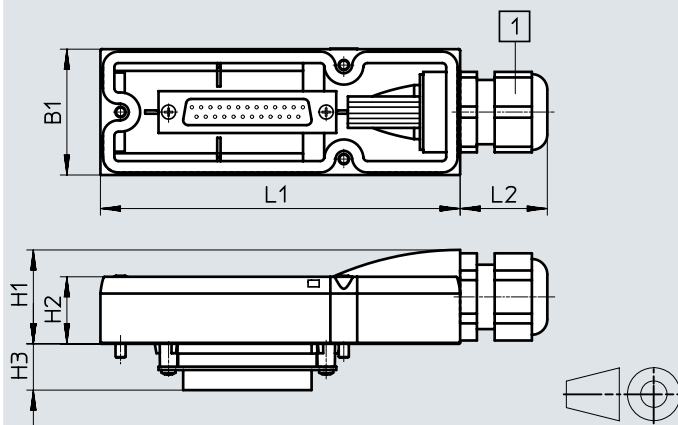
1) 0 V with positive-switching control signals; connect 24 V in the case of negative-switching control signals; mixed operation is not permitted!

2) To IEC 757

Dimensions

Download CAD data → www.festo.com

Connecting cables



[1] Cable connector with clamping range 6 ... 12 mm

The wire colours refer to the following pre-assembled multi-pin cables from Festo:

- VMPA-KMS1-8-... Valve terminal for up to 4 valve positions (8 coils)
- VMPA-KMS1-24-... Valve terminal with 8 ... 24 valve positions

Type	L1	L2	B1	H1	H2	H3
VMPA-KMS-H	107.3	26	37.6	28	20	13.8

Type	Casing	Length [m]	Wire x mm ²	D [mm]	Weight [g]	Part no.
VMPA-KMS1-8-2.5	PVC	2.5	10 x 0.34	6.9	287	533195
VMPA-KMS2-8-2.5-PUR	PUR	2.5	10 x 0.25	8.3	237	533504
VMPA-KMS1-8-5	PVC	5	10 x 0.34	6.9	510	533196
VMPA-KMS2-8-5-PUR	PUR	5	10 x 0.25	8.3	460	533505
VMPA-KMS1-8-10	PVC	10	10 x 0.34	6.9	956	533197
VMPA-KMS2-8-10-PUR	PUR	10	10 x 0.25	8.3	906	533506
VMPA-KMS1-24-2.5	PVC	2.5	25 x 0.34	11.4	563	533192
VMPA-KMS2-24-2.5-PUR	PUR	2.5	25 x 0.25	11.2	411	533501
VMPA-KMS1-24-5	PVC	5	25 x 0.34	11.4	1062	533193
VMPA-KMS2-24-5-PUR	PUR	5	25 x 0.25	11.2	910	533502
VMPA-KMS1-24-10	PVC	10	25 x 0.34	11.4	2055	533194
VMPA-KMS2-24-10-PUR	PUR	10	25 x 0.25	11.2	1908	533503
VMPA-KMS-H	Hood for self-assembly				71	533198

Key features – Electrical components

Electrical supply plate

Additional electrical supply plates can be used for larger terminals. This enables up to 64 valve positions/128 solenoid coils to be supplied.

MPA with CPX

Electrical supply plates can be configured at any point upstream or downstream of sub-bases. An electrical supply plate is required after 8 valve sub-bases.

MPA with CPI connection

Electrical supply plates can be configured at any point upstream or downstream of sub-bases. An electrical supply plate is required after 8 valve sub-bases.



**Note**

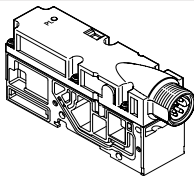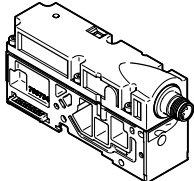For MPA with CPI connection, a maximum of 24 of the 32 MPA1 or MPA14 coils or 12 of the 16 MPA2 coils can be switched on simultaneously.





**Note**

Please note that only the electronics modules with a separate circuit are permitted to the right of the electrical supply plate.

The electrical supply plate must not be installed directly to the left of a pneumatic supply plate (type VMFA1-FB-SP...).

Electrical supply plate			
Code	Illustration	Type	Note
L		VMPA-FB-SP-V	Electrical supply plate with plug connection M18, 3-pin
		VMPA-FB-SP-7/8-V-5POL	Electrical supply plate with plug connection 7/8", 5-pin
		VMPA-FB-SP-7/8-V-4POL	Electrical supply plate with plug connection 7/8", 4-pin
L4L		VMPA-FB-SP-M12-V	Electrical supply plate with plug connection M12, 5-pin

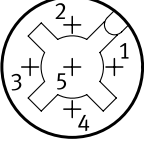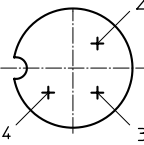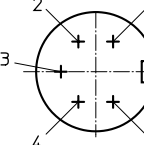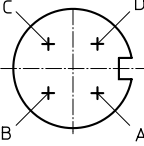Key features – Electrical components

Pin allocation for power supply		
	Pin	Assignment
Pin allocation for M12		
	1	n.c.
	2	n.c.
	3	0 VDC
	4	24 V DC valves
	5	FE
Pin allocation for M18		
	2	24 V DC valves
	3	0 VDC
	4	FE
Pin allocation for 7/8", 5-pin		
	1	0 V DC valves
	2	n.c.
	3	FE (leading)
	4	n.c.
	5	24 V DC valves
Pin allocation for 7/8", 4-pin		
	A	n.c.
	B	24 V DC valves
	C	FE
	D	0 V DC valves (leading)

Instructions for use

Operating materials

Operate your system with unlubricated compressed air, if possible. Festo valves and cylinders are designed so that, if used as intended, they will not require additional lubrication and will still achieve a long service life. The quality of compressed air downstream of the compressor must correspond to that of unlubricated compressed air. If possible, do not operate the entire system with lubricated compressed air. The lubricators should, where possible, always be installed directly upstream of the actuator requiring them.

Incorrect additional oil and too high an oil content in the compressed air reduce the service life of the valve terminal.

Use Festo special oil OFSW-32 or the alternatives listed in the Festo catalogue (as specified in DIN 51524 HLP32; basic oil viscosity 32 CST at 40°C).

Bio-oils

When using bio-oils (oils which are based on synthetic or native esters, e.g. rapeseed oil methyl ester), the maximum residual oil content of 0.1 mg/m³ must not be exceeded (see ISO 8573-1 Class 2).


Mineral oils

When using mineral oils (e.g. HLP oils to DIN 51524, parts 1 to 3) or similar oils based on poly-alpha-olefins (PAO), the maximum residual oil content of 5 mg/m³ must not be exceeded (see ISO 8573-1 Class 4).

A higher residual oil content is not permitted, regardless of the compressor oil, because the permanent lubrication would otherwise be flushed out over a period of time.

Datasheet – Valve terminal

-  -	Flow rate		-  -	Voltage	
	MPA1:	up to 360 l/min		24 V DC	
	MPA14:	up to 670 l/min			
	MPA2:	up to 850 l/min			
-  -	Valve width		-  -	Repair service	
	MPA1:	10 mm			
	MPA14:	14 mm			
	MPA2:	20 mm			

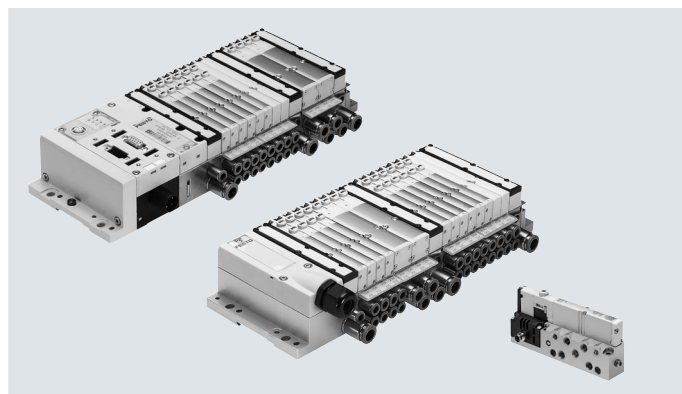

General technical data

General technical data						
Valve terminal design		Modular, valve sizes can be mixed				
Electrical control		Fieldbus	Multi-pin plug	AS-i interface	CPI interface	AP interface
Actuation type		Electrical				
Max. number of valve positions		64 (FB), 24 (MP)				
Valve size [mm]		10, 14, 20				
Pilot air supply		Internal or external				
Lubrication		Life-time lubrication, PWIS-free (free of paint-wetting impairment substances)				
Type of mounting		Wall mounting				
		On DIN rail to EN 60715				
Mounting position		Any (wall mounting)				
		Horizontal only (DIN rail)				
Manual override		Non-detenting, detenting				
Degree of protection to EN 60529		IP67 (for all types of signal transmission in assembled state)				
Pneumatic connections						
Pneumatic connection		Via sub-base or individual connection				
Supply port 1		G1/4 (M7 with individual sub-base)				
Exhaust port 3/5		QS-10, QS-3/8" (M7 with individual sub-base)				
Working ports 2/4		Dependent on the connection type selected MPA1: M7, QS4, QS6, 3/16", 1/4" MPA14: G1/8, QS6, QS8, 1/4", 5/16" MPA2: G1/8, QS6, QS8, 1/4", 5/16"				
Pilot air connection 12/14		M7 (M5 with individual sub-base)				
Pilot exhaust air port 82/84		M7 (M5 with individual sub-base and with end plate VMPA-EPR-G)				
Pressure compensation port		With ducted exhaust air: via port 82/84 (M5 with individual sub-base and with end plate VMPA-EPR-G) With flat plate silencer: exhausting to atmosphere				

- - Note

Note possible restrictions for the IP protection class
a ATEX declaration of conformity

Datasheet

Operating and environmental conditions							
Operating medium		Compressed air to ISO 8573-1:2010 [7:4:4]					
Note on operating/ Pilot medium		Lubricated operation possible (in which case lubricated operation will always be required)					
Operating pressure	[MPa]	−0.09 ... 1					
	[bar]	−0.9 ... 10					
Pilot pressure	[MPa]	0.3 ... 0.8					
	[bar]	3 ... 8					
Ambient temperature	[°C]	−5 ... +50					
Temperature of medium	[°C]	−5 ... +50					
Storage temperature	[°C]	−20 ... +40					
Relative humidity	Max. 90% at 40 °C						
	Non-condensing						
Electrical data							
Type		MPA-MPM-VI (multi-pin plug interface)	MPA-FB-VI (Fieldbus interface with CPX)	MPA-ASI-VI (AS-i interface)	MPA-CPI-VI (CPI interface)	MPA-FB-AP-VI (AP interface)	
Part number		539105	530411	546279	546280	550808	
Nominal operating voltage	[V DC]	24					
Note on nominal operating volt- age		–				Protected extra-low voltage to IEC 60204-1	
Operating voltage range	[V DC]	18 ... 30					
Note on the operating voltage		–				SELV/PELV power supply units required	
		–				Note voltage drop	
Residual ripple	[Vss]	4					
Permissible voltage fluctuations	[%]	25					
Max. power supply	[A]	–				4 ... 16	
Typ. intrinsic current consumption at nominal operating voltage for electronic system/sensors	[A]	–				0.04 ... 10	
Typ. intrinsic current consumption at nominal operating voltage, load	[A]	–				0.003 ... 10	
Certifications ¹⁾							
Type		MPA-MPM-VI (multi-pin plug interface)	MPA-FB-VI (Fieldbus interface with CPX)	MPA-ASI-VI (AS-i interface)	MPA-CPI-VI (CPI interface)	MPA-FB-AP-VI (AP interface)	
Part number		539105	530411	546279	546280	550808	
ATEX category for gas		II 3 G				–	
Type of ignition protection for gas		Ex ec IIC T4 Gc X				–	
ATEX ambient temperature	[°C]	−5 ≤ Ta ≤ +50				–	
Explosion protection certification outside the EU		–	EPL Gc (BR)	–	–	–	
		–	–	EPL Db (GB)	EPL Db (GB)	–	
		–	–	EPL Gb (GB)	EPL Gb (GB)	–	
CE marking (see declaration of conformity)		To EU EMC Directive ²⁾					
		To EU Explosion Protection Directive (ATEX)				–	
		To EU RoHS Directive					
UKCA marking (see declaration of conformity)		To UK EMC regulations ²⁾					
		To UK explosion regulations				–	
		To UK RoHS regulations					
KC marking		KC EMC					
Certification		c UL us - Recognized (OL)					
		RCM					
Corrosion resistance class CRC ³⁾		1	1	0	0	1	
Certificate-issuing authority		MH19482	MH19482	MH19482	–	MH19482	

1) Interface versions that are not listed do not have any of the listed certifications

2) For information about the area of use, see the EC declaration of conformity at: www.festo.com/catalogue/...d Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

3) More information www.festo.com/x/topic/crc

Datasheet – AP interface

General technical data	
Valve terminal design	Modular, valve sizes can be mixed
Electrical control	AP interface
	Fieldbus
Max. number of valve positions	64
Valve size	[mm] 10, 14, 20
Max. standard nominal flow rate	[l/min] 360 at 10 mm
	550 at 14 mm
	700 at 20 mm
Max. number of modules	15
Mounting position	Any, on DIN rail: horizontal

Technical data – Electrics	
Electrical isolation between the supply voltages electronics/sensors	Yes
Reverse polarity protection	Yes
Power failure buffering	10 ms
Power supply, function	Incoming electronics/sensors and load
Power supply, connection type	Plug
Power supply, number of pins/cores	4 ... 5
Power supply, connection technology	7/8" to NFPA/T3.5.29
	M12x1, L-coded to EN 61076-2-111
	M18x1
	M8x1, A-coded to EN 61076-2-10

Operating and environmental conditions	
Operating medium	Compressed air to ISO 8573-1:2010 [7:4:4]
Note on operating/ Pilot medium	Lubricated operation possible (in which case lubricated operation will always be required)
Operating pressure	[MPa] -0.09 ... 1
	[bar] -0.9 ... 10
Pilot pressure	[MPa] 0.3 ... 0.8
	[bar] 3 ... 8
Storage temperature	-20 ... +40
Temperature of medium	-5 ... +50
Ambient temperature	-5 ... +50
Note on ambient temperature	Note derating according to user documentation
	Note ambient temperature derating to IEC 61131-2:2017
Relative humidity	5 ... 90% at 40 °C
	Non-condensing
Note on max. setup altitude	> 2000 m ASL (< 79.5 kPa)
	Note derating according to user documentation
	Note ambient temperature derating to IEC 61131-2:2017
Max. setup altitude	3500 m
Nominal operating altitude	<= 2000 m ASL (> 79.5 kPa)
Pollution degree	2

Materials	
Note on materials	RoHS-compliant
	Halogen-free
	Free of phosphoric acid ester


Datasheet – AP interface

MPA-FB-AP-VI (AP interface)	
Fieldbus interface, type	Ethernet
Note on fieldbus interface	All information that is relevant to CPX-AP can be read out via the Ethernet interfaces/fieldbus connections and changed depending on the function.
	Auto MDI, the bus module performs a crossover check
	Firmware update via Ethernet interface/fieldbus connection
	I&M function according to PNO is supported
Fieldbus interface, protocol	ACD (Addr. Conflict Detection)
	DLR (Device Level Ring)
	EtherCAT®
	EtherCAT CoE
	EtherCAT Distributor Clocks (DC)
	EtherCAT EoE
	EtherCAT FoE
	EtherCAT Mod. Dev. Prof. (MDP)
	EtherNet/IP
	EtherNet/IP QoS
	EtherNet/IP Quickconnect
	LLDP
	MRP, MRPD (ring redundancy)
	Modbus/TCP (Modbus/UDP)
	PROFINET FSU
	PROFINET I&MO .. 3
	PROFINET IRT
	PROFINET RT
	PROFINET shared device
	S2 system redundancy
	SNMP
Fieldbus interface, function	Bus connection incoming/outgoing
Fieldbus interface, type of connection	2 x socket
Fieldbus interface, connection technology	M12x1, D-coded to EN 61076-2-101
	RJ45 to IEC 61076-3-117 (V14)
	SCRJ to IEC 61754-24-21
Fieldbus interface, number of pins/cores	2 ... 8
Fieldbus interface, galvanic isolation	Yes
Fieldbus interface, transmission rate	100 Mbps
Max. address capacity, inputs	1024 bytes
	4096 bytes
Note on inputs	EP: 477 bytes
	Modbus: 4096 bytes
Max. address capacity, outputs	1024 bytes
	4096 bytes
Note on outputs	EP: 496 bytes
	Modbus: 4096 bytes
Internal cycle time	< 1 ms
Configuration support	EDS file, ESI file, GSDML file, IODD file


Datasheet

Pilot pressure p_2 as a function of working pressure p_1 with external pilot air supply

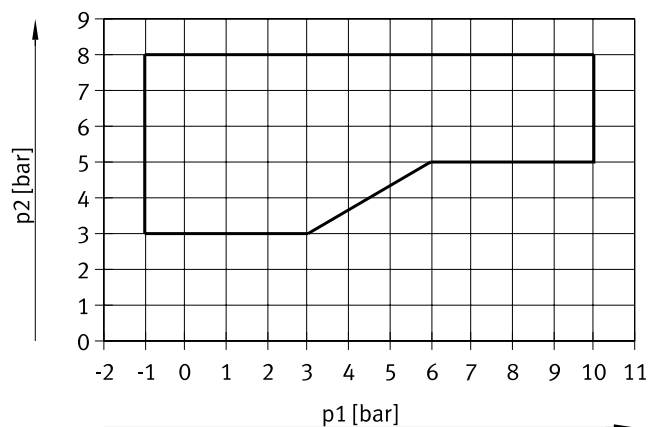
For valves with code: M, J, B, G, E, W, X




For valves with code: N, K, H, D, I

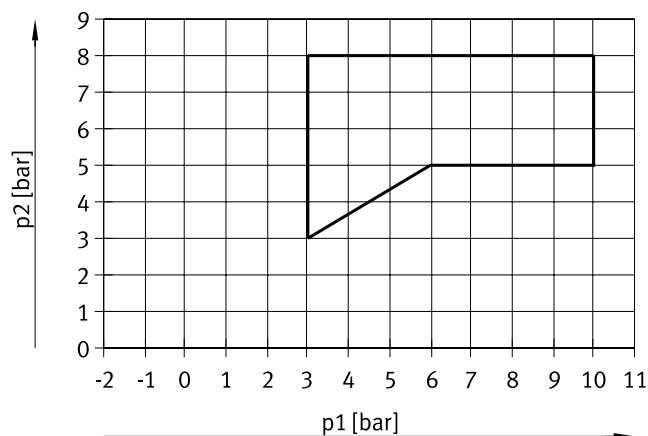**Pilot pressure p_2 as a function of working pressure p_1 for valves with mechanical spring return**

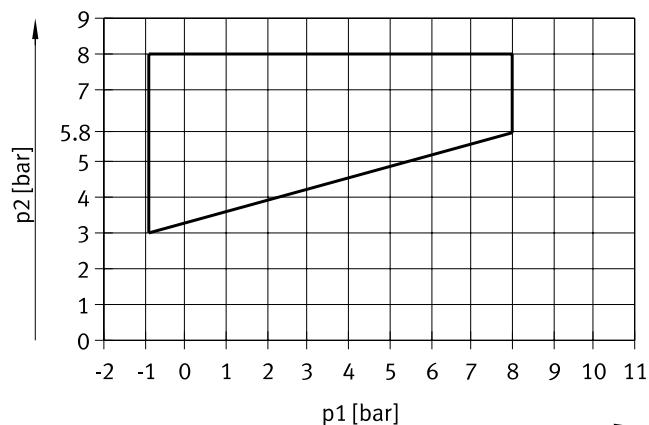
For valve width 10 mm with code: MS, NS, KS, HS, DS



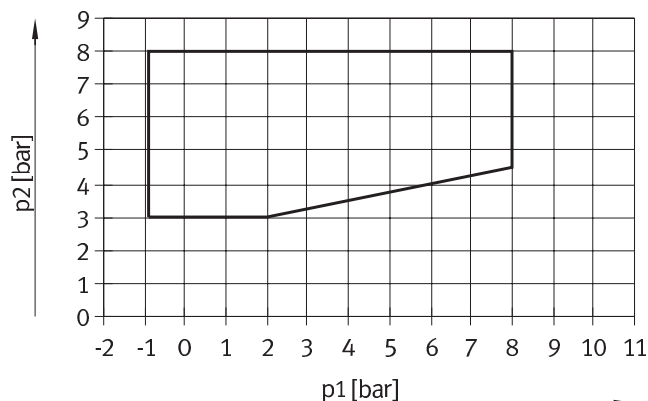For valve width 20 mm with code: MS, NS, KS, HS, DS



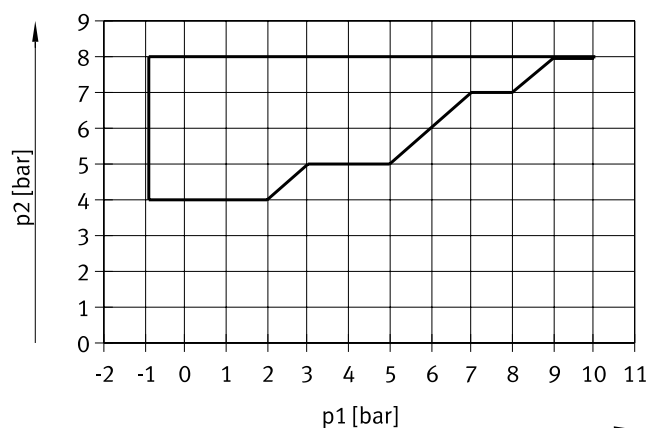
For valve width 10 mm with code: MU, NU, KU, HU



Datasheet

Pilot pressure p_2 as a function of working pressure p_1 for valves with mechanical spring return

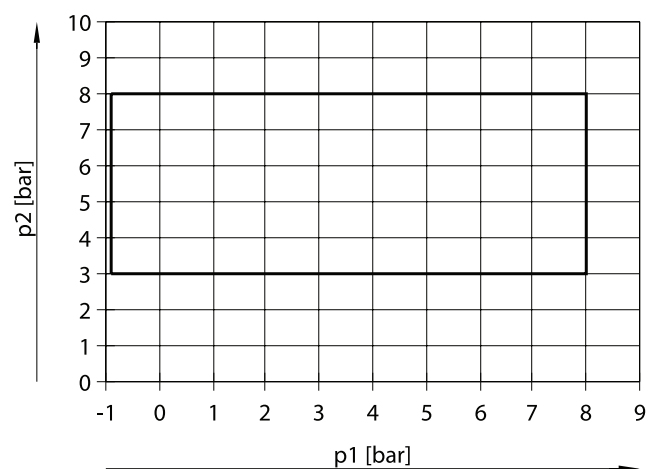
For valve widths 10, 14 and 20 mm with code: MSC




Datasheet

Flow rate q_n as a function of output pressure p_2 with pressure regulator plates (width 20 mm)

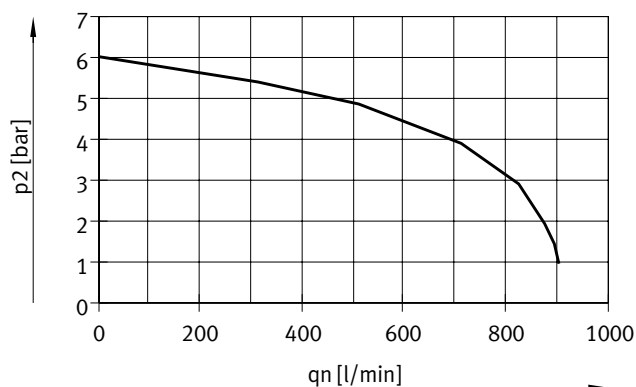
(P regulator plate) for port 1

Supply pressure 10 bar,
regulated pressure set at 6 bar

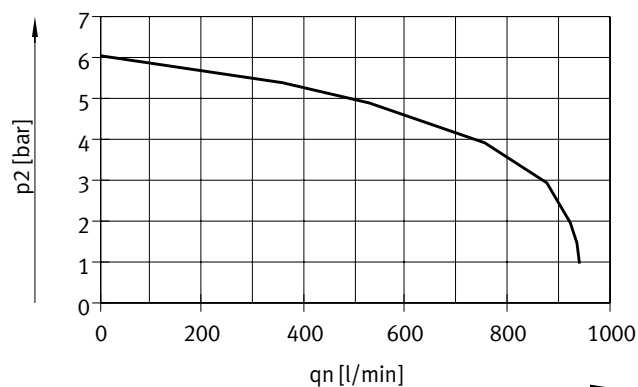
(B regulator plates) for port 2

Supply pressure 10 bar,
regulated pressure set at 6 barFlow rate q_n as a function of output pressure p_2 with pressure regulator plates (width 20 mm)

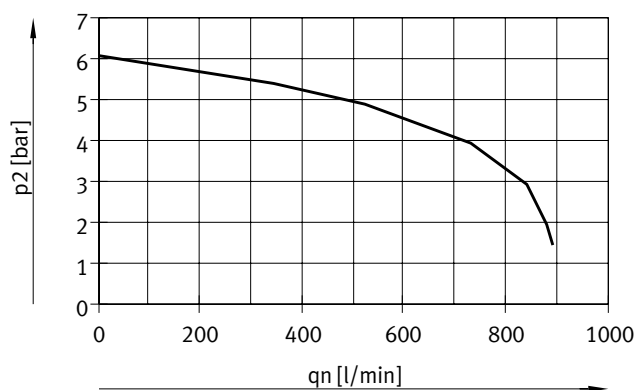
(A regulator plates) for ports 4

Supply pressure 10 bar,
regulated pressure set at 6 bar

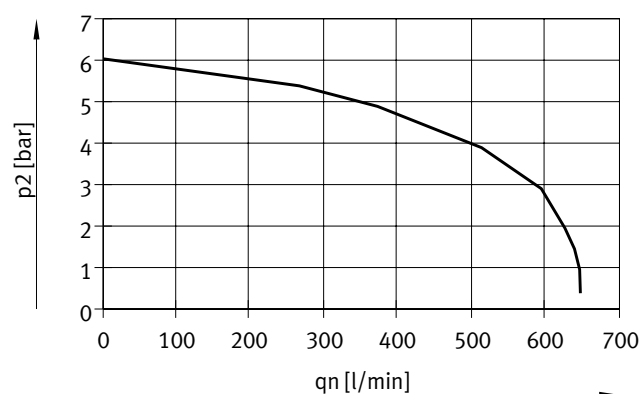(B regulator plates, rev.) for ports 3, reversible

Supply pressure 10 bar,
regulated pressure set at 6 barFlow rate q_n as a function of output pressure p_2 with pressure regulator plates (width 20 mm)

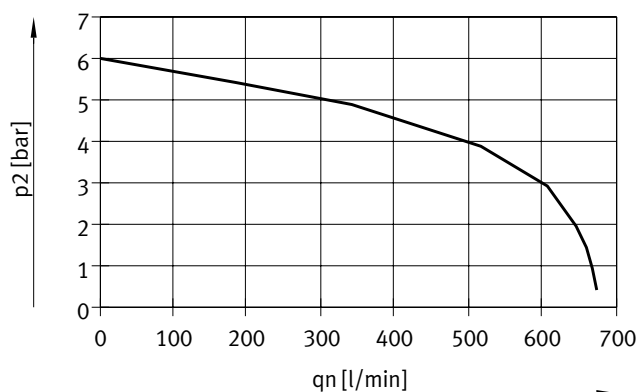(A regulator plates, rev.) for ports 5, reversible

Supply pressure 10 bar,
regulated pressure set at 6 bar

Datasheet

Technical data – Valve width 10 mm															
Code			M	J	N	K	H	B	G	E	X	W	D	I	
Design			Piston spool valve												
Sealing principle			Soft												
Overlap			Positive overlap												
Reset method			Pneumatic spring		–		Pneumatic spring			Mechanical spring			Pneumatic spring		
Switching times	On	[ms]	11	10	10	10	10	10	10	10	10	10	10	8	
	Off	[ms]	20	–	20	20	20	35	35	35	20	20	20	20	
	Changeover	[ms]	–	15	–	–	–	15	15	15	–	–	–	–	
Standard nominal flow rate		[l/min]	360	360	300	230	300	300	320	240	255	255	230	260	
Operating pressure		[MPa]	–0.09 ... +1			0.3 ... 1			–0.09 ... +1			–0.09 ... +1		0.3 ... 1	
		[bar]	–0.9 ... +10			3 ... 10			–0.9 ... +10			–0.9 ... +10		3 ... 10	
Pilot pressure		[MPa]	0.3 ... 0.8												
		[bar]	3 ... 8												
Max. tightening torque for valve mounting		[Nm]	0.25												
Materials			Die-cast aluminium												
Product weight		[g]	49	56	56	56	56	56	56	56	49	49	56	56	

Technical data – Valve width 10 mm												
Code			MS	NS	KS	HS	DS	MU		NU	KU	HU
Design			Piston spool valve					Poppet valve with spring return				
Sealing principle			Soft					Soft				
Overlap			Positive overlap					Negative overlap				
Reset method			Mechanical spring					Mechanical spring				
Switching times	On	[ms]	10	14	14	14	14	10	10	8	10	
	Off	[ms]	27	16	16	16	16	14	8	10	10	
	Changeover	[ms]	–	–	–	–	–	–	–	–	–	
Max. switching frequency		[Hz]	2	–	–	–	–	–	–	–	–	
Standard nominal flow rate		[l/min]	360	300	230	300	230	140 ... 190		190	160	140 ... 190
Note on standard nominal flow rate			–					1 → 2: 190 l/min 1 → 4: 140 l/min		–	–	1 → 2: 190 l/min 1 → 4: 140 l/min
Operating pressure	[MPa]	–0.09 ... +0.8					–0.09 ... +1					
	[bar]	–0.9 ... +8					–0.9 ... +10					
Pilot pressure	[MPa]	0.4 ... 0.8										
	[bar]	4 ... 8										
Max. tightening torque for valve mounting		[Nm]	0.25					0.25				
Materials			Die-cast aluminium					Reinforced PPA				
Product weight		[g]	56					35		42	42	42

Technical data – Valve width 10 mm			
Code		MSC	
Design		Poppet valve with spring return	
Sealing principle		Soft	
Overlap		Negative overlap	
Reset method		Mechanical spring	
Switching position indication		Via built-in sensor	
Switching times	On	[ms]	10
	Off	[ms]	8
	Changeover	[ms]	–
Standard nominal flow rate		[l/min]	190
Operating pressure		[MPa]	–0.09 ... +0.8
		[bar]	–0.9 ... +8
Pilot pressure		[MPa]	0.4 ... 0.8
		[bar]	4 ... 8
Max. tightening torque for valve mounting		[Nm]	0.25
Materials		Reinforced PPA	
Product weight		[g]	96

Datasheet

Technical data – Pilot air switching valves, width 10 mm					
Code		ES	EU	IS	IU
Design		Poppet valve with spring return			
Sealing principle		Soft			
Overlap		Negative overlap			
Reset method		Mechanical spring			
Operating pressure	[MPa]	0.3 ...0.8			
	[bar]	3 ... 8			
Pilot pressure	[MPa]	0.3 ...0.8			
	[bar]	3 ... 8			
Max. tightening torque for valve mounting	[Nm]	0.65	0.65	0.25	0.65
Materials		Reinforced PPA			
Product weight	[g]	32			

Technical data – Valve width 14 mm								
Code			M	J	N	K	H	B
Design			Piston spool valve					
Sealing principle			Soft					
Overlap			Positive overlap					
Reset method			Pneumatic spring					Mechanical spring
Switching times	On	[ms]	13	9	12	12	12	16
	Off	[ms]	30	–	38	38	38	44
	Changeover	[ms]	–	24	–	–	–	18
Standard nominal flow rate		[l/min]	550 ... 670	550 ... 670	550 ... 650	550 ... 600	550 ... 650	550 ... 630
Note on standard nominal flow rate			MPA-S: 550 l/min MPA-L: 670 l/min	MPA-S: 550 l/min MPA-L: 670 l/min	MPA-S: 550 l/min MPA-L: 650 l/min	MPA-S: 550 l/min MPA-L: 600 l/min	MPA-S: 550 l/min MPA-L: 650 l/min	MPA-S: 550 l/min MPA-L: 630 l/min
Operating pressure		[MPa]	–0.09 ... +1			0.3 ... 1		–0.09 ... +1
		[bar]	–0.9 ... +10			3 ... 10		–0.9 ... +10
Pilot pressure		[MPa]	0.3 ... 0.8					
		[bar]	3 ... 8					
Max. tightening torque for valve mounting		[Nm]	0.65					
Materials			Die-cast aluminium					
Product weight		[g]	77					

Technical data – Valve width 14 mm								
Code			G	E	X	W	D	I
Design			Piston spool valve					
Sealing principle			Soft					
Overlap			Positive overlap					
Reset method			Mechanical spring			Pneumatic spring		
Switching times	On	[ms]	13	13	12	12	12	9
	Off	[ms]	44	44	20	20	30	25
	Changeover	[ms]	20	18	–	–	–	–
Standard nominal flow rate		[l/min]	500 ... 610	420 ... 480	360 ... 400	300 ... 340	550 ... 650	550 ... 670
Note on standard nominal flow rate			MPA-S: 500 l/min MPA-L: 610 l/min	MPA-S: 420 l/min MPA-L: 480 l/min	MPA-S: 360 l/min MPA-L: 400 l/min	MPA-S: 340 l/min MPA-L: 300 l/min	MPA-S: 550 l/min MPA-L: 650 l/min	MPA-S: 550 l/min MPA-L: 670 l/min
Operating pressure		[MPa]	–0.09 ... +1				0.3 ... 1	
		[bar]	–0.9 ... +10				3 ... 10	
Pilot pressure		[MPa]	0.3 ... 0.8					
		[bar]	3 ... 8					
Max. tightening torque for valve mounting		[Nm]	0.65					
Materials			Die-cast aluminium					
Product weight		[g]	77					

Datasheet

Technical data – Valve width 14 mm								
Code			MS	MSC	NS	KS	HS	DS
Design			Piston spool valve	Poppet valve with spring return	Piston spool valve			
Sealing principle			Soft					
Overlap			Positive overlap	Negative overlap	Positive overlap			
Reset method			Mechanical spring	Mechanical spring	Mechanical spring			
Switching position indication			–	Via built-in sensor	–			
Switching times	On	[ms]	13	10	12	12	12	10
	Off	[ms]	41	10	23	23	23	25
	Changeover	[ms]	–	–	–	–	–	–
Max. switching frequency		[Hz]	2	–	–	–	–	–
Standard nominal flow rate		[l/min]	550 ... 670		470 ... 520	470 ... 560	470 ... 520	500 ... 570
Note on standard nominal flow rate			MPA-S: 550 l/min MPA-L: 670 l/min		MPA-S: 470 l/min MPA-L: 520 l/min	MPA-S: 470 l/min MPA-L: 560 l/min	MPA-S: 470 l/min MPA-L: 520 l/min	MPA-S: 500 l/min MPA-L: 570 l/min
Operating pressure		[MPa]	–0.09 ...+0.8					
		[bar]	–0.9 ... +8					
Pilot pressure		[MPa]	0.3 ... 0.8	0.4 ... 8	0.3 ... 0.8			
		[bar]	3 ... 8	4 ... 8	3 ... 8			
Max. tightening torque for valve mounting		[Nm]	0.65	0.25				
Materials			Die-cast aluminium	Reinforced PPA	Die-cast aluminium			
Product weight		[g]	77	118	77			

Technical data – Pilot air switching valves, width 14 mm					
Code		ES	EU	IS	IU
Design		Poppet valve with spring return			
Sealing principle		Soft			
Overlap		Negative overlap			
Reset method		Mechanical spring			
Operating pressure	[MPa]	0.3 ... 0.8			
	[bar]	3 ... 8			
Pilot pressure	[MPa]	0.3 ... 0.8			
	[bar]	3 ... 8			
Max. tightening torque for valve mounting	[Nm]	0.25			
Materials		Reinforced PPA			
Product weight	[g]	36			

Technical data – Valve width 20 mm								
Code			M	J	N	K	H	B
Design			Piston spool valve					
Sealing principle			Soft					
Overlap			Positive overlap					
Reset method			Pneumatic spring					Mechanical spring
Switching times	On	[ms]	15	9	8	8	8	11
	Off	[ms]	28	–	28	28	28	46
	Changeover	[ms]	–	22	–	–	–	23
Standard nominal flow rate		[l/min]	670	670	550 ... 610	500 ... 550	550	510
Note on standard nominal flow rate			–	–	MPA-S: 550 l/min MPA-L: 610 l/min	MPA-S: 500 l/min MPA-L: 550 l/min	–	–
Operating pres- sure	[MPa]	–0.09 ... +1			0.3 ... 1			–0.09 ... +1
	[bar]	–0.9 ... +10			3 ... 10			–0.9 ... +10
Pilot pressure	[MPa]	0.3 ... 0.8						
	[bar]	3 ... 8						
Max. tightening torque for valve mounting		[Nm]	0.65					
Materials			Die-cast aluminium					
Product weight		[g]	100					

Datasheet

Technical data – Valve width 20 mm								
Code		G	E	X	W	D	I	
Design		Piston spool valve						
Sealing principle		Soft						
Overlap		Positive overlap						
Reset method		Mechanical spring			Pneumatic spring			
Switching times	On	[ms]	10	11	13	13	7	7
	Off	[ms]	40	47	22	22	25	25
	Changeover	[ms]	21	23	–	–	–	–
Standard nominal flow rate		[l/min]	610	590	470	470	650 ... 840	650 ... 850
Note on standard nominal flow rate			–	–	–	–	MPA-S: 650 l/min MPA-L: 840 l/min	MPA-S: 650 l/min MPA-L: 850 l/min
Operating pressure	[MPa]	–0.09 ... +1					0.3 ... 1	
	[bar]	–0.9 ... +10					3 ... 10	
Pilot pressure	[MPa]	0.3 ... 0.8						
	[bar]	3 ... 8						
Max. tightening torque for valve mounting		[Nm]	0.65					
Materials		Die-cast aluminium						
Product weight		[g]	100					

Technical data – Valve width 20 mm							
Code		MS	MSC	NS	KS	HS	DS
Design		Piston spool valve	Poppet valve with spring return	Piston spool valve			
Sealing principle		Soft					
Overlap		Positive overlap	Negative overlap	Positive overlap			
Reset method		Mechanical spring					
Switching position indication		–	Via built-in sensor	–	–	–	–
Switching times	On	[ms]	8	14	12	12	12
	Off	[ms]	36	10	25	25	25
	Changeover	[ms]	–	–	–	–	–
Max. switching frequency		[Hz]	2	–	–	–	–
Standard nominal flow rate		[l/min]	670 ... 840	550 ... 620	500	550	650 ... 820
Note on standard nominal flow rate			MPA-S: 670 l/min MPA-L: 840 l/min	MPA-S: 550 l/min MPA-L: 620 l/min	–	–	MPA-S: 650 l/min MPA-L: 820 l/min
Operating pressure	[MPa]		–0.09 ... +0.8				
	[bar]		–0.9 ... +8				
Pilot pressure	[MPa]		0.4 ... 0.8	0.4 ... 8	0.4 ... 0.8		
	[bar]		4 ... 8	4 ... 8	4 ... 8		
Max. tightening torque for valve mounting		[Nm]	0.65	0.25	0.65		
Materials			Die-cast aluminium	Reinforced PPA	Die-cast aluminium		
Product weight		[g]	100	140	100		

Safety characteristics			
		Valve width 10 mm	Valve width 14 mm
Max. positive test pulse with 0 signal	[µs]	400	400
Max. negative test pulse with logic 1	[µs]	200	200
Shock resistance		Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27	
Vibration resistant		Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6	

Datasheet

Electrical data – MPA with electronics module VMPA...-FB... (CPX terminal, CPI interface)				
		MPA1	MPA14	MPA2
Intrinsic current consumption per electronics module				
At 24 V $U_{EL/SEN}$ ¹⁾ (internal electronics, all outputs 0-signal)	[mA]	Typically 8		
At 24 V U_{val} ²⁾ (internal electronics, without valves)				
VMPA...-EMG..., separate circuits	[mA]	Typically 23		
VMPA...-EMS..., without separate circuits	[mA]	Typically 3		
Maximum current consumption per solenoid coil at nominal voltage				
Nominal pick-up current	[mA]	58	58	99
Nominal current following current reduction	[mA]	9	9	18
Time until current reduction	[ms]	24	24	24
Diagnostic message				
Undervoltage U_{OFF} ³⁾	[V]	17.5 ... 16		

Electrical data – MPA with electronics module VMPA...-MPM... (AS-Interface, multi-pin)				
		MPA1	MPA14	MPA2
Current consumption at Sub-D multi-pin plug connection per solenoid coil at nominal voltage				
Nominal pick-up current	[mA]	80	80	100
Nominal current with current reduction	[mA]	25	25	20
Time until current reduction	[ms]	25	25	50

Calculation example for current consumption (CPX terminal, CPI interface)				
Current consumption with two solenoid coils MPA2 switched in parallel and one electronics module VMPA...-EMS... without separate circuits	[mA]	$I_{EI/SEN} = 8$		
Nominal pick-up current (duration 24 ms)	[mA]	$I_{VAL} = 3$ (intrinsic current consumption of electronics module) + 2 x 99 (MPA2) = 202		
Nominal current with current reduction (after 24 ms)	[mA]	$I_{VAL} = 3$ ((intrinsic current consumption of electronics module) + 2 x 18 (MPA2) = 39		

1) Power supply for electronics and sensors

2) Load voltage supply for valves

3) Load voltage outside of function range

Datasheet

Materials			
Sub-base	Die-cast aluminium		
Seals	NBR, elastomer		
Supply plate	Die-cast aluminium		
Right end plate	Die-cast aluminium		
Pneumatic interface, left	Die-cast aluminium, PA		
Exhaust air plate	PA		
Flat plate silencer	PE		
Electrical supply plate	Housing: Die-cast aluminium Cover: Reinforced PA		
Electronics module	PA		
Electrical link	Bronze/PBT		
Regulator plate	Control section, housing: PA; seals: NBR		
Note on materials	RoHS-compliant		

Product weight			
Approx. weight [g]	MPA1	MPA14	MPA2
Basic weight of sub-base ¹⁾	210 (4 valve positions)	252 (4 valve positions)	210 (2 valve positions)
Individual sub-base (VMPA ... I C...)	92	184	233
Per vacant position L	20	40	45
Right end plate with port 82/84 for ducted exhaust air (connecting thread M5)	55		
Right end plate, without port 82/84	58		
Pneumatic interface, left ¹⁾			
• With flat plate silencer	315		
• With ducted exhaust air	324		
Pneumatic interface CPX-AP-A	207		
Supply plate ¹⁾			
• With flat plate silencer	111		
• With ducted exhaust air	120		
Electrical supply plate	200		
Regulator plate (MPA1)	73.8		
Regulator plate (MPA2)	180		
QSM-M5-3-I	3		
QSM-M5-5/32-I-U-M	3		
QSM-M5-4-I	4		
QSM-M5-3/16-I-U-M	4		
QSM-M5-6-I	5		
QSM-M5-1/4-I-U-M	5		
QSM-M7-4-I	4		
QSM-M7-3/16-I-U-M	4		
QSM-M7-6-I	5		
QSM-M7-1/4-I-U-M	5		
QS-G1/8-6-I	11		
QS-1/8-1/4-I-U-M	11		
QS-G1/8-8-I	13		
QS-1/8-5/16-I-U-M	13		
QS-G1/4-8-I	22		
QS-1/4-5/16-I-U-M	22		
QS-G1/4-10-I	22		
QS-1/4-3/8-I-U-M	22		

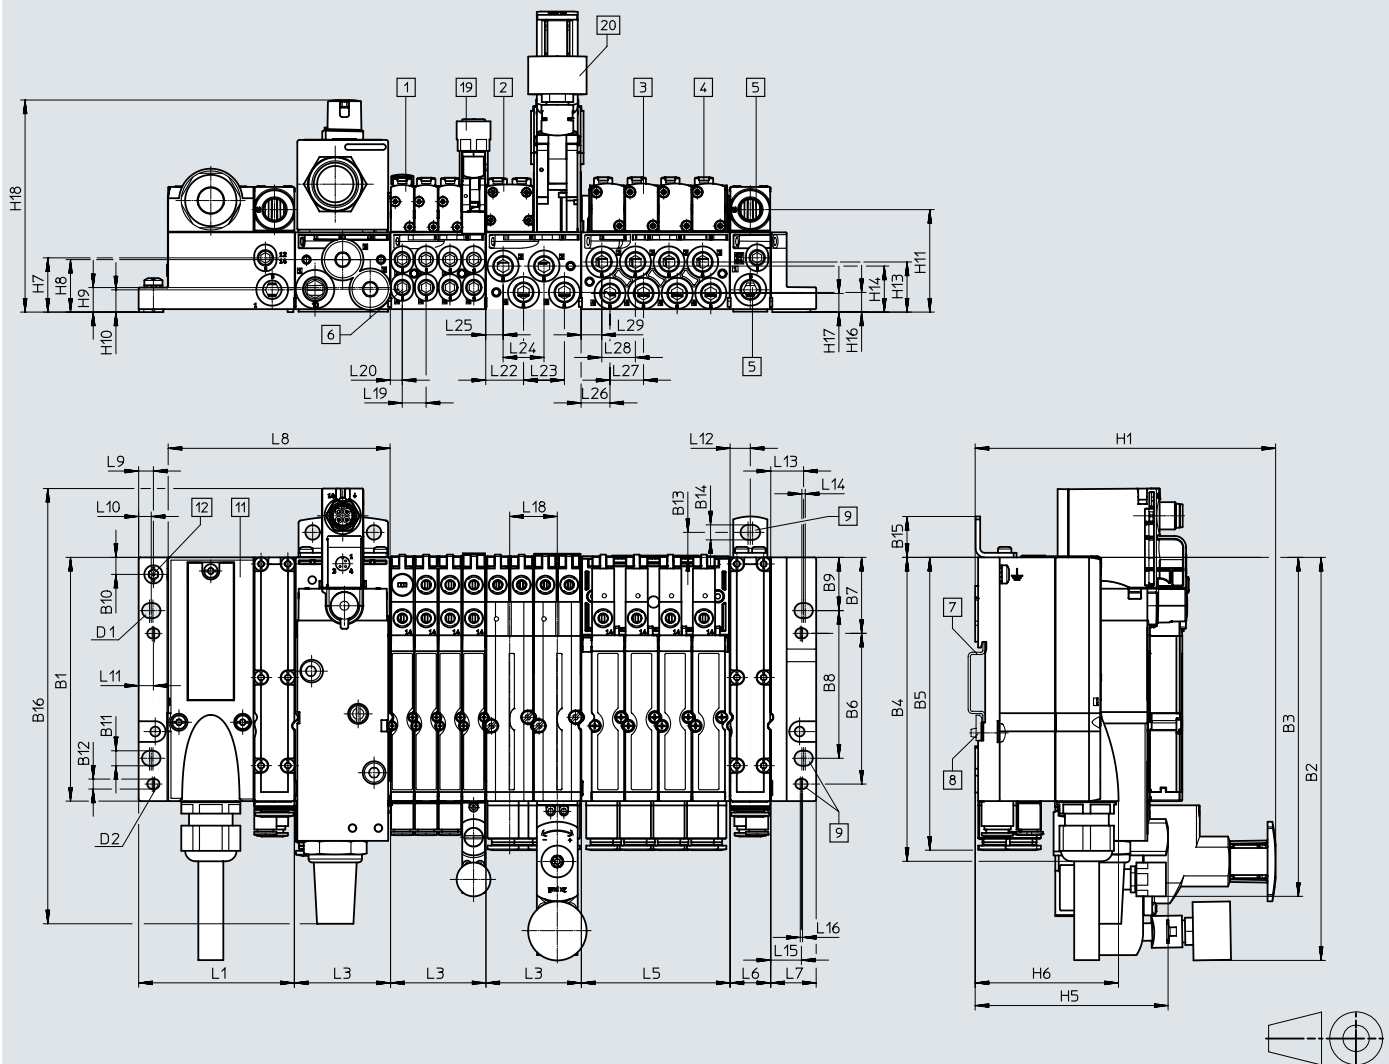
1) With sheet metal seal, inscription label holder, screws

Datasheet

Dimensions

Download CAD data → www.festo.com

Valve terminal with multi-pin plug connection:



- | | | |
|--------------------------|--------------------------------|-----------------------------|
| [1] Solenoid valve MPA1 | [6] Working ports | [12] Earthing screw |
| [2] Solenoid valve MPA2 | [7] DIN rail | [19] Vertical stacking MPA1 |
| [3] Solenoid valve MPA14 | [8] DIN rail mounting | [20] Vertical stacking MPA2 |
| [4] Manual override | [9] Mounting holes | |
| [5] Supply/exhaust ports | [11] Multi-pin plug connection | |

Type	B1	B2	B3	B4	B5	B6	B7	B8	B9	B10	B11	B12	B13	B14	B15
MPA-S (MP)	107.3	178	149.2	133.8	128.9	66.3	33.5	65	23.5	7.5	6.6	4.4	11	6.6	18

Type	D1	D2	H1	H2	H3	H4	H5	H6	H7	H8	H9	H10	H11	H13	H14
MPA-S (MP)	M6	M4	132.3	60.5	59	56	84.9	63.1	23.9	23.1	10.8	9.8	45.1	22.1	20.3

Type	H16	H17	L1	L3 ¹⁾	L5 ¹⁾	L6	L7	L8	L9	L10	L11	L12	L13
MPA-S (MP)	8.7	8.2	68.9	n x 42	n x 65.5	17.9	20	55.8	6.5	5.6	6.5	9	14.5

Type	L14	L15	L16	L18	L19	L20	L22	L23	L24	L25	L26	L27	L28	L29
MPA-S (MP)	1.5	13.5	1	21	10.5	5.3	16.7	18	18	7.7	12.7	14.8	14.8	9.1

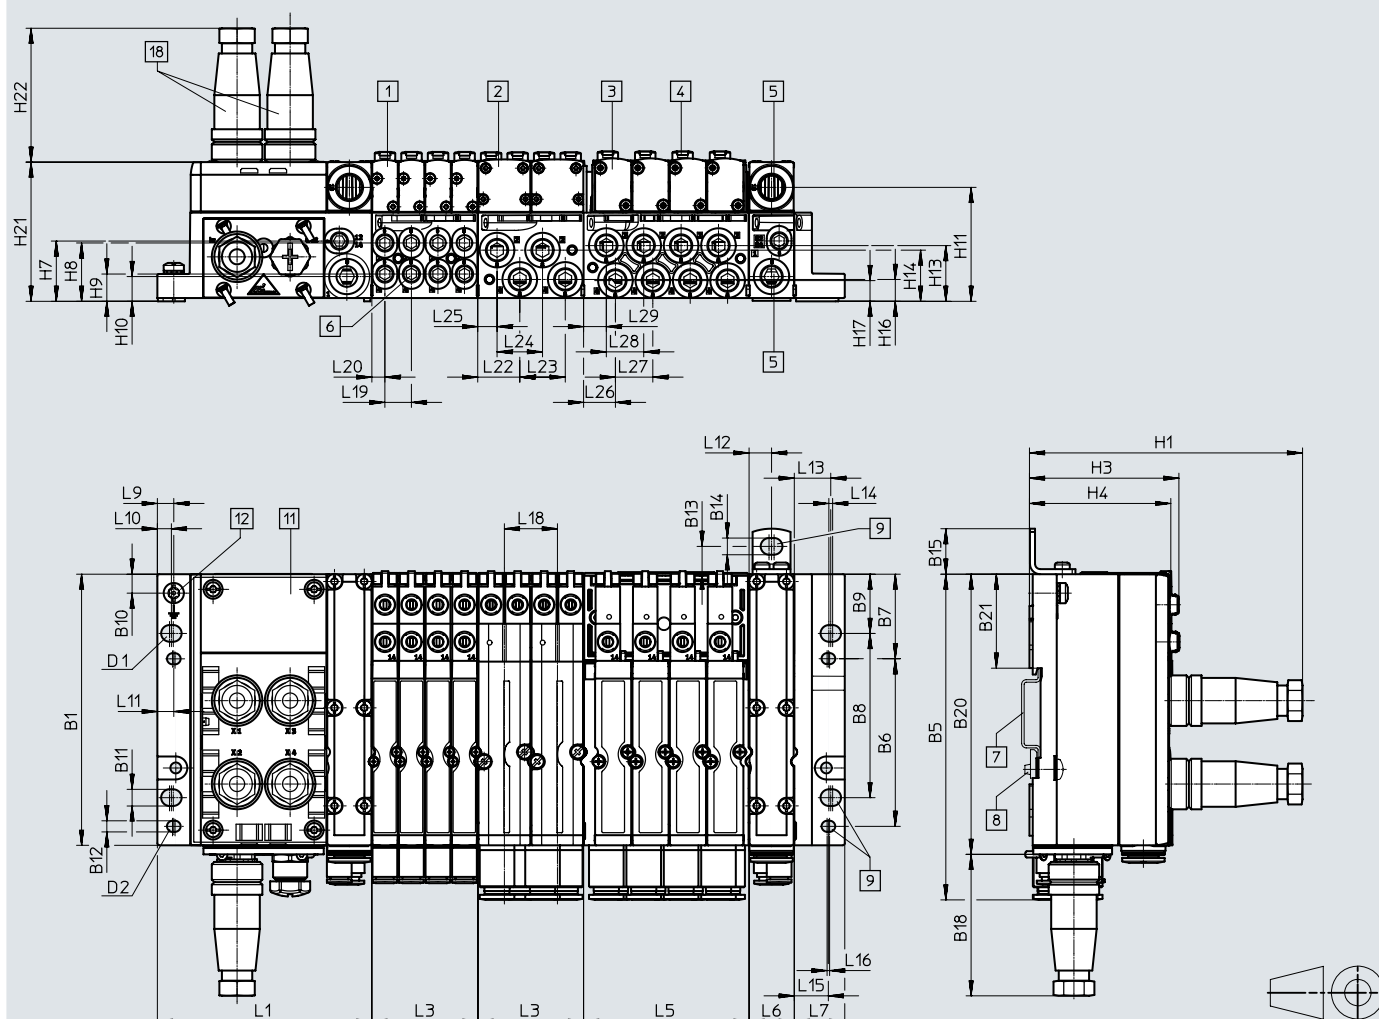
1) n = number of sub-bases (with MPA1, width 10 mm and MPA14, width 14 mm, max. 4 valve positions on sub-base; with MPA2, width 20 mm, max. 2 valve positions on sub-base)

Datasheet

Dimensions

Download CAD data → www.festo.com

Valve terminal with AS-Interface connection



- | | | |
|--------------------------|--------------------------|---------------------|
| [1] Solenoid valve MPA1 | [5] Supply/exhaust ports | [9] Mounting holes |
| [2] Solenoid valve MPA2 | [6] Working ports | [11] Manifold block |
| [3] Solenoid valve MPA14 | [7] DIN rail | [12] Earthing screw |
| [4] Manual override | [8] DIN rail mounting | [18] Plug M12 |

Type	B1	B5	B6	B7	B8	B9	B10	B11	B12	B13	B14	B15	B18	B20	B21
MPAS (AS-i)	107.3	128.9	66.3	33.5	65	23.5	7.5	6.6	4.4	11	6.6	18	56	110.9	37.2

Type	D1	D2	H1	H3	H4	H7	H8	H9	H11	H13	H14	H16	H17	H21	H22
MPAS (AS-i)	M6	M4	108.1	59	56	23.9	23.1	10.8	45.1	22.1	20.3	8.7	8.2	55.1	53

Type	L1	L3 ¹⁾	L5 ¹⁾	L6	L7	L9	L10	L11	L12	L13	L14	L15
MPA-S (AS-i)	85	n x 42	n x 65.5	17.9	20	6.5	5.6	6.5	9	14.5	1.5	13.5

Type	L16	L18	L19	L20	L22	L23	L24	L25	L26	L27	L28	L29
MPAS (AS-i)	1	21	10.5	5.2	16.7	18	18	7.7	12.6	14.8	14.8	9

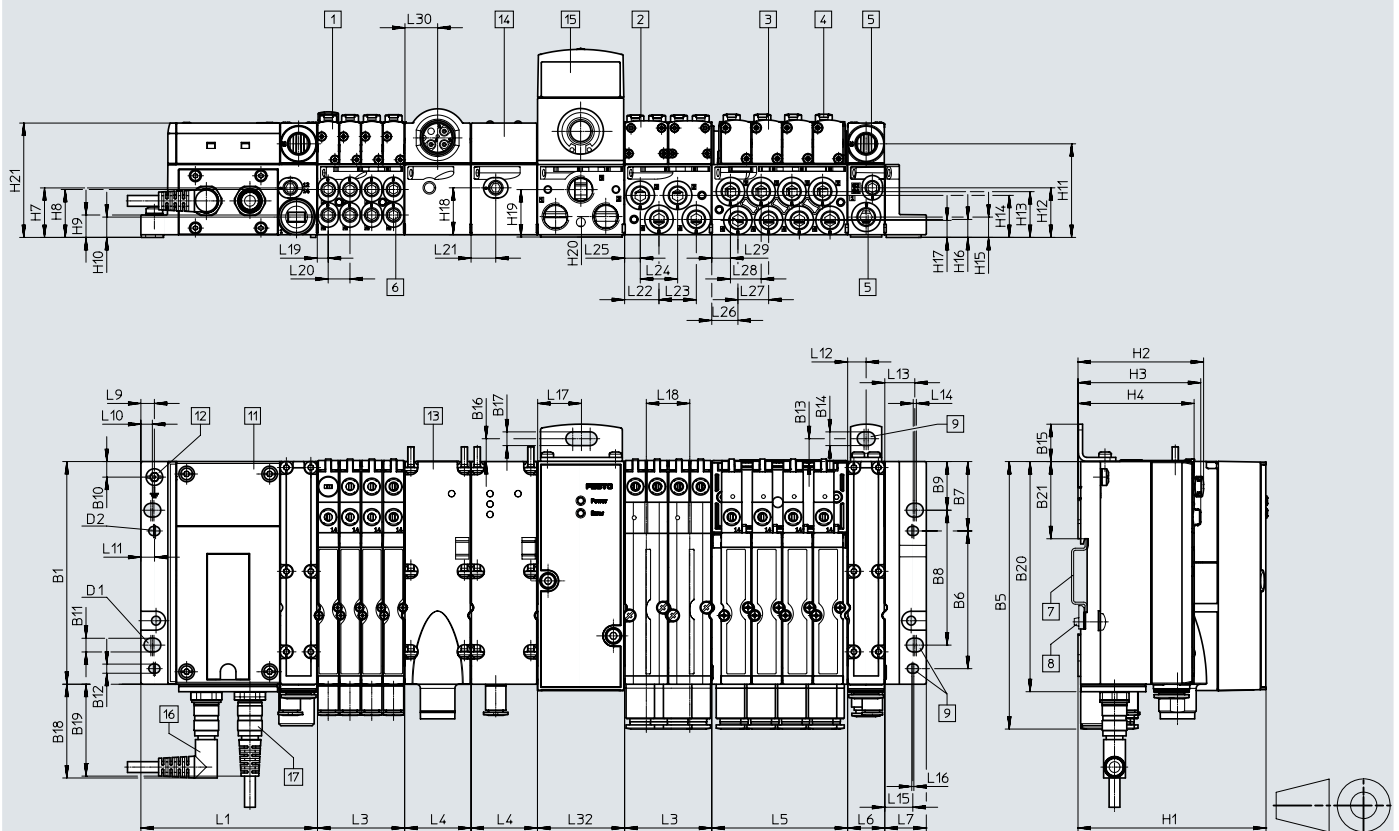
1) n = number of sub-bases (with MPA1, width 10 mm and MPA14, width 14 mm, max. 4 valve positions on sub-base; with MPA2, width 20 mm, max. 2 valve positions on sub-base)

Datasheet

Dimensions

Download CAD data → www.festo.com

Valve terminal with CPI connection



- | | | |
|--------------------------|------------------------------|--|
| [1] Solenoid valve MPA1 | [8] DIN rail mounting | [15] Proportional pressure regulator |
| [2] Solenoid valve MPA2 | [9] Mounting holes | [16] Connecting cable with angled plug |
| [3] Solenoid valve MPA14 | [11] Manifold block | [17] Connecting cable with straight plug |
| [4] Manual override | [12] Earthing screw | |
| [5] Supply/exhaust ports | [13] Electrical supply plate | |
| [6] Working ports | [14] Pressure sensor | |
| [7] DIN rail | | |

Type	B1	B5	B6	B7	B8	B9	B10	B11	B12	B13	B14	B15	B16	B17	B18	B19	B20	B21
MPA-S (CPI)	107.3	128.9	66.3	33.5	65	23.5	7.5	6.6	4.4	11	6.6	18	11	6.6	45.2	44.3	110.9	37.2

Type	D1	D2	H1	H2	H3	H4	H7	H8	H9	H10	H11	H12	H13	H14	H15	H16	H17
MPA-S (CPI)	M6	M4	90.6	60.5	59.1	56	23.9	23.1	10.8	9.8	45.1	23.9	22.1	20.3	9.8	8.7	8.2

Type	H18	H19	H20	H21	L1	L3 ¹⁾	L4	L5 ¹⁾	L6	L7	L9	L10	L11	L12	L13
MPA-S (CPI)	22.6	22.9	9.9	55.1	85	n x 42	32	n x 65.5	17.9	20	6.5	5.5	6.5	9	14.5

Type	L14	L15	L16	L17	L18	L19	L20	L21	L22	L23	L24	L25	L26	L27	L28	L29	L30	L32
MPA-S (CPI)	1.5	13.5	1	21	21	5.3	10.5	11.9	16.6	18	18	7.6	12.6	14.8	14.8	9	15.8	42

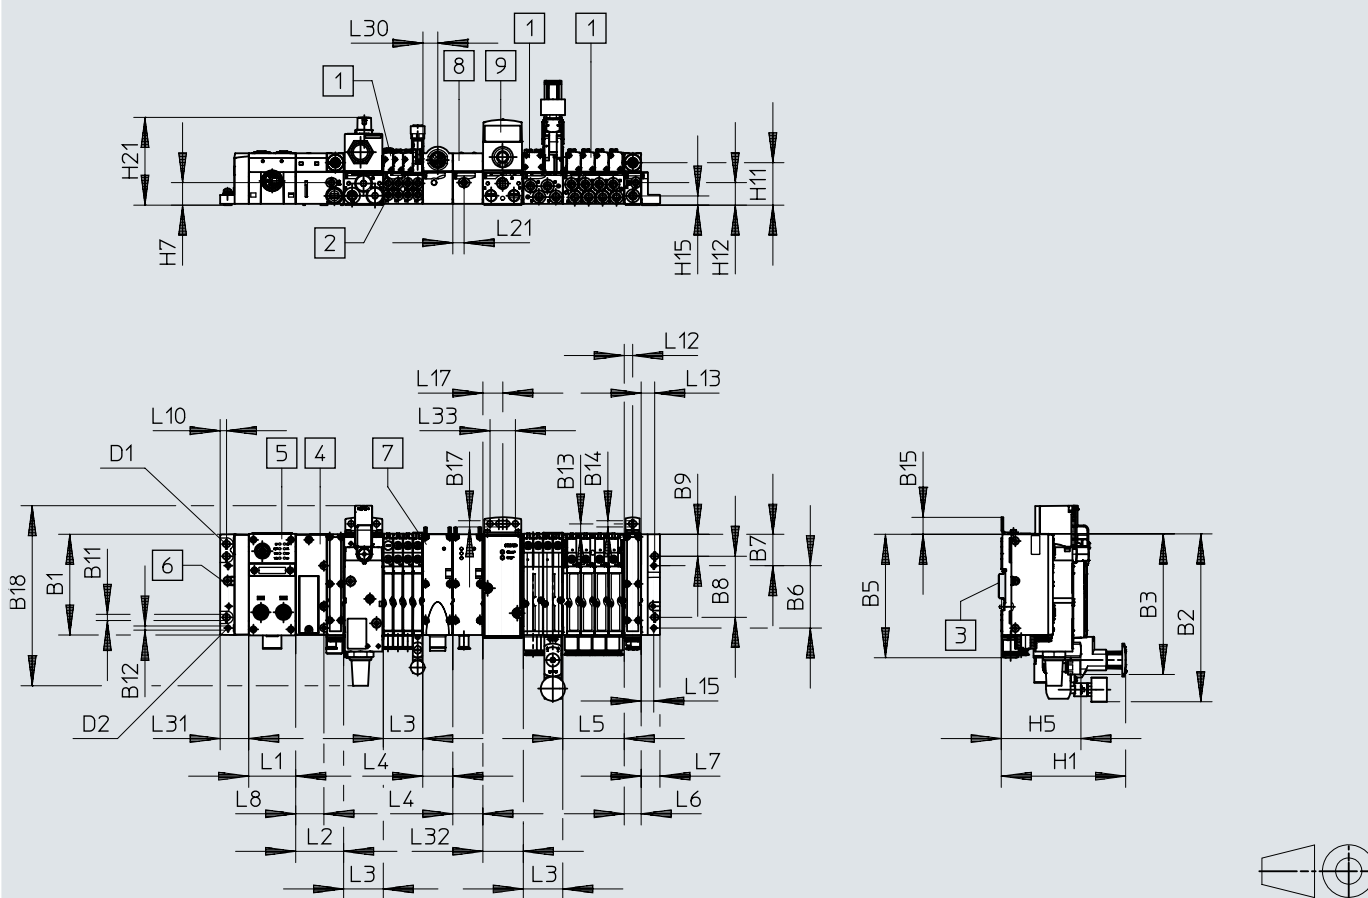
1) n = number of sub-bases (with MPA1, width 10 mm and MPA14, width 14 mm, max. 4 valve positions on sub-base; with MPA2, width 20 mm, max. 2 valve positions on sub-base)

Datasheet

Dimensions

Download CAD data → www.festo.com

Valve terminal with fieldbus interface



- | | | |
|--------------------------|------------------------------|--------------------------------------|
| [1] Solenoid valve MPA1 | [8] DIN rail mounting | [14] Pressure sensor |
| [2] Solenoid valve MPA2 | [9] Mounting holes | [15] Proportional pressure regulator |
| [3] Solenoid valve MPA14 | [10] Pneumatic interface MPA | [19] Vertical stacking MPA1 |
| [4] Manual override | [11] CPX module | [20] Vertical stacking MPA2 |
| [5] Supply/exhaust ports | [12] Earthing screw | |
| [6] Working ports | [13] Electrical supply plate | |
| [7] DIN rail | | |

Type	B1	B2	B3	B5	B6	B7	B8	B9	B11	B12	B13	B14	B15	B16	B17	D1	D2
MPA-S (FB)	107.3	178	149.2	129	66.4	33.5	65	23.5	6.6	4.4	11	6.6	18	11	6.6	M6	M4

Type	H1	H2	H3	H4	H5	H7	H8	H9	H10	H11	H12	H13	H14	H15	H16	H17	H18	H19	H20
MPA-S (FB)	132.3	60.5	59.1	56	84.9	23.9	23.1	10.8	9.8	45.1	23.9	22.1	20.3	9.8	8.7	8.2	22.6	22.9	9.9

Type	L1 ¹⁾	L2	L3 ²⁾	L4	L5 ²⁾	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16
MPA-S (FB)	m x 50.1	51.3	n x 42	32	n x 65.5	17.9	20	30	7.9	6.8	8.5	9	14.5	1.5	13.5	1

Type	L17	L18	L19	L20	L21	L22	L23	L24	L25	L26	L27	L28	L29	L30	L31	L32
MPA-S (FB)	21	21	5.3	10.5	11.9	16.6	18	18	7.6	12.6	14.8	14.8	9	15.8	30.4	42

1) m = number of CPX modules

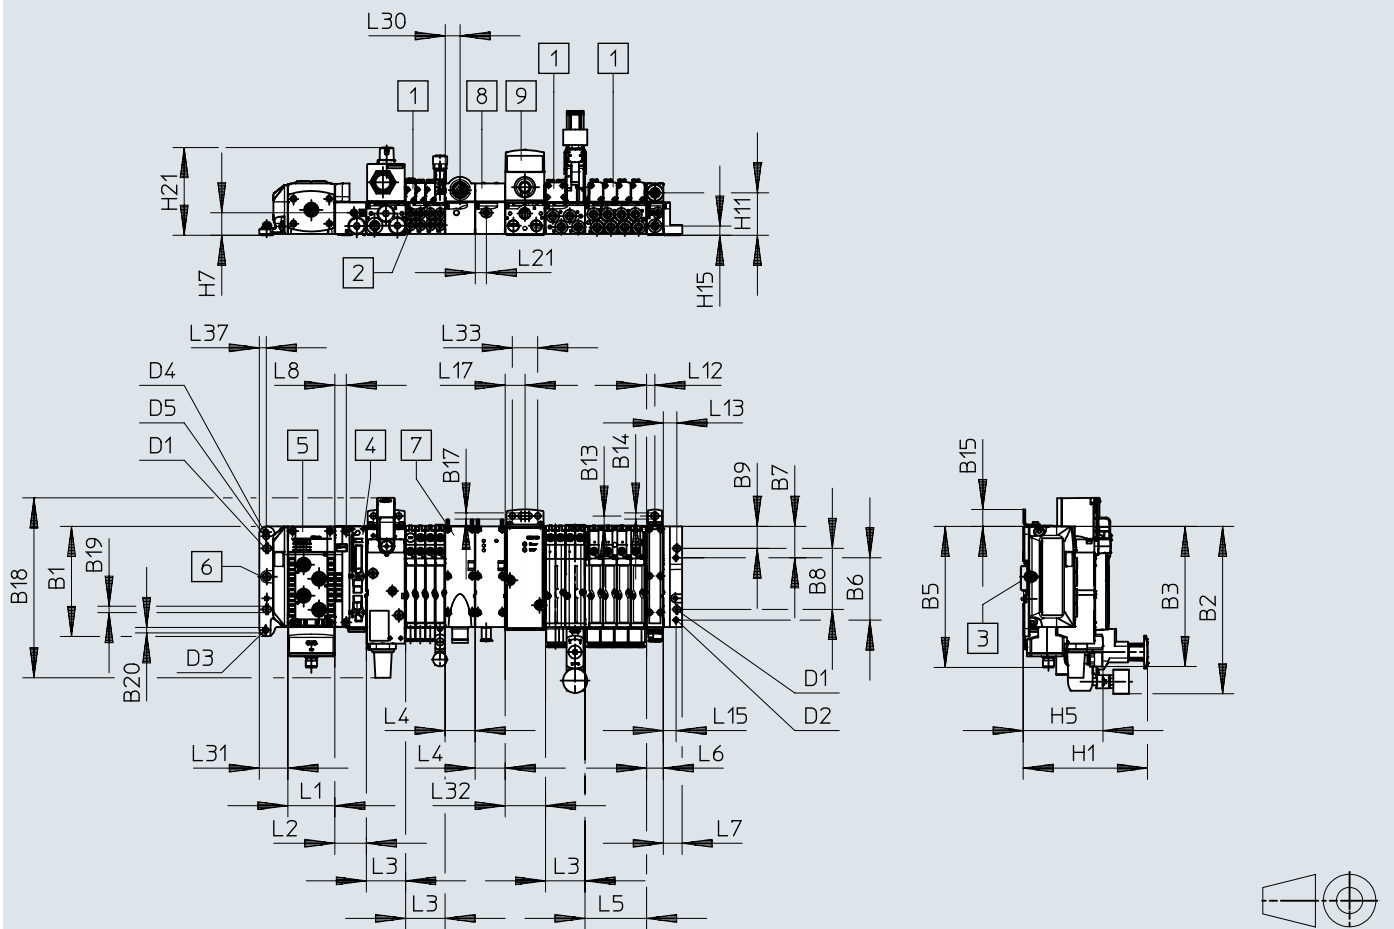
2) n = number of sub-bases (with MPA1, width 10 mm and MPA14, width 14 mm, max. 4 valve positions on sub-base; with MPA2, width 20 mm, max. 2 valve positions on sub-base)

Datasheet

Dimensions

Download CAD data → www.festo.com

Valve terminal with fieldbus interface CPX-AP-A



- [1] Solenoid valve
- [2] Working ports
- [3] DIN rail
- [4] Pneumatic interface MPA
- [5] CPX module
- [6] Earthing screw
- [7] Electrical supply plate
- [8] Pressure sensor
- [9] Proportional pressure regulator

Type	B1	B2	B3	B5	B6	B7	B8	B9	B11	B12	B13	B14	B15	B17	B18	B19	B20
MPA-FB-AP-VI	117.2	178	149.2	150.3	66.4	33.5	65	23.5	6.6	4.4	11	6.6	18	6.6	191.6	6.7	5.7

Type	D1		D2		D3		D4 Ø		D5 Ø	
MPA-FB-AP-VI	M6		M4		M5		5.7		6.7	

Type	H1	H5	H7	H8	H9	H10	H11	H12	H13	H14	H15	H16	H17	H18	H19	H20	H21
MPA-FB-AP-VI	132.3	84.9	23.9	23.1	10.8	9.8	45.1	23.9	22.1	20.3	9.8	8.7	8.2	22.6	22.9	9.9	93.4

Type	L1	L2	L3	L4	L5	L6	L7	L8	L10	L11	L12	L13	L15	L17	L18	L19	L20
MPA-FB-AP-VI	50.1	34.1	42	32	65.5	17.9	20	12.3	6.8	6.9	9	14.5	13.5	21	21	5.3	10.5


Type	L21	L22	L23	L24	L25	L26	L27	L28	L29	L30	L31	L32	L33	L34	L35	L36	L37
MPA-FB-AP-VI	11.9	16.6	18	18	7.6	12.6	14.8	14.8	9	15.8	30.4	42	27	0.8	8.3	2.5	7.4

Datasheet

Dimensions


Download CAD data → www.festo.com

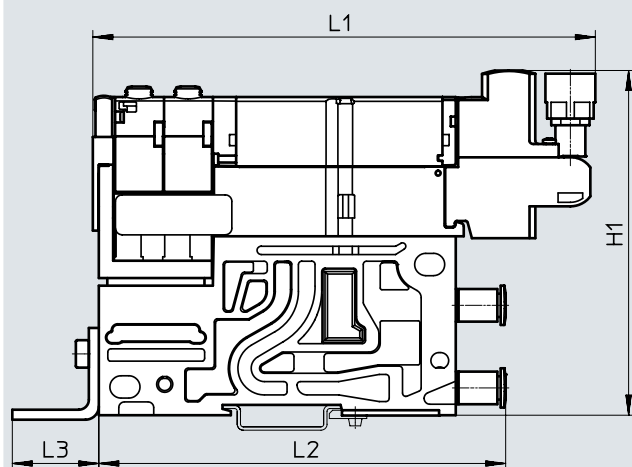Vertical stacking components, regulator plate VMPA1



Type	H1	L1	L2	L3
VMPA1-...	105	151.1	122.3	26.9

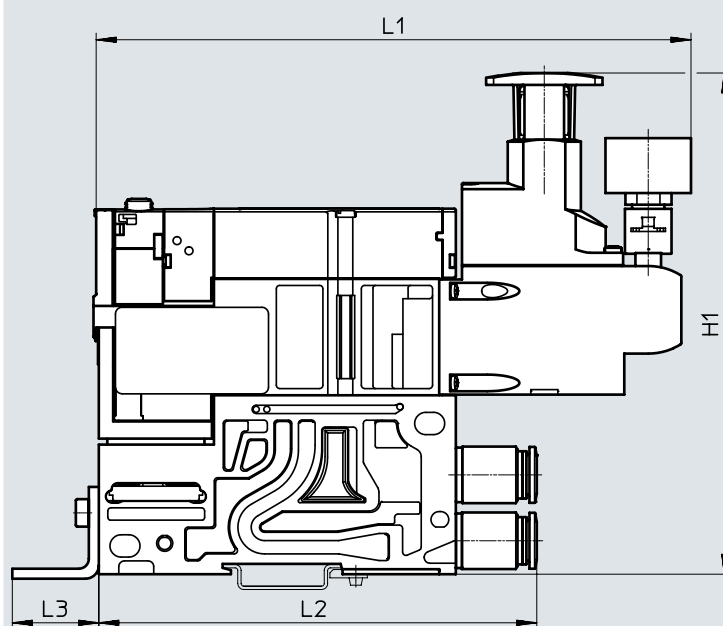
Vertical stacking components, regulator plate VMPA2



Type	H1	L1	L2	L3
VMPA2-...	152	179.6	131.6	26.9

Datasheet – Proportional pressure regulator VPPM

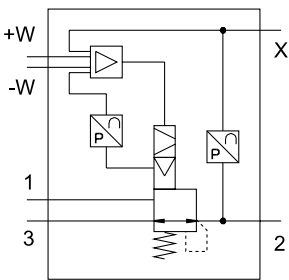Function:



-  - Flow rate
380 ... 1650 l/min
-  - Pressure regulation ranges
0.02 ... 10 bar
-  - Voltage
21.6 ... 26.4 V DC



General technical data			VPPM-6TA	VPPM-8TA
Valve function			3-way proportional pressure regulator	
Design			Piloted diaphragm regulator	
Application area			For CPI connection, for fieldbus	
Type of mounting			Via through-hole or accessories	
Sealing principle			Soft	
Actuation type			Electrical	
Type of control			Piloted	
Mounting position			Any	
Reset method			Mechanical spring	
Display type			LED	Back-lit LCD
Pneumatic connection			1, 2, 3	
Nominal width	Pressurisation	[mm]	6	8
	Exhausting	[mm]	4.5	7
Standard nominal flow rate	2 bar type	[l/min]	380	450
	6 bar type	[l/min]	900	1050
	10 bar type	[l/min]	1400	1650
Product weight			400	500
Material			Housing	
			Anodised wrought aluminium alloy	

Electrical data		
Electrical connection		Via sub-base
Operating voltage range	[V DC]	21.6 ... 26.4
Residual ripple	[%]	10
Max. electrical power consumption	[W]	7
Duty cycle	[%]	100
Short circuit current rating		For all electrical connections
Reverse polarity protection		For all electrical connections
Degree of protection to EN 60529		IP65

-  - **Note**
The output pressure will be un-regulated if there is a break in the power supply cable.

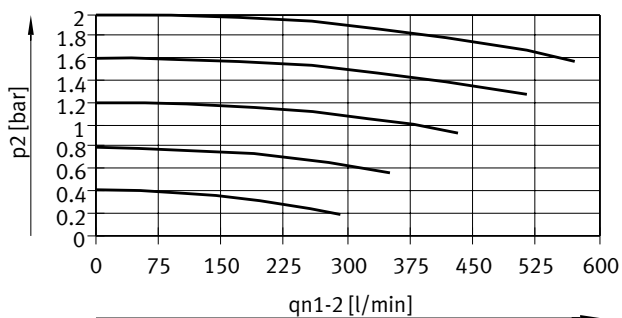
-  - **Note**
Note possible restrictions for the IP protection class
a ATEX declaration of conformity

Datasheet – Proportional pressure regulator VPPM

Flow rate q_{n1-2} from 1 → 2 as a function of output pressure p_2


VPPM-6TA-...-0L2H-...

(2 bar)




VPPM-6TA-...-0L6H-...

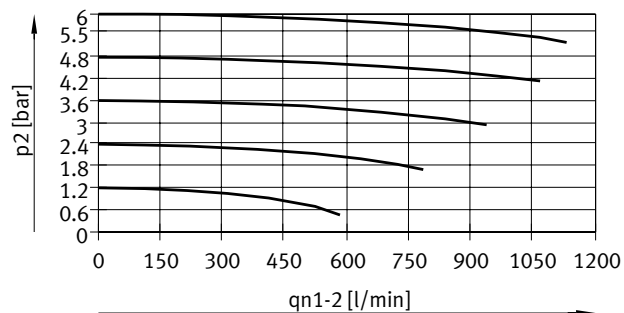(6 bar)



VPPM-6TA-...-0L10H-...

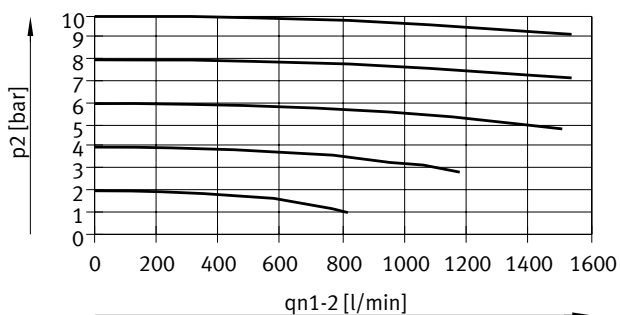
(10 bar)



Flow rate q_{n2-3} from 2 → 3 as a function of output pressure p_2


VPPM-6TA-...-0L2H-...

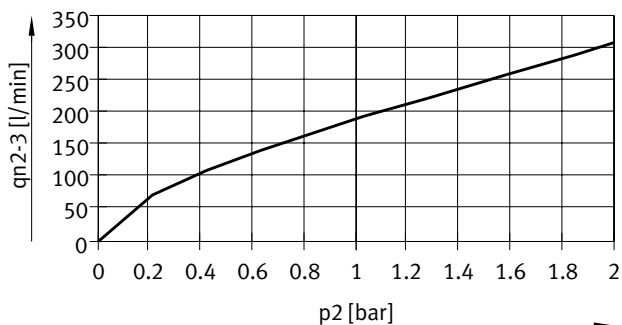(2 bar)




VPPM-6TA-...-0L6H-...

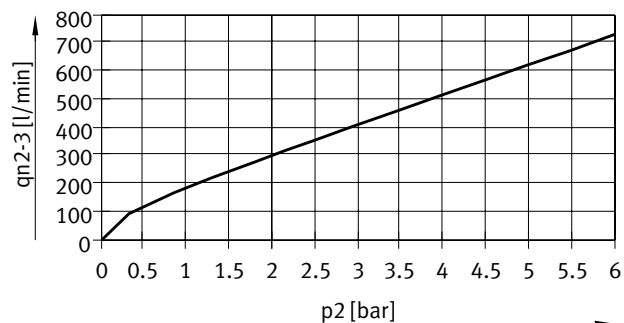(6 bar)



VPPM-6TA-...-0L10H-...

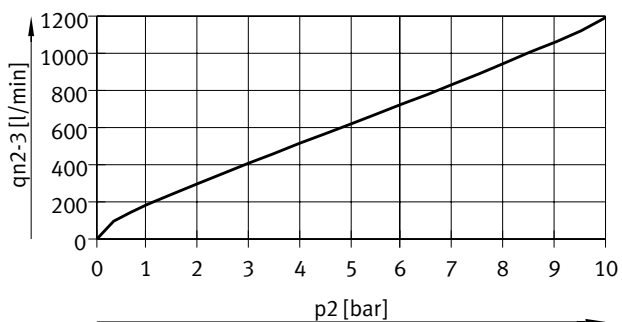(10 bar)




Datasheet – Proportional pressure regulator VPPM

Flow rate q_{n1-2} from 1 → 2 as a function of output pressure p_2


VPPM-8TA-...-0L2H-...

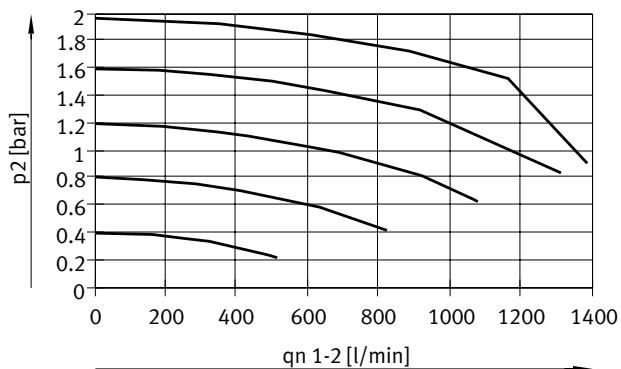(2 bar)




VPPM-8TA-...-0L6H-...

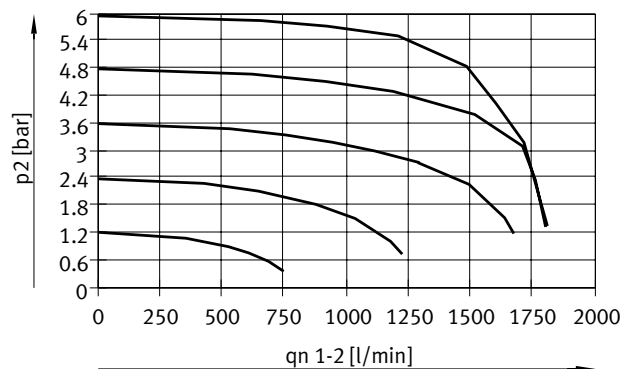(6 bar)



VPPM-8TA-...-0L10H-...

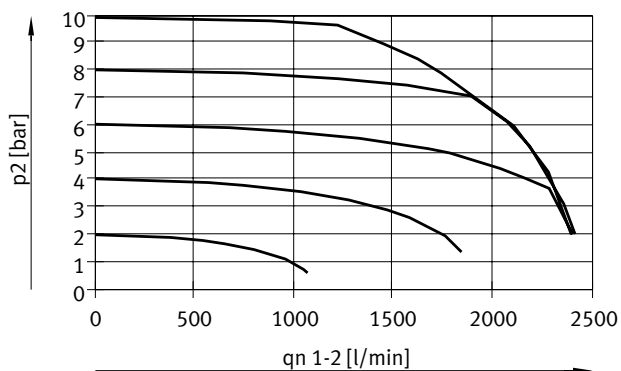
(10 bar)



Flow rate q_{n2-3} from 2 → 3 as a function of pressure p_2


VPPM-8TA-...-0L2H-...

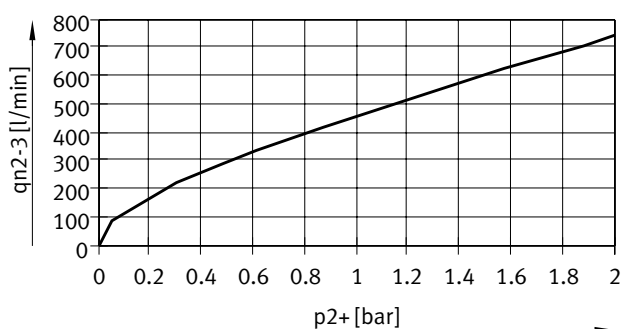(2 bar)



VPPM-8TA-...-0L6H-...

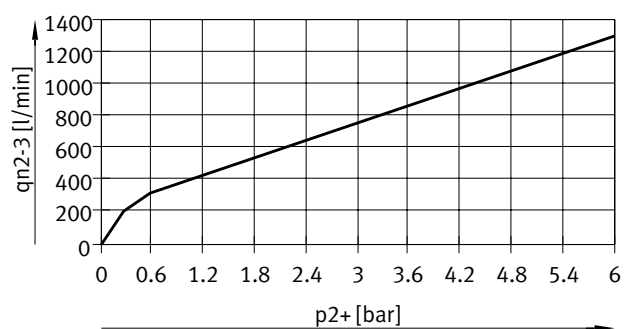(6 bar)



VPPM-8TA-...-0L10H-...

(10 bar)



Datasheet – Proportional pressure regulator VPPM

Operating and environmental conditions			VPPM-6TA	VPPM-8TA
Operating medium			Compressed air to ISO 8573-1:2010 [7:4:4] Inert gases	
Note on the operating/pilot medium			Lubricated operation not possible	
Pressure regulation range	VPPM-...-0L2H-...	[MPa]	0.002 ... 0.2	
		[bar]	0.02 ... 2	
	VPPM-...-0L6H-...	[MPa]	0.006 ... 0.6	
		[bar]	0.06 ... 6	
	VPPM-...-0L10H-...	[MPa]	0.01 ... 1	
		[bar]	0.1 ... 10	
Input pressure 1 ¹⁾	VPPM-...-0L2H-...	[MPa]	0 ... 0.4	
		[bar]	0 ... 4	
	VPPM-...-0L6H-...	[MPa]	0 ... 0.8	
		[bar]	0 ... 8	
	VPPM-...-0L10H-...	[MPa]	0 ... 1.1	
		[bar]	0 ... 11	
Max. pressure hysteresis	VPPM-...-0L2H-...	[bar]	0.01	
	VPPM-...-0L6H-...	[bar]	0.03	
	VPPM-...-0L10H-...	[bar]	0.05	
Linearity error FS (full scale)	Standard	[%]	2	
	Type S1	[%]	1	
Repetition accuracy FS (full scale)		[%]	0.5	
Temperature coefficient		[%/K]	0.04	
Ambient temperature		[°C]	0 ... 60	0 ... 50
Temperature of medium		[°C]	10 ... 50	
Corrosion resistance class CRC ²⁾			2	
KC marking			KC EMC	
CE marking (see declaration of conformity ⁴⁾)			To EU EMC Directive ³⁾	
			To EU RoHS Directive	
			To UK EMC regulations ³⁾	
UKCA marking (see declaration of conformity ⁴⁾)			To UK RoHS regulations	
			To UK RoHS regulations	
Certification			RCM	
			c UL us - Listed (OL)	
Certificate-issuing authority			UL E322346	
LABS (PWIS) conformity			VDMA24364-B1/B2-L	

1) Input pressure 1 should always be 1 bar greater than the maximum regulated output pressure.

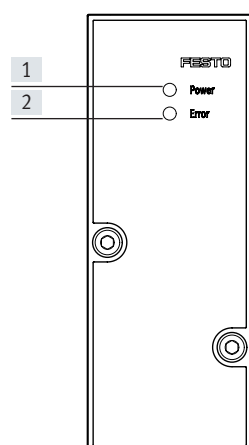
2) More information www.festo.com/x/topic/crc

3) For information about the area of use, see the EC declaration of conformity at: www.festo.com/catalogue/...d/Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

4) More information www.festo.com/catalogue/...d/Support/Downloads.

LEDs on the proportional pressure regulator VPPM-6TA



[1] Green power LED

[2] Red error LED

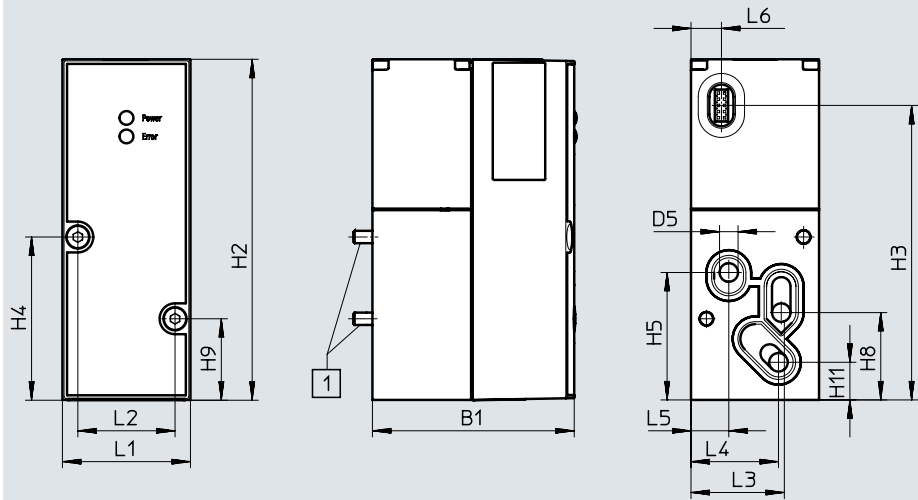
Datasheet – Proportional pressure regulator VPPM

Dimensions

Download CAD data → www.festo.com

VPPM-6TA

[1] Socket head screw M4x55




Type	B1	D5 ø	H2	H3	H4	H5	H8	H9	H11
VPPM-6TA	55.5	6	110.4	95.5	52.8	41.3	28.3	26.3	12.2

Type	L1	L2	L3	L4	L5	L6
VPPM-6TA	41.5	31.5	30.3	28.4	12.3	9.9

VPPM-8TA with LCD

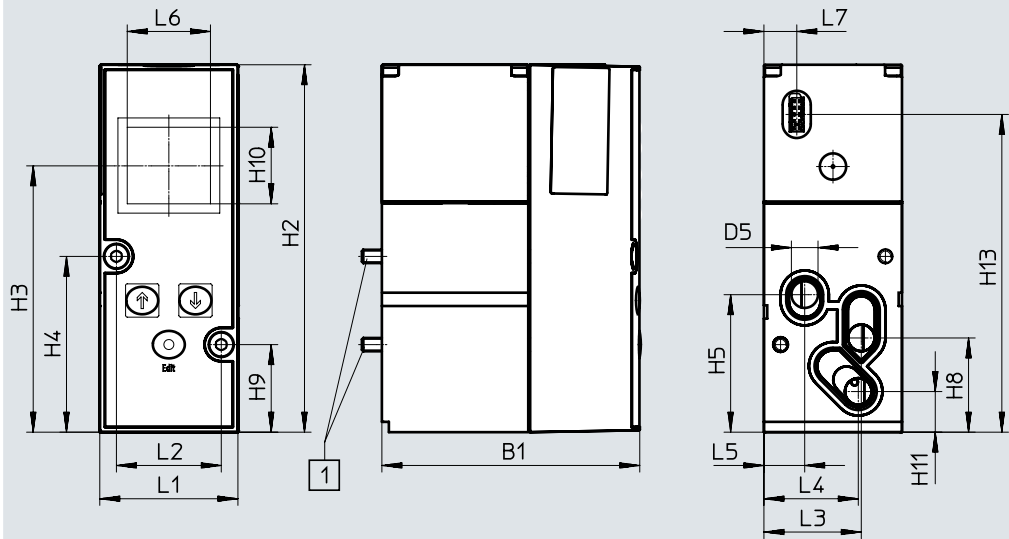[1] Socket head screw M4x77








Type	B1	D5 ø	H2	H3	H4	H5	H8	H9	H10	H11	H13
VPPM-8TA	77.4	8	110.4	80	52.8	41.3	28.3	26.3	23	12.2	95.5

Type	L1	L2	L3	L4	L5	L6	L7
VPPM-8TA	41.5	31.5	29.3	28.4	12.3	25	9.9

Datasheet – Proportional pressure regulator VPPM


Ordering data					
Code	Overall accuracy [%]	Input pressure 1 [MPa]	Pressure regulation range [MPa]	Part no.	Type
QA	2	0 ... 0.4	0.002 ... 0.2	542220	VPPM-6TA-L-1-F-0L2H
QD	1	0 ... 0.4	0.002 ... 0.2	542217	VPPM-6TA-L-1-F-0L2H-S1
QB	2	0 ... 0.8	0.006 ... 0.6	542221	VPPM-6TA-L-1-F-0L6H
QE	1	0 ... 0.8	0.006 ... 0.6	542218	VPPM-6TA-L-1-F-0L6H-S1
QC	2	0 ... 1.1	0.01 ... 1	542222	VPPM-6TA-L-1-F-0L10H
QF	1	0 ... 1.1	0.01 ... 1	542219	VPPM-6TA-L-1-F-0L10H-S1
QL	1	0 ... 0.4	0.002 ... 0.2	572407	VPPM-8TA-L-1-F-0L2H-S1C1
QG	2	0 ... 0.4	0.002 ... 0.2	572410	VPPM-8TA-L-1-F-0L2H-C1
QM	1	0 ... 0.8	0.006 ... 0.6	572408	VPPM-8TA-L-1-F-0L6H-S1C1
QH	2	0 ... 0.8	0.006 ... 0.6	572411	VPPM-8TA-L-1-F-0L6H-C1
QN	1	0 ... 1.1	0.01 ... 1	572409	VPPM-8TA-L-1-F-0L10H-S1C1
QK	2	0 ... 1.1	0.01 ... 1	572412	VPPM-8TA-L-1-F-0L10H-C1

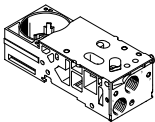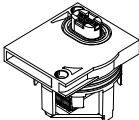Ordering data – Accessories			
Designation		Part no.	Type
	Mounting	558844	VMPA-BG
	Sub-base without electrical interlinking module and without electronics module	542223	VMPA-FB-AP-P1
	Cover plate	559638	VMPA-P-RP
	Electrical interlinking module for sub-base of the proportional pressure regulator	537998	VMPA1-FB-EV-AB
	Electronics module	542224	VMPA-FB-EMG-P1


Datasheet – Soft-start valve for MPA-S

Function

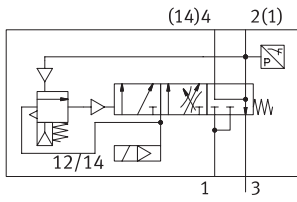
Without manual override



With manual override

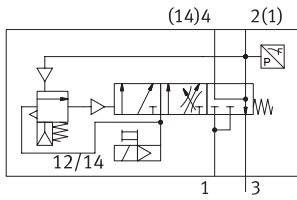

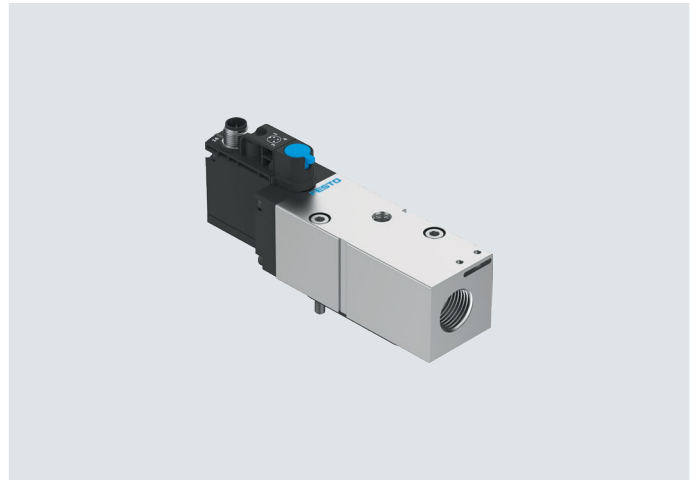-  - Flow rate
Pressurisation:
3000 l/min
Exhausting: 3300 l/min
-  - Module width
41 mm
-  - Temperature range
-5 ... +50 °C
-  - Operating pressure
0.2 ... 1 MPa



Description

Smart valve functions

The basic functions are the same as with the known soft-start valves. There is a variant with internal pilot air supply and a variant without internal pilot air supply. In addition, the new smart soft-start valve has:

- An integrated pressure sensor for sensing the exhausted position
- A manual override with protection against unintended actuation, as well as an automatic reset

The purpose of the soft-start valve is to slowly and safely build up the supply pressure in duct 1 of the valve terminal or to quickly exhaust it via duct 1.

Switch-on takes place in two stages:

- First the working pressure for duct 1 gradually increases (the speed can be adjusted using a throttle screw).

- Once the working pressure in duct 1 reaches half the operating pressure, the soft-start valve switches to full operating pressure at duct 1 of the valve terminal.

The switching point is permanently set at 50% of the operating pressure. The full operating pressure is applied at duct 14 (pilot air) at all times. This pressure causes the valves on the valve terminal to move to the required switching position before pressure is available in duct 1, so an unspecified position is not possible.

Duct 1 of the valve terminal is exhausted via the soft-start valve's exhaust port in the normal position, when the valve is not switched.

A detenting manual override with self-reset via an electrical control signal is available for maintenance and service purposes.

Pressure monitoring

The pilot air switching valve has an M8 plug connector with which the pilot air is monitored by a sensor.

The external sensor interface is defined as a digital 24 V interface.

This connection is omitted for a valve terminal with a fieldbus interface, and the signal is transmitted via the internal bus.

Datasheet – Soft-start valve for MPA-S


General technical data				
Design		Piston spool valve		
Grid dimension	[mm]	41		
Valve size	[mm]	40		
Overlap		Negative overlap		
Actuation type		Electrical		
Sealing principle		Soft		
Type of mounting		On sub-base		
Mounting position		Any		
Valve function		Soft-start and exhaust function		
Reset method		Mechanical spring		
Type of control		Piloted		
Flow direction		Not reversible		
Pneumatic port 3		G1/2		
Product weight	[g]	466		
Switch-on point	[bar]	0.2		
Maximum switch-on point	[bar]	0.3		
Minimum switch-off point	[bar]	0.05		
Standard nominal flow rate [l/min]				
Pressurisation		3000		
Exhausting		3300		
Operating and environmental conditions				
Type		VABF-S6-1-P5A4S1-...-PZ	VABF-S6-1-P5A4S1-...-PA	VABF-S6-1-P5A4S2-...-PZ VABF-S6-1-P5A4S2-...-PA
Operating medium		Compressed air to ISO 8573-1:2010 [7:4:4]		
Pilot medium		Compressed air to ISO 8573-1:2010 [7:4:4]		
Notes on operating/ pilot medium		Lubricated operation not possible		
Switchover pressure		Not adjustable Switching point between 50 - 75% of operating pressure		
Operating pressure	[MPa]	0.3 ... 1		0.2 ... 1
	[bar]	3 ... 10		2 ... 10
Pilot pressure	[MPa]	0.3 ... 0.8	0.3 ... 1	0.2 ... 1
	[bar]	3 ... 8	3 ... 10	2 ... 10
Standard nominal flow rate for pressurisation	[l/min]	3000		
Note pressurisation	[l/min]	VTSA: 3000		
		MPA: 1200		
Standard nominal flow rate for exhausting	[l/min]	3300		
Note exhausting	[l/min]	VTSA: 3300		
		MPA: 1600		
Ambient temperature	[°C]	−5 ... +50		
Storage temperature	[°C]	−20 ... +60		
Temperature of medium	[°C]	−5 ... +50		
Relative humidity	[%]	Max. 90 at 40 °C		
Corrosion resistance class CRC ¹⁾		0		
Note on forced checking procedure		Switching frequency min. once a month		

1) More information www.festo.com/x/topic/crc

Datasheet – Soft-start valve for MPA-S


Safety characteristics		
Max. positive test pulse with logic 0	[µs]	2000
Max. negative test pulse with logic 1	[µs]	1200
Shock resistance	Shock test with severity level 2, to EN 60068-2-27	
Vibration resistant	Transport application test with severity level 2, to EN 60068-2-6	

Electrical data for soft-start valve		Fieldbus	Multi-pin plug
Electrical connection		Plug-in	
Sensor connection		–	Plug
			3-pin
			M12x1
Nominal operating voltage	[V]	24 DC	
Characteristic coil values		24 V DC: 1.6 W	
Permissible voltage fluctuations	[%]	±10%	
Nominal pick-up current per solenoid coil	[mA]	60 up to 35 ms	
Additional functions		Holding current reduction	
Nominal current with current reduction	[mA]	11 after 35 ms	
Degree of protection		IP65	
Pressure sensor		Integrated (plug-in)	
Sensor evaluation		Internal	–
Switching element function		N/C	
Switching position sensing		Via pressure switch, exhausted status	
Signal status indication		Yellow LED, valve control	
		Green LED, pressure switch, exhausted status	
Duty cycle	[%]	100	

Electrical connection			
	[1]	Connection plug M12, 3-pin	Pin1 – + 24 V DC
			Pin3 – 0 V DC
			Pin4 – Out
			Supply voltage
			0 V DC
			Switching output

Materials		Fieldbus	Multi-pin plug
Housing	Wrought aluminium alloy		
Seals	NBR, HNBR		
Screws	Galvanised steel		
Note on materials	RoHs-compliant		
LABS (PWIS) conformity	VDMA24364-B1/B2-L		VDMA24364-Zone III

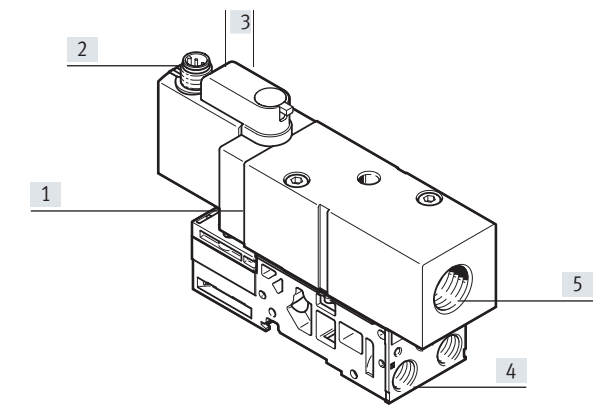Connection and indicator components



- [1] Basic valve housing

[2] Sensor connection

[3] Manual override (optional)
- [4] Pressure supply, duct 1

[5] Exhaust air port for duct 3/5

Datasheet – Soft-start valve for MPA-S

Valve function		
Terminal code	Circuit symbol	Description
PT QT		• With pilot air supply • With manual override
PR QR		• With pilot air supply • Without manual override
PU QU		• Without pilot air supply • With manual override
PS QS		• Without pilot air supply • Without manual override

Datasheet – Soft-start valve for MPA-S

Dimensions





Download CAD data → www.festo.com

Soft-start valve with manifold sub-base





[1] Soft-start valve
[2] Manifold sub-base
[3] Seal
[4] Socket head screw M5x45 for manifold sub-base (captive)
[5] Manual override, self-resetting (code: YE) or concealed (code: S)
[6] Silencer
[7] Silencer
[8] Fitting

Type	B1	B2	B3	H1	H2	H3	H4	L1	L2	L3
VABF-S6-1-P5A4...	41	40.4	18.2	58.1	46	40.5	1	155.1	61.8	142

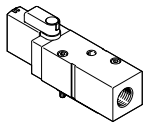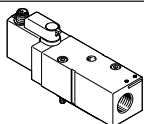


Accessories – Soft-start valve for MPA-S

Ordering data – Soft-start valve without manifold sub-base						
	Code	Description		Part no.	Type	
Electrical control, fieldbus						
	PM	Pilot pressure build-up from duct 1	Manual override detenting, self-resetting via electrical control signal	8067407	VABF-S6-1-P5A4S1YE-G12-1T5-PA	
			No manual override	8067411	VABF-S6-1-P5A4S1S-G12-1T5-PA	
	PN	No pilot pressure build-up from duct 1	Manual override detenting, self-resetting via electrical control signal	8067405	VABF-S6-1-P5A4S2YE-G12-1T5-PA	
			No manual override	8067409	VABF-S6-1-P5A4S2S-G12-1T5-PA	
Electrical control, multi-pin						
	PM	Pilot pressure build-up from duct 1	Manual override detenting, self-resetting via electrical control signal	8161609	VABF-S6-1-P5A4S1YE-G12-1T1L-PZ	
			No manual override	8161611	VABF-S6-1-P5A4S1S-G12-1T1L-PZ	
	PN	No pilot pressure build-up from duct 1	No manual override	8161610	VABF-S6-1-P5A4S2S-G12-1T1L-PZ	
			Manual override detenting, self-resetting via electrical control signal	8161608	VABF-S6-1-P5A4S2YE-G12-1T1L-PZ	
Ordering data – Sub-base						
	Description		Weight [g]	Part no.	Type	
Sub-base for soft-start valve						
	Without electrical interlinking module		Without electronics module	155	8093454	VMPA-FB-AP-1-P5
	With electrical interlinking module		Electronic module for fieldbus interface	175	8161057	VMPA-FB-AP-1-EMG-P5
	With short electrical interlinking module		Electronic module for multi-pin connection	175	8161059	VMPA-FB-AP-1-EMM-P5-SK
	With long electrical interlinking module		Electronic module for multi-pin connection	175	8161060	VMPA-FB-AP-1-EMM-P5-SL
Mounting bracket						
	–		17	8161011	VMPA-BG-P5	

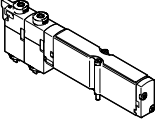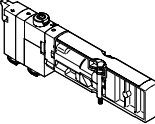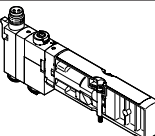
Accessories

Ordering data		Code	Valve function	Part no.	Type
Individual solenoid valve – Width 10 mm					
	5/2-way valve				
	Position function 1-32: M	Single solenoid		533342	VMPA1-M1H-M-PI
	Position function 1-32: MS	Single solenoid, mechanical spring return		571334	VMPA1-M1H-MS-PI
	Position function 1-32: MSC	Single solenoid, with spring return, switching position sensing		8186953	VMPA1-M1H-MS-PI
	Position function 1-32: MU	Polymer poppet valve, single solenoid, mechanical spring return		553113	VMPA1-M1H-MU-PI
	Position function 1-32: J	Double solenoid		533343	VMPA1-M1H-J-PI
	2x 3/2-way valve				
	Position function 1-32: N	Normally open		533348	VMPA1-M1H-N-PI
	Position function 1-32: NS	Normally open, mechanical spring return		556839	VMPA1-M1H-NS-PI
	Position function 1-32: NU	Polymer poppet valve, normally open, mechanical spring return		553111	VMPA1-M1H-NU-PI
	Position function 1-32: K	Normally closed		533347	VMPA1-M1H-K-PI
	Position function 1-32: KS	normally closed, mechanical spring return		556838	VMPA1-M1H-KS-PI
	Position function 1-32: KU	Polymer poppet valve, normally closed, mechanical spring return		553110	VMPA1-M1H-KU-PI
	Position function 1-32: H	1x normally open, 1x normally closed		533349	VMPA1-M1H-H-PI
	Position function 1-32: HS	1x normally open, 1x normally closed, mechanical spring return		556840	VMPA1-M1H-HS-PI
	Position function 1-32: HU	Polymer poppet valve, 1x normally open, 1x normally closed, mechanical spring return		553112	VMPA1-M1H-HU-PI
	5/3-way valve				
	Position function 1-32: B	Mid-position pressurised		533344	VMPA1-M1H-B-PI
	Position function 1-32: G	Mid-position closed		533345	VMPA1-M1H-G-PI
	Position function 1-32: E	mid-position exhausted		533346	VMPA1-M1H-E-PI
	1x 3/2-way valve				
	Position function 1-32: W	Normally open, external compressed air supply		540050	VMPA1-M1H-W-PI
	Position function 1-32: X	Normally closed, external compressed air supply		534415	VMPA1-M1H-X-PI
	2x 2/2-way valve				
	Position function 1-32: D	Normally closed		533350	VMPA1-M1H-D-PI
	Position function 1-32: DS	normally closed, mechanical spring return		556841	VMPA1-M1H-DS-PI
	Position function 1-32: I	1x normally closed, 1x normally closed, reversible only		543605	VMPA1-M1H-I-PI
Vacant position – Width 10 mm					
	Position function 1-32: L	Cover plate for a valve position, width 10 mm A self-adhesive label is supplied.		533351	VMPA1-RP
Pilot air switching valve – Width 10 mm					
	Valve positions 0-64	3/2-way pilot air switching valve, internal pilot air supply via duct 1 of the pressure zone		8126790	VMPA1-M1H-IS-PI
		3/2-way pilot air switching valve, external pilot air supply via duct 2 of the manifold block		8126791	VMPA1-M1H-ES-PI
	Valve positions 0-64	3/2-way pilot air switching valve, internal pilot air supply via duct 1 of the pressure zone, with pilot air detection via sensor, external, M8 plug connection		8126792	VMPA1-M1H-IU-PI
		3/2-way pilot air switching valve, external pilot air supply via duct 2 of the manifold block, with pilot air detection via sensor, external, M8 plug connection		8126793	VMPA1-M1H-EU-PI

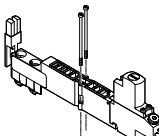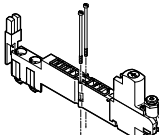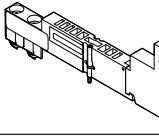Accessories









Ordering data		Code		Description		Part no.	Type
Vertical stacking modules – Width 10 mm							
	Pressure regulator 1-32: PF	Pressure regulator plate with fixed threaded connection M5	For port 1	0.5 ... 6 bar	564911	VMPA1-B8-R1-M5-06	
	Pressure regulator 1-32: PA			0.5 ... 8.5 bar	564908	VMPA1-B8-R1-M5-10	
	Pressure regulator 1-32: PH		For port 2	2 ... 6 bar	564912	VMPA1-B8-R2-M5-06	
	Pressure regulator 1-32: PC			2 ... 8.5 bar	564909	VMPA1-B8-R2-M5-10	
	Pressure regulator 1-32: PG		For port 4	2 ... 6 bar	564913	VMPA1-B8-R3-M5-06	
	Pressure regulator 1-32: PB			2 ... 8.5 bar	564910	VMPA1-B8-R3-M5-10	
	Pressure regulator 1-32: PF	Pressure regulator plate with rotatable threaded connection M5	For port 1	0.5 ... 6 bar	549052	VMPA1-B8-R1C2-C-06	
	Pressure regulator 1-32: PA			0.5 ... 8.5 bar	543339	VMPA1-B8-R1C2-C-10	
	Pressure regulator 1-32: PH		For port 2	2 ... 6 bar	549053	VMPA1-B8-R2C2-C-06	
	Pressure regulator 1-32: PC			2 ... 8.5 bar	543340	VMPA1-B8-R2C2-C-10	
	Pressure regulator 1-32: PG		For port 4	2 ... 6 bar	549054	VMPA1-B8-R3C2-C-06	
	Pressure regulator 1-32: PB			2 ... 8.5 bar	543341	VMPA1-B8-R3C2-C-10	
	Pressure regulator 1-32: PS	Vertical pressure shut-off plate For manually disconnecting an individual valve from the compressed air supply of the valve terminal (duct 1 and 12/14 pilot air supply), operating pressure 3 ... 8 bar				567805	VMPA1-HS
	Pressure gauge 1-32: VE	Screw-in pressure gauge with M5 thread for pressure regulator plate with rotatable threaded connection		Unit of measure: bar	132340	MA-15-10-M5	
	Pressure gauge 1-32: VD			Unit of measure: psi	132341	MA-15-145-M5-PSI	
	Pressure gauge 1-32: VC	Locking push-in fitting with thread M5 for pressure regulator plate				153291	QSK-M5-4

Accessories



Ordering data						
	Code	Description	Part no.	Type	PU ¹⁾	
Fixed flow restrictor – Width 10 mm						
	Pneumatic port 3, 1-40: V03	Hollow bolt, for controlling the flow of exhaust air	3.5 ... 5.5 l/min	572544	VMPA-FT-NW0.3-10	10
	Pneumatic port 5, 1-40: Q03					
	Pneumatic port 3, 1-40: V05		9 ... 12 l/min	572545	VMPA-FT-NW0.5-10	10
	Pneumatic duct 5, 1-40: Q05					
	Pneumatic duct 3, 1-40: V07		18 ... 22 l/min	572546	VMPA-FT-NW0.7-10	10
	Pneumatic port 5, 1-40: Q07					
	Pneumatic port 3, 1-40: V10		36 ... 41 l/min	572547	VMPA-FT-NW1.0-10	10
	Pneumatic port 5, 1-40: Q10					
	Pneumatic port 3, 1-40: V12		52 ... 58 l/min	572548	VMPA-FT-NW1.2-10	10
	Pneumatic port 5, 1-40: Q12					
	Pneumatic port 3, 1-40: V15		81 ... 89 l/min	572549	VMPA-FT-NW1.5-10	10
	Pneumatic port 5, 1-40: Q15					
	Pneumatic port 3, 1-40: V17		105 ... 115 l/min	572550	VMPA-FT-NW1.7-10	10
	Pneumatic port 5, 1-40: Q17					
Restrictor set – Width 10 mm						
	–	Fixed flow restrictor, two of each size, two retainers and one assembly tool	572543	VMPA1-FT-NW0.3-1.7	14	
Retainer for fixed flow restrictor – Width 10 mm						
	–	Retainer for exhaust outlet in the sub-base	572542	VMPA1-FTI-10	10	



1) Packaging unit.

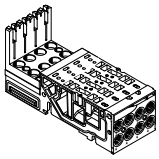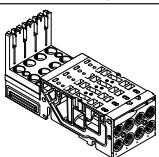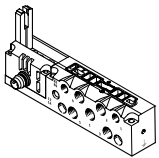Accessories





Ordering data					Part no.	Type
	Code	Description				
Sub-base – Width 10 mm						
	–	For multi-pin plug/fieldbus, four valve positions, no electrical interlinking module	Without duct separation		533352	VMPA1-FB-AP-4-1
			Duct 1 blocked		538657	VMPA1-FB-AP-4-1-T1
			Duct 1 blocked and duct 3/5 blocked		555901	VMPA1-FB-AP-4-1-S1
Sub-bases with integrated check valve in duct 3 and 5 – Width 10 mm						
	–	For multi-pin plug/fieldbus, four valve positions, no electrical interlinking module	Without duct separation		8034547	VMPA1-FB-AP-4-1-RV
			Duct 1 blocked		8034549	VMPA1-FB-AP-4-1-T1-RV
			Duct 1 blocked and duct 3/5 blocked		8034551	VMPA1-FB-AP-4-1-S1-RV
Sub-base – including electrical interlinking module and electronics modules – Width 10 mm						
	–	For fieldbus	Four valve positions	–	546802	VMPA1-AP-4-1-EMS-8
		For multi-pin plug	Four solenoid coils	–	546806	VMPA1-AP-4-1-EMM-4
			Eight solenoid coils	–	546804	VMPA1-AP-4-1-EMM-8
			Short link		8157743	VMPA1-AP-4-EMM-8-SK
			Long link		8157744	VMPA1-AP-4-EMM-8-SL
Sub-base for pilot air switching valve – including electrical interlinking module and electronics modules – Width 10 mm						
	–	For fieldbus	Eight solenoid coils	–	8157739	VMPA1-AP-4-EMG-8-S
				–	8157740	VMPA1-AP-4-EMG-D2-8-S
Sub-base – Width 10 mm						
	–	For individual connection, without ATEX specification	Internal pilot air		533394	VMPA1-IC-AP-1
			External pilot air		533395	VMPA1-IC-AP-S-1
		For individual connection, with ATEX specification: II 3G Ex nA IIC T4 XGc	Internal pilot air		8005149	VMPA1-IC-AP-1-EX1E
			External pilot air		8005150	VMPA1-IC-AP-S-1-EX1E
Inscription label holder for sub-base – Width 10 mm						
	–	For foil Inscription label holder for sub-base, transparent, for paper foil label			533362	VMPA1-ST-1-4
	–	For IBS Inscription label holder for sub-base, 4-part, for IBS 6x10			544384	VMPA1-ST-2-4
	–	Inscription labels, 6 x 10 in frames, pack of 64			18576	IBS-6x10

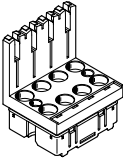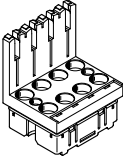Accessories






Ordering data				Part no.	Type
	Code	Description			
Electronics module – Width 10 mm					
	–	For fieldbus connection, without separate circuit	8 coils	533360	VMPA1-FB-EMS-8
		For fieldbus connection, with separate circuit	8 coils	533361	VMPA1-FB-EMG-8
		For fieldbus interface with separate circuit, for pilot air switching valve	8 coils	8108543	VMPA1-FB-EM-8-S
		For fieldbus connection, with enhanced diagnostic function, without separate circuit	8 coils	543331	VMPA1-FB-EMS-D2-8
		For fieldbus interface, with enhanced diagnostic function, with separate circuit, for pilot air switching valve	8 coils	543333	VMPA1-FB-EMG-D2-8
				8108545	VMPA1-FB-EMG-D2-8-S
		For multi-pin plug connection	4 coils	537987	VMPA1-MPM-EMM-4
	8 coils	537988	VMPA1-MPM-EMM-8		
Electronic module for soft-start and pilot air switching valve					
	–	With plate for the soft-start/quick exhaust valve	–	8111882	VMPA1-FB-EMG-P5
		With plate for the soft-start/quick exhaust valve	–	8111881	VMPA1-MPM-EMM-P5

Ordering data				Part no.	Type
	Code	Description			
Electrical interlinking module – Width 10 mm					
	–	For a multi-pin plug connection and AS-Interface for a sub-base	4 coils	537993	VMPA1-MPM-EV-AB-4
			8 coils	537994	VMPA1-MPM-EV-AB-8
		For a multi-pin plug connection and AS-Interface for a sub-base with pneumatic supply plate (on the left next to the sub-base)	4 coils	537995	VMPA1-MPM-EV-ABV-4
			8 coils	537996	VMPA1-MPM-EV-ABV-8
	–	For fieldbus connection and CPI, for sub-bases MPA size 1 and 2 and proportional pressure regulator		537998	VMPA1-FB-EV-AB
		For fieldbus connection and CPI for a pneumatic supply plate		537999	VMPA1-FB-EV-V

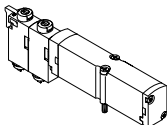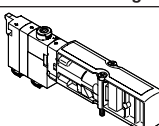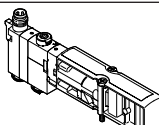Accessories

Ordering data				
	Code	Valve function	Part no.	Type
Individual solenoid valve – Width 14 mm				
	5/2-way valve			
	Position function 1-32: M	Single solenoid	573718	VMPA14-M1H-M-PI
	Position function 1-32: MS	Single solenoid, mechanical spring return	573974	VMPA14-M1H-MS-PI
	Position function 1-32: MSC	Single solenoid, with spring return, switching position sensing	8186954	VMPA14-M1H-MSC-PI
	Position function 1-32: J	Double solenoid	573717	VMPA14-M1H-J-PI
	2x 3/2-way valve			
	Position function 1-32: N	Normally open	573725	VMPA14-M1H-N-PI
	Position function 1-32: NS	Normally open, mechanical spring return	575977	VMPA14-M1H-NS-PI
	Position function 1-32: K	Normally closed	573724	VMPA14-M1H-K-PI
	Position function 1-32: KS	normally closed, mechanical spring return	575976	VMPA14-M1H-KS-PI
	Position function 1-32: H	1x normally open, 1x normally closed	573726	VMPA14-M1H-H-PI
	Position function 1-32: HS	1x normally open, 1x normally closed, mechanical spring return	575979	VMPA14-M1H-HS-PI
	5/3-way valve			
	Position function 1-32: B	Mid-position pressurised	573719	VMPA14-M1H-B-PI
	Position function 1-32: G	Mid-position closed	573721	VMPA14-M1H-G-PI
	Position function 1-32: E	mid-position exhausted	573720	VMPA14-M1H-E-PI
	3/2-way valve			
	Position function 1-32: W	Normally open, external compressed air supply	573723	VMPA14-M1H-W-PI
	Position function 1-32: X	Normally closed, external compressed air supply	573722	VMPA14-M1H-X-PI
	2x 2/2-way valve			
	Position function 1-32: D	Normally closed	573727	VMPA14-M1H-D-PI
	Position function 1-32: DS	normally closed, mechanical spring return	575978	VMPA14-M1H-DS-PI
	Position function 1-32: I	1x normally closed, 1x normally closed, Only reversible	573728	VMPA14-M1H-I-PI
Vacant position – Width 14 mm				
	Position function 1-32: L	Cover plate for a valve position, width 14 mm A self-adhesive label is supplied.	573729	VMPA14-RP
Pilot air switching valve – Width 14 mm				
	Valve positions 0-64	3/2-way pilot air switching valve, internal pilot air supply via duct 1 of the pressure zone	8126785	VMPA14-M1H-IS-PI
		3/2-way pilot air switching valve, external pilot air supply via duct 2 of the manifold block	8126786	VMPA14-M1H-ES-PI
	Valve positions 0-64	3/2-way pilot air switching valve, internal pilot air supply via duct 1 of the pressure zone, with pilot air detection via sensor, external, M8 plug connection	8126787	VMPA14-M1H-IU-PI
		3/2-way pilot air switching valve, external pilot air supply via duct 2 of the manifold block, with pilot air detection via sensor, external, M8 plug connection	8126788	VMPA14-M1H-EU-PI

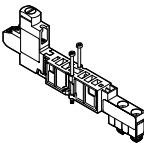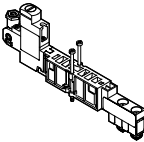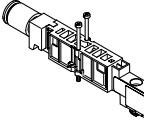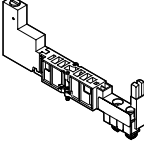Accessories






Ordering data		Code		Description		Part no.	Type
Vertical stacking modules – Width 14 mm							
	Pressure regulator 1-32: PF	Optional pressure gauge possible	Pressure regulator for 1	0.5 ... 6 bar	8043342	VMPA14-B8-R1C2-C-06	
	Pressure regulator 1-32: PA			0.5 ... 8.5 bar	8043339	VMPA14-B8-R1C2-C-10	
	Pressure regulator 1-32: PH		Pressure regulator for 2	2 ... 6 bar	8043343	VMPA14-B8-R2C2-C-06	
	Pressure regulator 1-32: PC			2 ... 6 bar	8043340	VMPA14-B8-R2C2-C-10	
	Pressure regulator 1-32: PG		Pressure regulator for 4	2 ... 6 bar	8043344	VMPA14-B8-R3C2-C-06	
	Pressure regulator 1-32: PB			2 ... 6 bar	8043341	VMPA14-B8-R3C2-C-10	
	Pressure regulator 1-32: PF	–	Pressure regulator for 1	0.5 ... 6 bar	8043518	VMPA14-B8-R1-M5-06	
	Pressure regulator 1-32: PA			0.5 ... 8.5 bar	8043515	VMPA14-B8-R1-M5-10	
	Pressure regulator 1-32: PH		Pressure regulator for 2	2 ... 6 bar	8043519	VMPA14-B8-R2-M5-06	
	Pressure regulator 1-32: PC			2 ... 6 bar	8043516	VMPA14-B8-R2-M5-10	
	Pressure regulator 1-32: PG		Pressure regulator for 4	2 ... 6 bar	8043520	VMPA14-B8-R3-M5-06	
	Pressure regulator 1-32: PB			2 ... 6 bar	8043517	VMPA14-B8-R3-M5-10	
	Pressure regulator 1-32: PV	Vertical pressure supply plate	Connecting thread	G1/8	8110621	VMPA14-VSP-0	
							With fitting for tubing O.D.
			8 mm	8110622	VMPA14-VSP-QS8		
			10 mm	8110625	VMPA14-VSP-QS10		
			1/4"	8110626	VMPA14-VSP-QS1/4		
5/16"			8110624	VMPA14-VSP-QS5/16			
3/8"	8110623	VMPA14-VSP-QS3/8					
	Pressure regulator 1-32: PS	Vertical pressure shut-off plate For manually disconnecting an individual valve from the compressed air supply of the valve terminal (duct 1 and 12/14 pilot air supply), operating pressure 3 ... 8, internal pilot air supply				8110429	VMPA14-HS
	Pressure gauge 1-32: VE	Screw-in pressure gauge with M5 thread for pressure regulator plate with rotatable threaded connection	Unit of measure: bar		132340	MA-15-10-M5	
	Pressure gauge 1-32: VD		Unit of measure: psi		132341	MA-15-145-M5-PSI	
	Pressure gauge 1-32: VC	Push-in fitting, self-sealing, with thread M5 for pressure regulator plate			153291	QSK-M5-4	
Check valve – width 14 mm							
	–	Check valve for installation in duct 3 or 5 (scope of delivery: 10 check valves, one assembly tool)				8039820	VMPA14-RV

Accessories




Ordering data						
	Code	Description	Part no.	Type	PU ¹⁾	
Fixed flow restrictor – Width 14 mm						
	Pneumatic port 3, 1-40: V03	Hollow bolt, for controlling the flow of exhaust air	3.5 ... 5.5 l/min	572544	VMPA-FT-NW0.3-10	10
	Pneumatic port 5, 1-40: Q03					
	Pneumatic port 3, 1-40: V05		9 ... 12 l/min	572545	VMPA-FT-NW0.5-10	10
	Pneumatic duct 5, 1-40: Q05					
	Pneumatic duct 3, 1-40: V07		18 ... 22 l/min	572546	VMPA-FT-NW0.7-10	10
	Pneumatic port 5, 1-40: Q07					
	Pneumatic port 3, 1-40: V10		36 ... 41 l/min	572547	VMPA-FT-NW1.0-10	10
	Pneumatic port 5, 1-40: Q10					
	Pneumatic port 3, 1-40: V12		52 ... 58 l/min	572548	VMPA-FT-NW1.2-10	10
	Pneumatic port 5, 1-40: Q12					
	Pneumatic port 3, 1-40: V15		81 ... 89 l/min	572549	VMPA-FT-NW1.5-10	10
	Pneumatic port 5, 1-40: Q15					
	Pneumatic port 3, 1-40: V17		105 ... 115 l/min	572550	VMPA-FT-NW1.7-10	10
	Pneumatic port 5, 1-40: Q17					
Restrictor set – Width 14 mm						
	–	Fixed flow restrictor, two of each size, two retainers and one assembly tool	8129129	VMPA14-FT-NW0.3-1.7	14	
Retainer for fixed flow restrictor – Width 14 mm						
	–	Retainer for exhaust outlet in the sub-base	8129127	VMPA14-FTI	10	

1) Packaging unit.

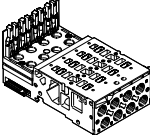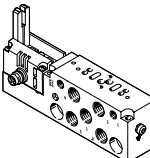

Accessories

Ordering data		Code	Description	Part no.	Type
Sub-base – Width 14 mm					
	–	For multi-pin plug/fieldbus, four valve positions, no electrical interlinking module	Without duct separation	8074666	VMPA14-FB-AP-4-1
			Duct 1 blocked	8043928	VMPA14-FB-AP-4-1-T1
			Duct 1 blocked and duct 3/5 blocked	8043929	VMPA14-FB-AP-4-1-S1
Sub-base – including electrical interlinking module and electronics modules – Width 14 mm					
	–	For fieldbus	Four valve positions	8066778	VMPA14-AP-4-1-EMS-8
		For multi-pin plug	Four solenoid coils	8066779	VMPA14-AP-4-1-EMM-4
			Eight solenoid coils	8066780	VMPA14-AP-4-1-EMM-8
				8157745	VMPA14-AP-4-EMM-8-SK
		8157746	VMPA14-AP-4-EMM-8-SL		
		For fieldbus	Eight solenoid coils	8157741	VMPA14-AP-4-EMG-8-S
			8157742	VMPA14-AP-4-EMG-D2-8-S	
Sub-base – Width 14 mm					
	–	For individual connection, without ATEX specification	Internal pilot air	8023666	VMPA14-IC-AP-1
			External pilot air	8023667	VMPA14-IC-AP-S-1
		For individual connection, with ATEX specification: II 3G Ex nA IIC T4 XGc	Internal pilot air	8023668	VMPA14-IC-AP-1-EX1E
			External pilot air	8023669	VMPA14-IC-AP-S-1-EX1E
Inscription label holder for sub-base – Width 14 mm					
	–	For foil Inscription label holder for sub-base, transparent, for paper foil label	8085996	VMPA14-ST-1-4	
	–	For IBS Inscription label holder for sub-base, 4-part, for IBS 6x10	8085997	VMPA14-ST-2-4	
	–	Inscription labels, 6 x 10 in frames, pack of 64	18576	IBS-6x10	

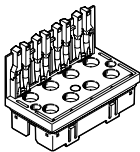


Accessories

Ordering data					
	Code	Description	Part no.	Type	
Electronics module – Width 14 mm					
	–	For fieldbus connection, without separate circuit	Eight solenoid coils	8066764	VMPA14-FB-EMS-8
		For fieldbus connection, with separate circuit	Eight solenoid coils	8066765	VMPA14-FB-EMG-8
				8108547	VMPA14-FB-EMG-8-S
		For fieldbus connection, with enhanced diagnostic function, without separate circuit	Eight solenoid coils	8066766	VMPA14-FB-EMS-D2-8
		For fieldbus connection, with enhanced diagnostic function, with separate circuit	Eight solenoid coils	8066767	VMPA14-FB-EMG-D2-8
				8108549	VMPA14-FB-EMG-D2-8-S
		For multi-pin plug connection	Four solenoid coils	8066768	VMPA14-MPM-EMM-4
	Eight solenoid coils	8066769	VMPA14-MPM-EMM-8		
Electrical interlinking module – Width 14 mm					
	–	For a multi-pin plug connection and AS-Interface for a sub-base	Four solenoid coils	8066770	VMPA14-MPM-EV-AB-4
			Eight solenoid coils	8066771	VMPA14-MPM-EV-AB-8
		For a multi-pin plug connection and AS-Interface for a sub-base with pneumatic supply plate (on the left next to the sub-base)	Four solenoid coils	8066772	VMPA14-MPM-EV-ABV-4
			Eight solenoid coils	8066773	VMPA14-MPM-EV-ABV-8
	–	For fieldbus connection and CPI, for sub-bases MPA size 14		8066774	VMPA14-FB-EV-AB

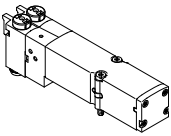
Accessories

Ordering data				
	Code	Valve function	Part no.	Type
Individual solenoid valve – Width 20 mm				
	5/2-way valve			
	Position function 1-32: M	Single solenoid	537952	VMPA2-M1H-M-PI
	Position function 1-32: MS	Single solenoid, mechanical spring return	571333	VMPA2-M1H-MS-PI
	Position function 1-32: MSC	Single solenoid, with spring return, switching position sensing	8186955	VMPA2-M1H-MS-PI
	Position function 1-32: J	Double solenoid	537953	VMPA2-M1H-J-PI
	2x 3/2-way valve			
	Position function 1-32: N	Normally open	537958	VMPA2-M1H-N-PI
	Position function 1-32: NS	Normally open, mechanical spring return	568655	VMPA2-M1H-NS-PI
	Position function 1-32: K	Normally closed	537957	VMPA2-M1H-K-PI
	Position function 1-32: KS	normally closed, mechanical spring return	568656	VMPA2-M1H-KS-PI
	Position function 1-32: H	1x normally open, 1x normally closed	537959	VMPA2-M1H-H-PI
	Position function 1-32: HS	1x normally open, 1x normally closed, mechanical spring return	568658	VMPA2-M1H-HS-PI
	5/3-way valve			
	Position function 1-32: B	Mid-position pressurised	537954	VMPA2-M1H-B-PI
	Position function 1-32: G	Mid-position closed	537955	VMPA2-M1H-G-PI
	Position function 1-32: E	mid-position exhausted	537956	VMPA2-M1H-E-PI
	1x 3/2-way valve			
	Position function 1-32: W	Normally open, external compressed air supply	540051	VMPA2-M1H-W-PI
	Position function 1-32: X	Normally closed, external compressed air supply	537961	VMPA2-M1H-X-PI
	2x 2/2-way valve			
	Position function 1-32: D	Normally closed	537960	VMPA2-M1H-D-PI
	Position function 1-32: DS	normally closed, mechanical spring return	568657	VMPA2-M1H-DS-PI
	Position function 1-32: I	1x normally closed, 1x normally closed, reversible only	543703	VMPA2-M1H-I-PI
Vacant position – Width 20 mm				
	Position function 1-32: L	Cover plate for a valve position, width 20 mm A self-adhesive label is supplied.	537962	VMPA2-RP

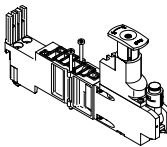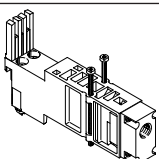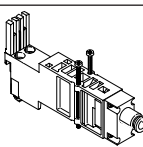Accessories








Ordering data		Valve function			Part no.	Type
Vertical stacking modules – Width 20 mm						
	Pressure regulator 1-32: PA	Pressure regulator plate (with 10 mm cartridge connection for pressure gauge)	For port 1	0.5 ... 8.5 bar	543342	VMPA2-B8-R1C2-C-10
	Pressure regulator 1-32: PF			0.5 ... 6 bar	549055	VMPA2-B8-R1C2-C-06
	Pressure regulator 1-32: PC		For port 2	2 ... 8.5 bar	543343	VMPA2-B8-R2C2-C-10
	Pressure regulator 1-32: PH			2 ... 6 bar	549056	VMPA2-B8-R2C2-C-06
	Pressure regulator 1-32: PB		For port 4	2 ... 8.5 bar	543344	VMPA2-B8-R3C2-C-10
	Pressure regulator 1-32: PG			2 ... 6 bar	549057	VMPA2-B8-R3C2-C-06
	Pressure regulator 1-32: PL		For port 2, reversible	0.5 ... 8.5 bar	543347	VMPA2-B8-R6C2-C-10
	Pressure regulator 1-32: PN			0.5 ... 6 bar	549113	VMPA2-B8-R6C2-C-06
	Pressure regulator 1-32: PK		For port 4, reversible	0.5 ... 8.5 bar	543348	VMPA2-B8-R7C2-C-10
	Pressure regulator 1-32: PM			0.5 ... 6 bar	549114	VMPA2-B8-R7C2-C-06
	Pressure regulator 1-32: PV	Vertical pressure supply plate	Connecting thread	G1/8	8029486	VMPA2-VSP-0
						
			With fitting for tubing O.D.	6 mm	8035441	VMPA2-VSP-QS6
				8 mm	8029488	VMPA2-VSP-QS8
				10 mm	8029489	VMPA2-VSP-QS10
1/4"				8035442	VMPA2-VSP-QS1/4	
5/16"	8029491	VMPA2-VSP-QS5/16				
	Pressure gauge 1-32: T	Pressure gauge, 10 mm cartridge connection, for pressure regulator plate	Display unit bar/psi	0 ... 16 bar	543487	PAGN-26-16-P10
	–			0 ... 10 bar	543488	PAGN-26-10-P10
			Display unit MPa	0 ... 1.0 MPa	563736	PAGN-26-1M-P10
				0 ... 1.6 MPa	563735	PAGN-26-1.6M-P10
	Pressure gauge 1-32: VF	Threaded adapter for cartridge connection 10 mm to thread G1/8			565811	QSP10-G1/8
Check valve – Width 20 mm						
	–	Check valve for installation in duct 3 or 5 (scope of delivery: 10 check valves, one assembly tool)			8039821	VMPA2-RV

Accessories




Ordering data						
	Code	Description	Part no.	Type	PU ¹⁾	
Fixed flow restrictor – Width 20 mm						
	Pneumatic port 3, 1-40: V03	Hollow bolt, for controlling the flow of exhaust air	3.5 ... 5.5 l/min	572544	VMPA-FT-NW0.3-10	10
	Pneumatic port 5, 1-40: Q03					
	Pneumatic port 3, 1-40: V05		9 ... 12 l/min	572545	VMPA-FT-NW0.5-10	10
	Pneumatic duct 5, 1-40: Q05					
	Pneumatic duct 3, 1-40: V07		18 ... 22 l/min	572546	VMPA-FT-NW0.7-10	10
	Pneumatic port 5, 1-40: Q07					
	Pneumatic port 3, 1-40: V10		36 ... 41 l/min	572547	VMPA-FT-NW1.0-10	10
	Pneumatic port 5, 1-40: Q10					
	Pneumatic port 3, 1-40: V12		52 ... 58 l/min	572548	VMPA-FT-NW1.2-10	10
	Pneumatic port 5, 1-40: Q12					
	Pneumatic port 3, 1-40: V15		81 ... 89 l/min	572549	VMPA-FT-NW1.5-10	10
	Pneumatic port 5, 1-40: Q15					
	Pneumatic port 3, 1-40: V17		105 ... 115 l/min	572550	VMPA-FT-NW1.7-10	10
	Pneumatic port 5, 1-40: Q17					
Restrictor set – Width 20 mm						
	–	Fixed flow restrictor, two of each size, two retainers and one assembly tool	8129128	VMPA2-FTI	14	
Retainer for fixed flow restrictor – Width 20 mm						
	–	Retainer for exhaust outlet in the sub-base	8129130	VMPA2-FT-NW0.3-1.7	10	

1) Packaging unit.

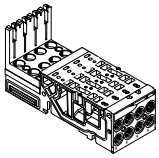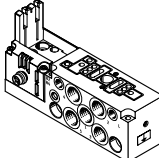
Accessories



Ordering data					
	Code	Description		Part no.	Type
Sub-base – Width 20 mm					
	–	For multi-pin plug/fieldbus, two valve positions, no electrical interlinking module	Without duct separation	538000	VMPA2-FB-AP-2-1
			Duct 1 blocked	538677	VMPA2-FB-AP-2-1-T0
			Duct 1 blocked and duct 3/5 blocked	555902	VMPA2-FB-AP-2-1-S0
Sub-bases for check valves – Width 20 mm					
	–	For multi-pin plug/fieldbus, two valve positions, no electrical interlinking module	Without duct separation	578863	VMPA2-FB-APF-2-1
			Duct 1 blocked	578864	VMPA2-FB-APF-2-1-T0
			Duct 1 blocked and duct 3/5 blocked	578865	VMPA2-FB-APF-2-1-S0
Sub-bases with integrated check valve in duct 3 and 5 – Width 20 mm					
	–	For multi-pin plug/fieldbus, two valve positions, no electrical interlinking module	Without duct separation	8034548	VMPA2-FB-AP-2-1-RV
			Duct 1 blocked	8034550	VMPA2-FB-AP-2-1-T0-RV
			Duct 1 blocked and duct 3/5 blocked	8034552	VMPA2-FB-AP-2-1-S0-RV
Sub-base – including electrical interlinking module and electronics modules – Width 20 mm					
	–	For fieldbus	Two valve positions	546803	VMPA2-AP-2-1-EMS-4
		For multi-pin plug	Two solenoid coils	546807	VMPA2-AP-2-1-EMM-2
			Four solenoid coils	546805	VMPA2-AP-2-1-EMM-4
Sub-base – Width 20 mm					
	–	For individual connection, without ATEX specification	Internal pilot air	537981	VMPA2-IC-AP-1
		For individual connection, with ATEX specification: II 3G Ex nA IIC T4 XGc	External pilot air	537982	VMPA2-IC-AP-S-1
			Internal pilot air	8005151	VMPA2-IC-AP-1-EX1E
			External pilot air	8005152	VMPA2-IC-AP-S-1-EX1E
Inscription label holder for sub-base – Width 20 mm					
	–	For foil Inscription label holder for sub-base, transparent, for paper foil label		533362	VMPA1-ST-1-4
	–	For IBS Inscription label holder for sub-base, 4-part, for IBS 6x10		544384	VMPA1-ST-2-4
	–	Inscription labels, 6 x 10 in frames, pack of 64		18576	IBS-6x10

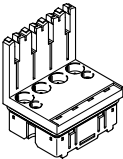
Accessories

Ordering data					
	Code	Description		Part no.	Type
Electronics module – Width 20 mm					
	–	For fieldbus connection, without separate circuit	4 coils	537983	VMPA2-FB-EMS-4
		For fieldbus connection, with separate circuit	4 coils	537984	VMPA2-FB-EMG-4
		For fieldbus connection, with enhanced diagnostic function, without separate circuit	4 coils	543332	VMPA2-FB-EMS-D2-4
		For fieldbus connection, with enhanced diagnostic function, with separate circuit	4 coils	543334	VMPA2-FB-EMG-D2-4
		For multi-pin plug connection	2 coils	537985	VMPA2-MPM-EMM-2
			8 coils	537986	VMPA2-MPM-EMM-4
Electrical interlinking module – Width 20 mm					
	–	For a multi-pin plug connection and AS-Interface for a sub-base	2 coils	537989	VMPA2-MPM-EV-AB-2
			4 coils	537993	VMPA1-MPM-EV-AB-4
		For a multi-pin plug connection and AS-Interface for a sub-base with pneumatic supply plate (on the left next to the sub-base)	2 coils	537991	VMPA2-MPM-EV-ABV-2
			4 coils	537995	VMPA1-MPM-EV-ABV-4
	–	For fieldbus connection and CPI, for sub-bases MPA size 1 and 2 and proportional pressure regulator		537998	VMPA1-FB-EV-AB
		For fieldbus connection and CPI for a pneumatic supply plate		537999	VMPA1-FB-EV-V






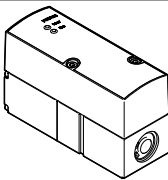
Accessories

Ordering data						
	Code	Pressure regulation range	Input pressure 1	Full-scale linearity error	Part no.	Type
Proportional-pressure regulator						
	QA	0.002 ... 0.2 MPa	0 ... 0.4 MPa	2%	542220	VPPM-6TA-L-1-F-0L2H
	QD	0.002 ... 0.2 MPa	0 ... 0.4 MPa	1%	542217	VPPM-6TA-L-1-F-0L2H-S1
	QL	0.002 ... 0.2 MPa	0 ... 0.4 MPa	1%	572407	VPPM-8TA-L-1-F-0L2H-S1C1
	QG	0.002 ... 0.2 MPa	0 ... 0.4 MPa	2%	572410	VPPM-8TA-L-1-F-0L2H-C1
	QB	0.006 ... 0.6 MPa	0 ... 0.8 MPa	2%	542221	VPPM-6TA-L-1-F-0L6H
	QE	0.006 ... 0.6 MPa	0 ... 0.8 MPa	1%	542218	VPPM-6TA-L-1-F-0L6H-S1
	QM	0.006 ... 0.6 MPa	0 ... 0.8 MPa	1%	572408	VPPM-8TA-L-1-F-0L6H-S1C1
	QH	0.006 ... 0.6 MPa	0 ... 0.8 MPa	2%	572411	VPPM-8TA-L-1-F-0L6H-C1
	QC	0.01 ... 1 MPa	0 ... 1.1 MPa	2%	542222	VPPM-6TA-L-1-F-0L10H
	QF	0.01 ... 1 MPa	0 ... 1.1 MPa	1%	542219	VPPM-6TA-L-1-F-0L10H-S1
	QN	0.01 ... 1 MPa	0 ... 1.1 MPa	1%	572409	VPPM-8TA-L-1-F-0L10H-S1C1
	QK	0.01 ... 1 MPa	0 ... 1.1 MPa	2%	572412	VPPM-8TA-L-1-F-0L10H-C1




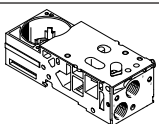
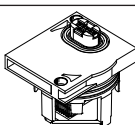
Ordering data			
Designation		Part no.	Type
Sub-base for proportional pressure regulator			
	Without electrical interlinking module and without electronics module	542223	VMPA-FB-AP-P1
		8093454	VMPA-FB-AP-1-P5
		8161057	VMPA-FB-AP-1-EMG-P5
		8161059	VMPA-FB-AP-1-EMM-P5-SK
		8161060	VMPA-FB-AP-1-EMM-P5-SL
Electronics module for proportional pressure regulator			
	—	542224	VMPA-FB-EMG-P1

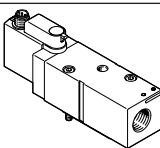Ordering data						
	Code	Manual override		Operating pressure [MPa]	Part no.	Type
Soft-start/exhaust valve						
	PN	Detenting, self-resetting via electrical control signal	Double supply	0.2 ... 1	8161608	VABF-S6-1-P5A4S2YE-G12-1T1L-PZ
	PM	Detenting, self-resetting via electrical control signal	Single supply	0.2 ... 1	8161609	VABF-S6-1-P5A4S1YE-G12-1T1L-PZ
	PN	Concealed	Double supply	0.2 ... 1	8161610	VABF-S6-1-P5A4S2S-G12-1T1L-PZ
	PM	Concealed	Single supply	0.2 ... 1	8161611	VABF-S6-1-P5A4S1S-G12-1T1L-PZ


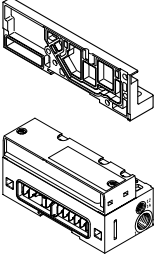
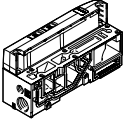
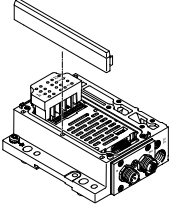
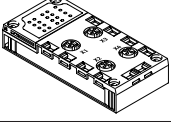
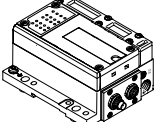
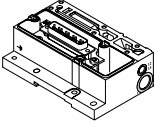
Accessories

Ordering data				Part no.	Type
Designation					
End plate and fieldbus pneumatic interface					
	Right end plate	With port 82/84 for ducted exhaust air (M5 connecting thread)	–	8029133	VMPA-EPR-G
		Without port 82/84	–	533373	VMPA-EPR
	Pneumatic interface for electrical terminal CPX	Ducted exhaust air, internal pilot air	For CPX polymer inter-linking block	533370	VMPA-FB-EPL-G
			For CPX metal inter-linking block	552286	VMPA-FB-EPLM-G
		Ducted exhaust air, external pilot air	For CPX polymer inter-linking block	533369	VMPA-FB-EPL-E
			For CPX metal inter-linking block	552285	VMPA-FB-EPLM-E
		Flat plate silencer, internal pilot air	For CPX polymer inter-linking block	533372	VMPA-FB-EPL-GU
			For CPX metal inter-linking block	552288	VMPA-FB-EPLM-GU
		Flat plate silencer, external pilot air	For CPX polymer inter-linking block	533371	VMPA-FB-EPL-EU
			For CPX metal inter-linking block	552287	VMPA-FB-EPLM-EU
Pneumatic interface, fieldbus CPX-AP-A					
	Pneumatic interface for remote I/O system CPX-AP-A	External pilot air		8137154	VMPA-AP-EPL-E
		Internal pilot air		8137156	VMPA-AP-EPL-G
Electrical interface for AS-Interface					
	4 inputs/4 outputs, to spec. 2.1	Internal pilot air	Ducted exhaust air	546989	VMPA-ASI-EPL-G-4E4A-Z
			Silencer	546991	VMPA-ASI-EPL-GU-4E4A-Z
		External pilot air	Ducted exhaust air	546988	VMPA-ASI-EPL-E-4E4A-Z
			Silencer	546990	VMPA-ASI-EPL-EU-4E4A-Z
	8 inputs/8 outputs, to spec. 2.1	Internal pilot air	Ducted exhaust air	546993	VMPA-ASI-EPL-G-8E8A-Z
			Silencer	546995	VMPA-ASI-EPL-GU-8E8A-Z
		External pilot air	Ducted exhaust air	546992	VMPA-ASI-EPL-E-8E8A-Z
			Silencer	546994	VMPA-ASI-EPL-EU-8E8A-Z
	8 inputs/8 outputs, to spec. 3.0, expanded addressing range	Internal pilot air	Ducted exhaust air	573184	VMPA-ASI-EPL-G-8E8A-CE
			Silencer	573186	VMPA-ASI-EPL-GU-8E8A-CE
		External pilot air	Ducted exhaust air	573183	VMPA-ASI-EPL-E-8E8A-CE
			Silencer	573185	VMPA-ASI-EPL-EU-8E8A-CE
Manifold block for AS-Interface					
	Socket M12, 5-pin			195704	CPX-AB-4-M12X2-5POL
	Socket M8, 3-pin			195706	CPX-AB-8-M8-3POL
	Spring-loaded terminals, 32-pin			195708	CPX-AB-8-KL-4POL
	Socket, Sub-D, 25-pin			525676	CPX-AB-1-SUB-BU-25POL
Electrical interface for CPI					
	External pilot air	Ducted exhaust air	546983	VMPA-CPI-EPL-E	
		Silencer	546985	VMPA-CPI-EPL-EU	
	Internal pilot air	Ducted exhaust air	546984	VMPA-CPI-EPL-G	
		Silencer	546986	VMPA-CPI-EPL-GU	
Electrical interface for multi-pin plug connection					
	External pilot air	Ducted exhaust air	540893	VMPA1-MPM-EPL-E	
		Silencer	540895	VMPA1-MPM-EPL-EU	
	Internal pilot air	Ducted exhaust air	540894	VMPA1-MPM-EPL-G	
		Silencer	540896	VMPA1-MPM-EPL-GU	

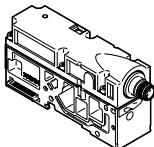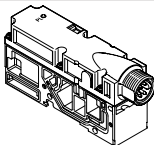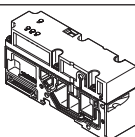


Accessories

Ordering data		Part no.	Type	
Designation				
Electrical supply plate				
	Plug connection M12, 5-pin	8204604	VMPA-FB-SP-M12-V	
	Plug connection M18, 3-pin	541082	VMPA-FB-SP-V	
	Plug connection 7/8", 5-pin	541083	VMPA-FB-SP-7/8-V-5POL	
	Plug connection 7/8", 4-pin	541084	VMPA-FB-SP-7/8-V-4POL	
Pressure sensor				
	For monitoring the operating pressure in duct 1	541085	VMPA-FB-PS-1	
	For monitoring the pressure in exhaust ducts 3 and 5	541086	VMPA-FB-PS-3/5	
	For monitoring an external process pressure	541087	VMPA-FB-PS-P1	
Covering				
	Cover plate	559638	VMPA-P-RP	
	Cover cap for manual override with coded cover cap, manual override non-detenting (pack of 10)	540897	VMPA-HBT-B	
	Cover cap for manual override, concealed, manual override blocked (pack of 10)	540898	VMPA-HBV-B	
	Cover cap for manual override, manual override detenting, can be operated manually without accessories (pack of 10)	8002234	VAMC-L1-CD	
	Inscription label holder for inscription label and cover for signal status indication and manual override (blocked) (pack of 10)	570818	ASLR-D-L1	
Seal for sub-base				
	MPA with ducted exhaust air	No duct separation	533359	VMPA1-DP
		Duct 12/14 separated	8161482	VMPA1-DP-Y
		Duct 1 separated	533363	VMPA1-DP-P
		Duct 3/5 separated	533364	VMPA1-DP-RS
		Duct 1 and 3/5 separated	533365	VMPA1-DP-PRS
		Ducts 1, 3/5 and 12/14 separate	8161481	VMPA1-DP-PRS-Y
	MPA with flat plate silencer	No duct separation	533355	VMPA1-DPU
		Duct 1 separated	533356	VMPA1-DPU-P
		Duct 3/5 separated	533357	VMPA1-DPU-RS
		Duct 1 and 3/5 separated	533358	VMPA1-DPU-PRS

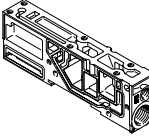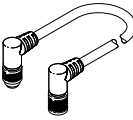Accessories





Ordering data				
Designation		Part no.	Type	
Exhaust air plate				
	Ducted exhaust air, with 10 mm push-in connector	533375	VMPA-AP	
	Ducted exhaust air, with connector QS-3/8	541629	VMPA-AP-3/8	
	Flat plate silencer	533374	VMPA-APU	
Supply plate (without exhaust plate)				
	For ducted exhaust air	533354	VMPA1-FB-SP	
	For flat plate silencer	533353	VMPA1-FB-SPU	
Multi-pin plug connection, electrical				
	Cover without connecting cable, for self-assembly	533198	VMPA-KMS-H	
	PVC connecting cable for 8 solenoid coils	2.5 m	533195	VMPA-KMS1-8-2.5
		5 m	533196	VMPA-KMS1-8-5
		10 m	533197	VMPA-KMS1-8-10
	PVC connecting cable for 24 solenoid coils	2.5 m	533192	VMPA-KMS1-24-2.5
		5 m	533193	VMPA-KMS1-24-5
		10 m	533194	VMPA-KMS1-24-10
	PUR connecting cable for 8 solenoid coils, suitable for energy chains	2.5 m	533504	VMPA-KMS2-8-2.5-PUR
		5 m	533505	VMPA-KMS2-8-5-PUR
		10 m	533506	VMPA-KMS2-8-10-PUR
	PUR connecting cable for 24 solenoid coils, suitable for energy chains	2.5 m	533501	VMPA-KMS2-24-2.5-PUR
		5 m	533502	VMPA-KMS2-24-5-PUR
10 m		533503	VMPA-KMS2-24-10-PUR	
Connecting cable, AS-Interface connection				
	- Straight socket, M12x1, 5-pin, A-coded - Straight plug, M12x1, 4-pin, A-coded	0.5 m	8000208	NEBU-M12G5-K-0.5-M12G4
	Modular system for a choice of connecting cables		–	→ Internet: nebu
Connecting cable, CPI connection				
	- Angled plug, 5-pin - Angled socket, 5-pin	0.25 m	540327	KVI-CP-3-WS-WD-0.25
		0.5 m	540328	KVI-CP-3-WS-WD-0.5
		2 m	540329	KVI-CP-3-WS-WD-2
		5 m	540330	KVI-CP-3-WS-WD-5
		8 m	540331	KVI-CP-3-WS-WD-8
	- Straight plug, 5-pin - Straight socket, 5-pin	2 m	540332	KVI-CP-3-GS-GD-2
		5 m	540333	KVI-CP-3-GS-GD-5
		8 m	540334	KVI-CP-3-GS-GD-8

Accessories

Ordering data			Size	Part no.	Type	PU ¹⁾
Designation						
Push-in fitting for sub-base, pneumatic interface, supply plate						
	Connecting thread M5 for tubing O.D.	3 mm	Mini	153313	QSM-M5-3-I	10
		4 mm	Standard	153315	QSM-M5-4-I	10
			Mini	578370	NPQH-DK-M5-Q4-P10	10
		6 mm	Standard	153317	QSM-M5-6-I	10
			Mini	578371	NPQH-DK-M5-Q6-P10	10
			5/32"	Standard	130593	QSM-M5-5/32-I-U-M
		183750			QSM-M5-3/16-I-U-M	1
		130591			QSM-M5-1/4-I-U-M	50
	Connecting thread M7 for tubing O.D.	4 mm		153319	QSM-M7-4-I	10
			Mini	578372	NPQH-DK-M7-Q4-P10	10
		6 mm	Standard	153321	QSM-M7-6-I	10
				132919	QSM-M7-6-I-R-100	100
			Mini	578373	NPQH-DK-M7-Q6-P10	10
		3/16"	Standard	183739	QSM-M7-3/16-I-U-M	1
				183740	QSM-M7-1/4-I-U-M	50
				186107	QS-G1/8-6-I	10
	Connecting thread G1/8 for tubing O.D.	6 mm		578375	NPQH-DK-G18-Q6-P10	10
			Mini	578375	NPQH-DK-G18-Q6-P10	10
		8 mm	Standard	186109	QS-G1/8-8-I	10
			Mini	578376	NPQH-DK-G18-Q8-P10	10
		1/4"	Standard	183741	QS-1/8-1/4-I-U-M	1
				183742	QS-1/8-5/16-I-U-M	1
		5/16"		186110	QS-G1/4-8-I	10
			Mini	578377	NPQH-DK-G14-Q8-P10	10
	Connecting thread G1/4 for tubing O.D.	8 mm		186112	QS-G1/4-10-I	10
			Standard	578378	NPQH-DK-G14-Q10-P10	10
		10 mm	Mini	578378	NPQH-DK-G14-Q10-P10	10
			Standard	183743	QS-1/4-5/16-I-U-M	1
5/16"		Standard	183743	QS-1/4-5/16-I-U-M	1	
			183744	QS-1/4-3/8-I-U-M	1	
3/8"						
Silencer						
	Connecting thread	M5		165003	UC-M5	1
		M7		161418	UC-M7	1
		G1/4		165004	UC-1/4	1
		G1/8		161419	UC-1/8	1
	Push-in sleeve connection	3 mm		165005	UC-QS-3H	1
		4 mm		165006	UC-QS-4H	1
		6 mm		165007	UC-QS-6H	1
		8 mm		175611	UC-QS-8H	1
		10 mm		526475	UC-QS-10H	1
Blanking plug						
	M5 thread			3843	B-M5	10
				578404	NPQH-BK-M5-P10	10
	M7 thread			174309	B-M7	10
				578405	NPQH-BK-M7-P10	10
	G1/8 thread			3568	B-1/8	10
				578406	NPQH-BK-G18-P10	10
	G1/4 thread			3569	B-1/4	10
				578407	NPQH-BK-G14-P10	10
Plug						
	Blanking plug for tubing O.D.	4 mm		153267	QSC-4H	10
		6 mm		153268	QSC-6H	10
		8 mm		153269	QSC-8H	10
		10 mm		153270	QSC-10H	10
		3/16"		564785	QBC-3/16H-U	10
		1/4"		564786	QBC-1/4H-U	10
		5/16"		564787	QBC-5/16H-U	10
		3/8"		564788	QBC-3/8H-U	10

1) Packaging unit.

Accessories

Ordering data		Part no.	Type	
Designation				
Mounting				
	For DIN rail	526032	CPX-CPA-BG-NRH	
	Mounting (for supply plate)	534416	VMPA-BG-RW	
	Mounting (for sub-base for proportional pressure regulator valve)	558844	VMPA-BG	
	Mounting (for sub-base for soft start/quick exhaust valve)	8161011	VMPA-BG-P5	
User documentation				
	MPA pneumatic components	German	534240	MPA-S-DE
		English	534241	MPA-S-EN
	Description of MPA electronic components (pneumatic modules, pressure sensors, proportional pressure regulators, etc.)	German	562112	MPA-Electronics-DE
		English	562113	MPA-Electronics-EN